

boat

PARTYPAL 700

USER MANUAL





USER MANUAL

Thank you for purchasing boAt PartyPal 700. You are now just a step away from the realm of pure audio bliss. Please follow this user manual carefully in case of any doubts and difficulties that arise. Please note that playtime will vary depending on the selected volume level/light mode/Disco mode. You can stay plugged into the sound via Bluetooth wireless technology, USB, TF Card, and AUX wire compatibility. This portable party speaker has been designed with a smooth interface that requires minimum efforts.

COMPONENTS LIST

- 1x boAt PartyPal 700
- 1x UHF Wireless Microphone
- 1x Audio Cable
- 1x User Manual
- 1x Power Cable
- 1x Warranty Card

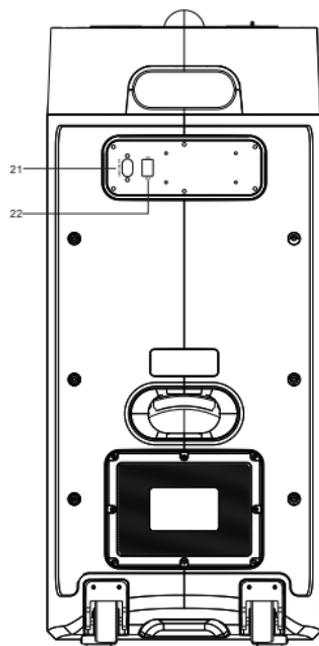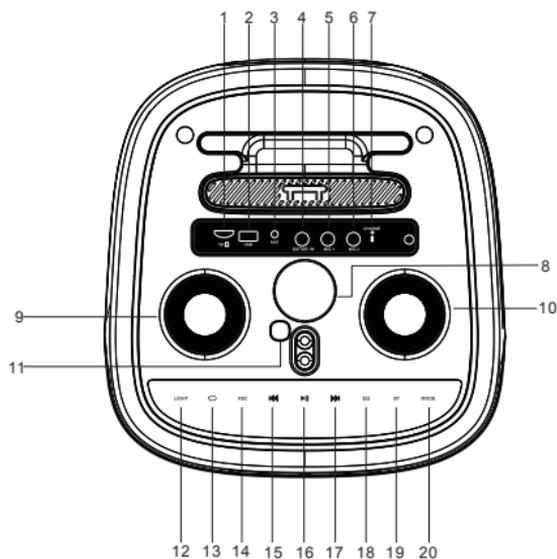

PRODUCT OVERVIEW

S.no	Port/Button	Function
1.	TF Card Input	Insert the TF card in this slot.
2.	USB Input	Insert the USB flash drive in this slot.
3.	AUX Input	Insert the AUX cable over here.
4.	Guitar Input	Insert the guitar cable here.
5.	Mic Input 1	Insert the microphone 1 cable here.
6.	Mic Input 2	Insert the microphone 2 cable here.
7.	Charging Indicator	Charging status LED.
8.	Disco Ball Light	Disco Ball Light Effect.
9.	Mic Volume/Mic Reverb /Guitar Volume knob	Turn the knob towards the right (clockwise direction) to increase the volume and turn the knob to the left (anti-clockwise direction) to decrease the volume.
10.	Master Volume/Treble /Bass Knob	Short press to switch between Volume/Treble/Bass functions. Turn the knob towards the right (clockwise direction) to increase the volume and turn the knob to the left (anti-clockwise direction) to decrease the volume.
11.	Disco ball button	Short press the button to switch to disco light mode. Long press the button to turn the Disco lights on/ off.
12.	LED Mode Button	Short press the button to switch to LED effect mode. Long press the button to turn the LED light effect on/off.
13.	Repeat Button	Short press the repeat button to choose all or one, only in USB and TF card mode.
14.	Record button	Short press to start recording. Short press again to stop recording and to play all the recordings; long press to directly play the recorded files from the USB flash drive /TF card.
15.	Previous Track	Short press to return to the previous track. (not applicable in AUX mode).
16.	Play/Pause Button	Short press to play/pause music (not applicable in AUX mode). Long press for 2 seconds to activate the mic priority function.
17.	Next Track	Short press to skip to the next track (not applicable in AUX mode).
18.	EQ Button	Short press to switch EQ modes between MUSIC(NOR) /Party(PAR)/POP(POP)/Rock (ROC) /Jazz (JAZ). Long press 6s to activate reset function-Clear BT history, switch EQ back to Normal-Music mode, reset Treble/Bass level back to 0, reset Volume level back to 10.
19.	BT Button	Short press to go back to BT mode, long press to disconnect BT mode. Press and hold for 2 seconds and release the button to reconnect with the previously connected device.

20.	Mode Button	Short press to change the connectivity mode (BT/AUX /USB/TF Card). Long press to turn on/off TWS function.
21.	AC Input	Connect the power cable over here.
23.	Power Switch	Switch the speaker on and off.

OPERATIONAL INSTRUCTIONS

POWER ON/OFF

Use the power switch to turn the speaker on or off.

If no device is paired with the speaker within 20 minutes after powering it on, the speaker will automatically turn off to save power.

Note: Please make sure to switch the button to "OFF" position when the speaker is not in use, in order to save power.

CHANGE CONNECTIVITY MODE

Short press the Mode button on the speaker to switch between Bluetooth, USB, Micro SD/TF card, and AUX connectivity modes.

Note: The speaker will automatically switch to USB, TF or AUX mode when a USB flash drive, TF card, or AUX cable respectively has been inserted.

Alternatively, you can short press the "Mode" button repeatedly to switch to the desired mode.

BLUETOOTH FUNCTION

PartyPal 700 supports music playback via wireless connection to a smartphone or other compatible devices.

Note: Compatibility with all commercially available devices cannot be guaranteed.

BLUETOOTH PAIRING

- Switch on the speaker with the power switch.
- Short press the Mode or BT button on the control panel until the LED displays BT to indicate that the speaker is in Bluetooth pairing mode.
- Activate the Bluetooth on your smartphone and search for "PartyPal 700" to connect.
- Select "PartyPal 700" from the list of available devices, if prompted for a passkey, enter "0000".
- Congratulations! PartyPal 700 speaker is now connected to your phone via Bluetooth.

- The ✕ on the LED display will stop flashing and remain constant when the two devices are paired.
- Once paired, you can start playback from the external device.

Note:

- PartyPal 700 remembers previously connected devices. Once switched on, the speaker automatically reconnects to the previously connected devices within the working range.
- If pairing is unsuccessful, please remove "PartyPal 700" from the list of paired devices on your phone, bring the phone closer to the speaker and try pairing again.
- If there is no connection for 20 minutes, the speaker will turn off automatically.

LED EFFECTS

After switching on the speaker, short press "LED MODE" button on the control panel to switch between the 7 LED modes.

The operation cycle is as follows-

LED Mode 1 ➔ **LED Mode 2** ➔ **LED Mode 3** ➔ **LED mode 4** ➔ **LED mode 5** ➔ **LED mode 6** ➔ **LED mode 7** ➔ **LED Mode 1**

- 1.LED Mode1 to LED Mode6: Screen display remains continuously on and shows different LED light effects.
- 2.LED Mode7: Screen display remains continuously on and the LED light effects turn off.
- 3.The speaker will power on in the same LED mode that was active when it was powered off, ensuring a consistent experience each time.
3. LED Mode Switch On/Off: Long press the LED mode button to turn off the screen display and LED lights. The screen display will activate for 10 seconds only to show the volume level change, mic volume, other features, etc. To turn all the LEDs on, long press the LED mode button.

Recording function

- After turning on the speaker, insert a flash drive or TF card into the correct input slot. Short press the REC button on the control panel to start recording the microphone voice and music.
- Short press the REC button to stop recording and to play all the recordings. Short press the REC button again to stop playing the recording and switch to USB or TF card Mode.
- Long press the REC button to play the recordings from the USB flash drive or TF card.

TWS FUNCTION

If you have two PartyPal 700 speakers, you can activate the TWS function which allows you to pair the two speakers together and obtain stereo audio reproduction (the speakers will reproduce the same audio at the same time).

Note: In order to use the TWS function, the two speakers must have a maximum distance of about 5 meters from each other in open spaces.

ACTIVATING TWS FUNCTION

Make sure the speakers are not paired with any external devices.

Turn on the two PartyPal 700 speakers you want to pair and select Bluetooth mode (shown as BT on the LED display).

Once the speakers are in Bluetooth Mode and your main speaker is connected to your Bluetooth device, long press the Mode button to activate TWS on the main speaker until the speaker emits a tone indicating that it has entered TWS pairing mode. you can now playback audio through the speaker.

Once TWS is activated, the speakers will automatically pair with each other if Turned on at the same time.

Long press the "Mode" button to deactivate the TWS mode and unpair the speakers.

Note:

Once the two units execute TWS function, they automatically get paired again if next time they are turned on within the effective range.

AUX MODE

- Connect one end of the appropriate cable to the 3.5mm AUX input of the speaker and the other end to the external device. The speaker will automatically switch to AUX mode.
- Alternatively, short press the "Mode" button repeatedly to switch to AUX connectivity mode.
- Once connected, you can start playback directly from the connected external device.
- Ensure the connected device is producing an audio signal, then adjust the volume of the speaker by using the Volume Knob or from the connected device.

Note: In AUX mode it is necessary to carry out all music-playing-related function directly from the connected external device instead of the speaker buttons.

MICROPHONE CONNECTION

Step 1: Slide the "On/Off" button to turn the wireless microphone on/off and connect it to the speaker.

Step 2: You can also connect up to 2 separate wired microphones to the speaker (not provided). To connect a wired microphone, turn on the power and insert the mic wire into the microphone input port on the speaker. Long press 3 seconds to turn the mic on and off.

Step 3: Long press the "Play/Pause" button to activate the microphone priority function which allows you to speak with higher volume and decreases the volume of the track being played when the microphone is used.

Note:

You can also connect two wireless microphones to the speaker- one wireless microphone is provided with PartyPal 700, while the second wireless microphone can be purchased separately. It must be a boAt wireless microphone, compatible with PartyPal 700.

GUITAR CONNECTION

PartyPal 700 features a guitar jack which can be used for attaching an electric guitar.

USB/MICRO SD/TF CARD MODE

Switch on the speaker and insert the USB flash drive/Micro SD/TF card (containing songs in the MP3 format). The speaker will switch to USB/TF card mode automatically.

To select the previous or next track, press the ◀◀ or ▶▶ button respectively.

To increase or decrease the volume, turn the volume knob on the control panel.

To Play or pause the music, press the ▶|| button.

Note:

The speaker will disconnect the Bluetooth connection to automatically play music from the USB flash drive or TF/micro SD card. You can activate Bluetooth mode again by pressing the BT button on the control panel.

Compatibility with all commercially available storage devices cannot be guaranteed.

External USB devices that require a voltage rating greater than 5V and a current rating greater than 200mA are not supported.

If you use a USB extension cable, the connected storage device may not be recognized or function properly.

Use only storage devices formatted with FAT16/FAT32 file system.

RESET FUNCTIONALITY

Perform the reset function if the speaker doesn't turn off or doesn't respond properly.

Step: Long press to EQ function on the speaker control panel to clear the Bluetooth Connection history of the speaker. This will also reset the volume, EQ mode, treble & bass levels.

If the device is still not working, please turn off the power button & turn it back on.

DISCO BALL LIGHTING FUNCTION

Short press the Disco ball light button to switch the disco lights mode, long press the button to turn the Disco lights on/ off.

CHARGING

PartyPal 700 has a built-in rechargeable battery that can be recharged using Power supply.

Connect one end of the provided charging cable to charging input and the other end to the power supply.

Turn off the speaker before charging. During charging, the LED indicator turns red, once the speaker is fully charged, the LED indicator will turn blue.

When the battery is below 20%, the speaker will make a low battery tone every 5 minutes.

Note:

Before use, it is recommended to fully charge the battery.

When the speaker emits a low battery warning, please charge it promptly.

After the speaker shuts down due to low battery, be sure to turn off the power switch and charge it promptly.

Please avoid using the speaker while it is charging, as this may decrease the battery's performance.

If the battery is completely discharged, then recharge the speaker for at least an hour before using it.

If the speaker is not used for a long time, please charge it every 3 months.

SPECIFICATIONS

Bluetooth Version	v5.3
Compatibility	USB, TF Card, Wired Microphone Input, AUX, Guitar IN, Recording, Bluetooth, TWS Function, UHF wireless microphone
Working Range	10m (without barrier)
Driver Size	8"high quality speaker driver*2 +2.5" tweeter *2
Frequency	45Hz-20kHz
Input	AC100-240V
Maximum Output Power	300W RMS
Battery Capacity	8000mAh@11.1V
Dimensions	748*335*320mm

WARNINGS

- Please keep this product safe from coming in contact with any liquid.
- Don't use/store this product in extreme temperatures.
- Please keep the product away from anything that generates heat, such as radiators, stoves, etc.
- In order to have hearing protection and an extended speaker life, avoid listening to songs on maximum volume.
- Don't try to dismantle / repair the product on your own.

