




AIRDOPES 138 GEN 2

SMART GUIDE

PACKAGE CONTENTS



PRODUCT LABELLING

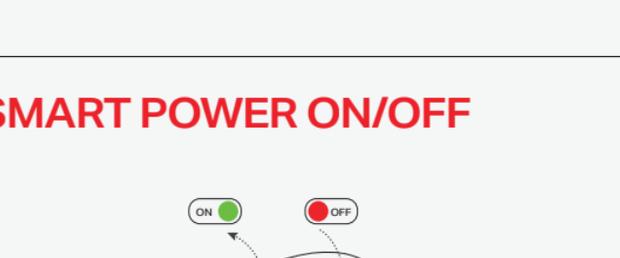

MFB
(MULTI-FUNCTION BUTTON)



SMART POWER ON/OFF




Insta Wake N'Pair (IWPT™)



MANUAL POWER ON/OFF

Long Press (5s)
Long Press (10s)

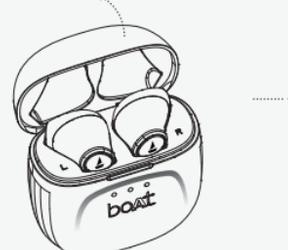


Press and hold both MFBs for 5 seconds and release




Press and hold one MFB at a time for 10 seconds and release




BLUETOOTH PAIRING

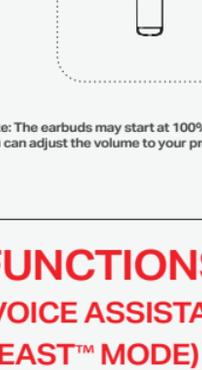

1

 

2

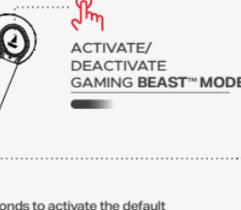


Choose "Airdopes 138 Gen 2" to Connect



FUNCTIONS (CALL/MUSIC)

Press 1 Time
Press 2 Times
L Left Earbud
R Right Earbud

TOUCH FUNCTIONS

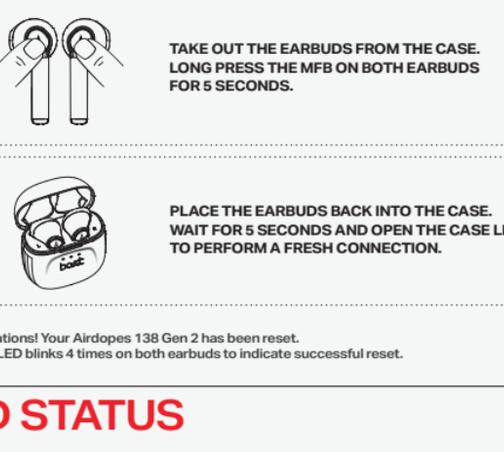

Note: The earbuds may start at 100% volume level when first switched on. You can adjust the volume to your preferred level using the volume controls on the media device.




FUNCTIONS (VOICE ASSISTANT/ BEAST™ MODE)

Long Press (3s)
L Left Earbud
R Right Earbud



ACTIVATE
GOOGLE VOICE ASSISTANT/SIRI

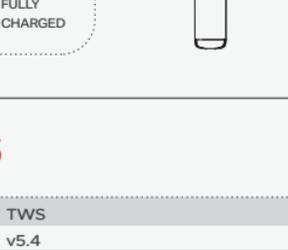


DEACTIVATE/
DEACTIVATE GAMING BEAST™ MODE

Voice Assistant: Long press the MFB on the left earbud for 3 seconds to activate the default smart voice assistant (Google Voice Assistant/Siri).
BEAST™ Mode: Long press the MFB on the right earbud for 3 seconds to activate BEAST™ mode. Long press the MFB on the right earbud for 3 seconds again to de-activate BEAST™ mode.


Note:
• boAt Signature Sound remains on by default.
• If the voice assistant doesn't get triggered, then the functionality has to be first enabled via your media device settings.
• The earbuds may start at 100% volume level when first switched on. You can adjust the volume to your preferred level using the volume controls on the media device.



RESET AIRDOPES

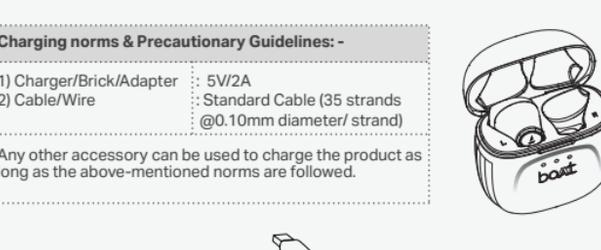

FORGET THE DEVICE FROM THE LIST OF PAIRED DEVICES.

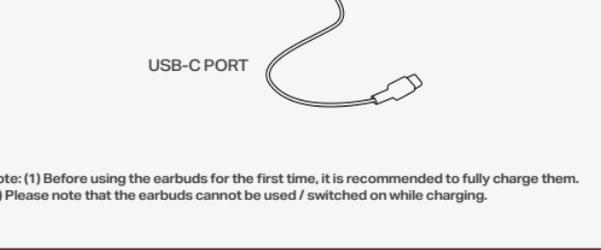

TAKE OUT THE EARBUDS FROM THE CASE. LONG PRESS THE MFB ON BOTH EARBUDS FOR 5 SECONDS.



PLACE THE EARBUDS BACK INTO THE CASE. WAIT FOR 5 SECONDS AND OPEN THE CASE LID TO PERFORM A FRESH CONNECTION.

Congratulations! Your Airdopes 138 Gen 2 has been reset.
Note: Red LED blinks 4 times on both earbuds to indicate successful reset.



LED STATUS GUIDE

LOW BATTERY (<30 %): LED1 REMAINS SOLID ON FOR 3 SECONDS	LOW BATTERY
CHARGING: LED BLINKS 1 TIME EVERY SECOND	CHARGING
FULLY CHARGED (100%): ALL LEDs REMAIN SOLID ON	FULLY CHARGED

<10%: RED LED BLINKS 3 TIMES WITH TONE PROMPT EVERY 5 MINUTES	LOW BATTERY
SOLID RED LED	CHARGING
100%: RED LED TURNS OFF	FULLY CHARGED

SPECIFICATIONS

Headphone Type	TWS
Bluetooth Version	v5.4
Music Playtime	Up To 70 Hours (At 60% Volume)
Number Of ENx™ Equipped Mics	2
IWP™ Tech	Yes
BEAST™ Mode	Yes; 45ms Low Latency
Transmission Range	10 m
Driver Size	13 mm*2
Supported Codec	AAC/SBC
Frequency	20 Hz-20 kHz
Battery	650 mAh (Case); 40 mAh*2 (Earbuds)
ASAP™ Charge	Yes; 10 mins charge = 300 mins playtime
Charging Time	35 mins (Earbuds); 1hr 45 mins (Case)
Charging Interface	USB Type-C
Water Resistance	IPX4

CHARGING GUIDELINES

Charging norms & Precautionary Guidelines: -
1) Charger/Brick/Adapter : 5V/2A
2) Cable/Wire : Standard Cable (35 strands @0.10mm diameter/ strand)

Any other accessory can be used to charge the product as long as the above-mentioned norms are followed.

Note: (1) Before using the earbuds for the first time, it is recommended to fully charge them. (2) Please note that the earbuds cannot be used / switched on while charging.

LEARN MORE ABOUT YOUR PRODUCT

Scan this QR Code to Access Your Product's Manual, FAQs, and Warranty Information