

AIRDOPES BEAT

SMART GUIDE


PACKAGE CONTENTS



PRODUCT LABELLING




SMART POWER ON/OFF

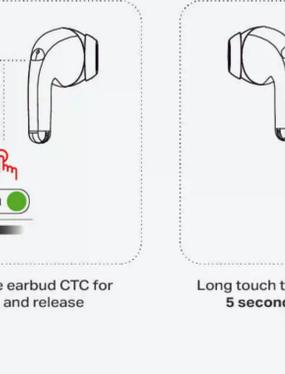


MANUAL POWER ON/OFF

Long Touch (3s)
Long Touch (5s)

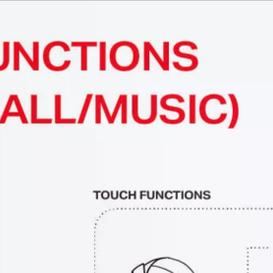

Long touch the earbud CTC for 3 seconds and release

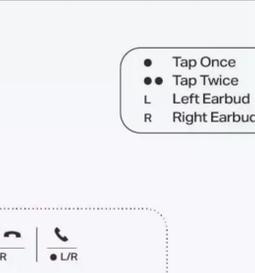

Long touch the earbud CTC for 5 seconds and release



BLUETOOTH PAIRING



FUNCTIONS (CALL/MUSIC)

Tap Once
Tap Twice
L Left Earbud
R Right Earbud



Note: The earbuds may start at 100% volume level when first switched on. You can adjust the volume to your preferred level using the volume controls on the media device.




FUNCTIONS (VOICE ASSISTANT/BEAST™ MODE)

Long Touch (3s)
L Left Earbud
R Right Earbud



ACTIVATE GOOGLE VOICE ASSISTANT/SIRI

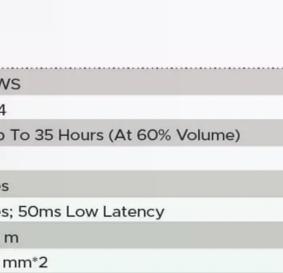


ACTIVATE/DEACTIVATE GAMING BEAST™ MODE

Voice Assistant: Long touch the CTC on the left earbud for 3 seconds to activate the default smart voice assistant (Google Voice Assistant/Siri).
BEAST™ Mode: Long touch the CTC on the right earbud for 3 seconds to activate BEAST™ mode. Long touch the CTC on the right earbud for 3 seconds again to de-activate BEAST™ mode and return to standard Music mode.


Note: 1. boAt Signature Sound remains active by default. 2. The earbuds may start at 100% volume level when first switched on. You can adjust the volume to your preferred level using the volume controls on the media device.



RESET AIRDOPES

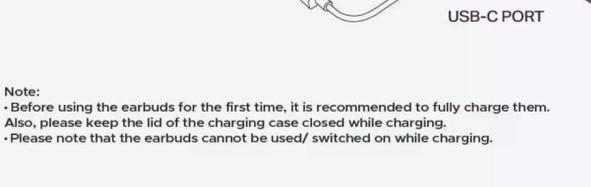

FORGET THE DEVICE FROM THE LIST OF PAIRED DEVICES.

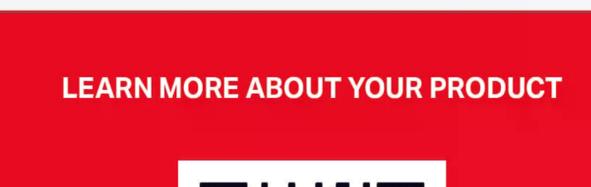

TAKE OUT THE EARBUDS FROM THE CASE. LONG TOUCH THE CTC ON BOTH EARBUDS FOR 5 SECONDS. RED LED BLINKS 5 TIMES ON BOTH EARBUDS TO INDICATE SUCCESSFUL RESET.



PLACE THE EARBUDS BACK INTO THE CASE & CLOSE THE LID. WAIT FOR A FEW SECONDS & OPEN THE CASE LID TO PERFORM A FRESH CONNECTION.

Congratulations! Your Airdopes Beat has been reset.



LED STATUS GUIDE



<20% : WHITE LED BLINKS 5 TIMES WHEN CASE LID IS OPENED

LOW BATTERY

BLINKING WHITE LED

CHARGING

SOLID WHITE LED

FULLY CHARGED

RED LED BLINKS 3 TIMES EVERY 30 SECONDS WITH LOW BATTERY TONE PROMPT EVERY 5 MINUTES

LOW BATTERY

SOLID RED LED

CHARGING

LED TURNS OFF

FULLY CHARGED

SPECIFICATIONS

Headphone Type	TWS
Bluetooth Version	5.4
Music Playtime	Up To 35 Hours (At 60% Volume)
Number Of ENx™ Equipped Mics	2
IWP™ Tech	Yes
BEAST™ Mode	Yes; 50ms Low Latency
Transmission Range	10 m
Driver Size	13 mm*2
Supported Codec	AAC/SBC
Frequency	20 Hz-20 kHz
Battery	30 mAh x 2 (Earbuds); 300 mAh (Case)
ASAP™ Charge	Yes, 10 Mins Charge= 120 Mins Playback
Charging Time	Up to 1.5 Hours (Case); 40 Mins (Earbuds)
Charging Interface	USB Type-C
Water Resistance	IPX4

CHARGING GUIDELINES

Charging norms & Precautionary Guidelines: -

1) Charger/Brick/Adapter : 5V/2A
2) Cable/Wire : Standard Cable (35 strands @0.10mm diameter/ strand)

Any other accessory can be used to charge the product as long as the above-mentioned norms are followed.

USB-C PORT

Note:
• Before using the earbuds for the first time, it is recommended to fully charge them.
• Also, please keep the lid of the charging case closed while charging.
• Please note that the earbuds cannot be used/ switched on while charging.

LEARN MORE ABOUT YOUR PRODUCT



Scan this QR Code to Access Your Product's Manual, FAQs, and Warranty Information