

**ROCKERZ
421**



ROCKERZ 421


Thank you for choosing the boAt Rockerz 421. This manual is meant to guide you through to the shores of Nirvana without much difficulty. Please think of this manual as your map. Knowledge of Bluetooth and device connection is essential for steering this boAt. Therefore, we strongly advise that this manual is thoroughly read before use, and referred to in times of difficulty.



PACKAGE CONTENTS

- 1 x boAt Rockerz 421
- 1 x USB Type-C Charging Cable
- 1 x AUX Cable
- 1 x Manual
- 1 x Warranty Card

PRODUCT OVERVIEW

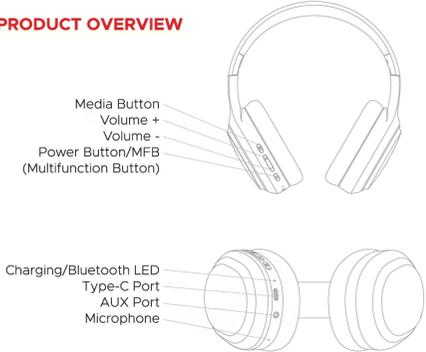

Power On: Press and hold the MFB (Multifunction Button) for 3 seconds. The blue and red LEDs flash alternatively accompanied by a voice prompt.

Power Off: Press and hold the MFB for 4 seconds. Red LED blinks once to indicate the device getting switched off.

BLUETOOTH CONNECTIVITY

1. Turn on the Bluetooth functionality in your phone and switch on Rockerz 421 by long pressing the MFB for 3 seconds
2. Then, click on the headphones 'Rockerz 421' from the list of available devices after search
3. Once confirmed, the headphone and phone get connected via Bluetooth indicated by slowly flashing blue LED

Note: If there's a connection history between the phone and the headphone, then they will automatically get reconnected in a working range whenever the headphone gets switched on.

Front

BASIC FUNCTIONS

Play: Short press the Media Button once to play
Pause: Short press the Media Button once to pause
Volume Up: Press the Vol + button in steps to increase volume
Volume Down: Press the Vol - button in steps to decrease volume
Next Track: Press and hold Vol + button for 1 second to skip to next track
Previous Track: Press and hold the Vol - button for 1 second to return to previous track
Answer Incoming Calls: Short press the Media Button once
Hangup Ongoing Calls: Short press the Media Button once
Reject Calls: Double press the Media Button
Voice Assistant/Siri: Double press the Media Button

BEAST™ Mode for Gaming: Double press the MFB/Power Button to activate BEAST™ Mode for low latency playtime. Double press the MFB/Power button again to switch back to Music Mode.

Note: If the voice assistant doesn't get triggered, then the functionality has to be first enabled via your media device settings.

CHARGING

- Connect one end of the provided cable to the USB Type-C port on the headset and the other end to a wall adapter or laptop
- While charging the indicator LED turns into steady red
- When the headphone is fully charged, LED turns into steady blue
- Use only authorized/company chargers for the headset, as unauthorized ones may damage the same and invalidate the warranty on the headset as well
- The headphones cannot be utilized for listening purposes while it is charging mode

Note: When the headphones are in low power state, then that gets indicated by slowly flashing red LED.

ENx™ TECH

Our ENx™ tech algorithm cancels out the background noise so that you can be heard crystal clear via voice calls. One need not activate ENx™ as the mic is equipped with the same and activated by default.

Deliver your voice without interruptions anywhere – traffic, railway stations, airports, work space; literally anywhere!

RESET

When the headphone is in the 'ON' state, press and hold the Vol + and Vol - buttons simultaneously for 5 seconds
Note: Reset should be done in pairing mode.

OTHER FUNCTIONS

- If there's no connection established when the Bluetooth is switched on then the device powers off automatically after a while
- If you receive an incoming call during playing music, the music automatically disconnects. When the call is done and disconnected, the music starts to play automatically from where it left.

ANOMALIES & SOLUTIONS

- A. Mobile can't search the headset**
- Check if the Bluetooth headset is powered on or off (When powered on, the LEDs blink with red and blue colours alternatively)
 - If it is powered on and the device still can't connect, then please reboot the Bluetooth device and the phone
- B. After connecting the headset with the phone, disconnection or noise occurs**
- This may be due to the low power of the headset. Please charge the Bluetooth headset
 - There might be obstruction between the headset and the phone or the distance between them exceeds the maximum range for signal reception
- Voice Assistant Support doesn't respond**
- If the voice assistant doesn't get triggered, then the functionality has to be first enabled via your media device's settings.

SPECIFICATION:

Headphone Type	Bluetooth Headphones
Driver Size	40mm*2
HD Sound	Yes
THD	≤5% at 1kHz
Frequency Range	20Hz-20 kHz
SNR	≥75dB
Bluetooth Version	V5.4
Bluetooth Profile	A2DP, AVRCP, HFP, HID, AVCTP, AVDTP, SPP
Bluetooth Range	10m
Battery Capacity	400mAh
Playing Time	Up to 60 Hours (at 60%vol approx.)
Charging Time	2HRS
Standby Time	>300HRS
Charging Interface	USB Type-C
Mic Sensitivity	-42dB±3dB
Charging Voltage	380mAh @5V
BEAST™ Mode	Yes
ENx™ Tech	Yes

SAFETY PRECAUTIONS

- This is not a toy. The children are advised to use this under adult supervision.
- Avoid exposing the device to extremely hot or cold temperatures.
- Avoid using the headphone for listening to full volumes to protect from hearing damage.
- Please do not use the device under thunder storms.
- Don't dismantle the product in any way.
- Please don't clean the product using oily volatile liquid.

Back

Charging norms & Precautionary Guidelines: -

1) Charger/Brick/Adapter	: 5V/2A
2) Cable/Wire	: Standard Cable (35 strands @0.10mm diameter/ strand)

Any other accessory can be used to charge the product as long as the above-mentioned norms are followed.