




# ROCKERZ 411 SMART GUIDE

## PACKAGE CONTENTS



## PRODUCT LABELLING

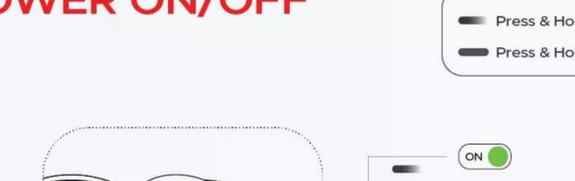

VOLUME UP/  
NEXT TRACK  
BUTTON

POWER  
BUTTON/MFB  
(Multi-Function  
Button)

BEAST™ MODE  
QUICK SWITCH  
BUTTON


USB TYPE-C  
CHARGING  
PORT

VOLUME DOWN/  
PREVIOUS TRACK  
BUTTON



## POWER ON/OFF

- Press & Hold (3 Sec)
- Press & Hold (5 Sec)

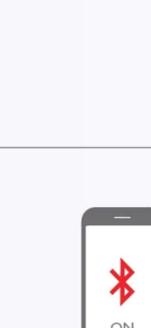


## BLUETOOTH PAIRING



Choose "ROCKERZ 411" to Connect



## DUAL PAIRING

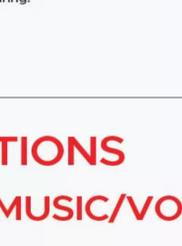

Pair Rockerz 411 with your first media device via Bluetooth.

Turn off the Bluetooth on the first device. Switch on the Bluetooth on your second media device to pair with Rockerz 411.

Finally, switch on the Bluetooth of the first media device again.

Congratulations! Your Rockerz 411 is now connected to both devices successfully. You can also switch between the two connected devices.

Note: If the headphones are not connected, try connecting the first device manually once again to activate dual pairing.



## FUNCTIONS (CALL/MUSIC/VOLUME)

- Short Press
- Double Press
- Press & Hold (1s)
- Press in Steps




Note: The headphones may start at 100% volume level when first switched on. You can adjust the volume to your preferred level using the volume controls on the headphones.



## FUNCTIONS (BEAST™ MODE / VOICE ASSISTANT)

- Press Twice
- Short Press

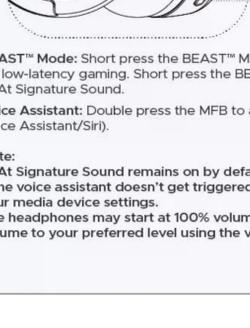

ACTIVATE GOOGLE VOICE ASSISTANT/SIRI

ACTIVATE/DEACTIVATE GAMING/BEAST™ MODE

BEAST™ Mode: Short press the BEAST™ Mode Quick Switch button to activate BEAST™ Mode for low-latency gaming. Short press the BEAST™ Mode Quick Switch button again to switch to boAt Signature Sound.

Voice Assistant: Double press the MFB to activate the default smart voice assistant (Google Voice Assistant/Siri).

Note:  
• boAt Signature Sound remains on by default.  
• If the voice assistant doesn't get triggered, then the functionality has to be first enabled via your media device settings.  
• The headphones may start at 100% volume level when first switched on. You can adjust the volume to your preferred level using the volume controls on the headphones.



## RESET ROCKERZ

### FORGET DEVICE



### PRESS AND HOLD THE VOLUME UP (+) AND VOLUME DOWN (-) BUTTONS ON THE RIGHT HEADPHONE SIMULTANEOUSLY FOR 4 SECONDS TO CLEAR THE LIST OF PAIRED DEVICES.



### PERFORM FRESH CONNECTION



Congratulations! Your Rockerz 411 has been reset.

Note: Purple LED flashes 3 times on the headphones to indicate successful reset



## LED STATUS GUIDE

	RED LED FLASHES FOR 1 SECOND WITH A TONE PROMPT		LOW BATTERY
	SOLID RED LED		CHARGING
	100% : LED TURNS OFF		FULLY CHARGED



## SPECIFICATIONS

Headphone Type	Bluetooth Headphones
Driver Size	40 mm*2
HD Sound	Yes
THD	≤3% @1kHz
Bluetooth Version	5.4
Bluetooth Profiles	A2DP, AVRCP, HFP, HID, AVCTP, AVDTP, SPP
Music Playtime	Up to 40 hours (at 60% volume)
Standby Time	>300 hours
ENx™ Tech	Yes
Mic Sensitivity	-42dB
BEAST™ Mode	Yes
Transmission Range	10 m
Signal-to-Noise Ratio	≥90dB
Frequency	20 Hz-20 kHz
Battery	430 mAh
Charging Time	Up to 2 hours
Charging Interface	USB Type-C
Charging Voltage	5V
Water Resistance	IPX4



## CHARGING GUIDELINES

### Charging norms & Precautionary Guidelines: -

1) Charger/Brick/Adapter: : 5V/2A

Any other accessory can be used to charge the product as long as the above-mentioned norms are followed.



Note: (1) Before using the headphones for the first time, it is recommended to fully charge them.  
(2) Please note that the headphones cannot be used / switched on while charging.



## LEARN MORE ABOUT YOUR PRODUCT



Scan this QR Code to Access Your Product's Manual, FAQs, and Warranty Information