



AAVANTE BAR **Azure Pro**

5.1 CHANNEL 550W

(with Wired Subwoofer and
Wireless Rear Satellite Speakers)

USER MANUAL

Thank you for choosing the boAt Aavante Bar Azure Pro as the audio source for your home. You are a step away from the realm of pure audio bliss. Stay plugged into the sound with an array of wired connections, USB port, and wireless Bluetooth v5.4 technology. This 5.1-Channel soundbar with a wired subwoofer provides balanced sound for movies, music, and even video games where you can experience cinematic sound that revolves around you. We recommend that this manual be carefully read for proper usage and referred to in case of difficulties.

COMPONENTS LIST

- Soundbar
- Wired Subwoofer
- AAA Batteries (2x)
- Warranty Card
- Wall-Mount Kit
- Wireless Rear Speakers (2x)
- Remote Control
- User Manual
- AUX Cable

SAFETY & WARNINGS

Caution

To reduce the risk of electric shock, do not dismantle the product and do not expose the apparatus to rain or moisture, The unit has no user-serviceable parts inside. Refer servicing to qualified personnel only

 The lightning flash within an equilateral triangle is intended to alert you to the presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute an electric shock to a person or persons.

 Important! This symbol alerts you to read and observe important warnings and instructions on the unit or in this manual.

Notice:

This appliance is not intended for use by persons (including children) with reduced physical sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Children should be supervised to ensure that they do not play with the appliance.

1. To prevent possible hearing damage, do not listen at high volume levels for long periods of time or a sudden high volume level.
2. Never use the device unsupervised! Switch off the device whenever you are not using it, even if not using it only for a short while.
3. The appliance is not intended to be operated by means of an external timer or separate remote controller system.
4. If the power supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
5. Before operating this system, check the voltage of this system to see if it is identical to the voltage of your local power supply.
6. The unit shouldn't be impeded by covering the ventilation opening with items such as newspaper, table-cloths, curtains etc. Make sure that there are at least 20 cm of space above & at least 5 cm of space on each side of the unit.
7. The apparatus must not be exposed to dripping or splashing. Don't place objects filled with liquids such as vases, bottles or humidifiers on the unit.
8. To prevent fire or shock hazard, don't expose this equipment to direct heat, rain, moisture or dust.
9. Do not place this unit near any water sources e.g. taps, bathtubs, washing machines or swimming pools, Ensure that you place the unit on a dry, stable surface.
10. Do not place this unit close to a strong magnetic field.
11. Do not place the unit on an amplifier or a receiver.
12. Do not place this unit in a damp area as the moisture will affect the life of electric components.
13. Do not attempt to clean the unit with chemical solvents as this might damage the finish. Wipe with a clean, dry or slightly damp cloth.

14. When removing the power plug from the wall outlet, always pull directly on the plug, never pull on the cord.
15. Depending on the electromagnetic waves used by a television broadcast, if a TV is turned on near this unit while it is also on, lines might appear on the LED TV. Neither this unit nor the TV is malfunctioning. If you see such lines, keep this unit well away from the TV set.
16. The mains plug is used to disconnect the device, the disconnected device should remain readily operable.

IMPORTANT SAFETY INSTRUCTIONS

1. Read these instructions. Keep these instructions. Follow all instructions. Heed all warnings.
2. Do not use this apparatus near water.
3. Clean only with a dry cloth.
4. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
5. Do not install near any heat sources such as radiators, heaters, stoves, or other devices (including amplifiers) that produce heat.
6. Do not ignore the safety measures of a polarized or grounding-type plug. A polarized plug has two blades with one wider than the other.
7. Protect the power cord from being walked on or pinched. Pay special attention to the positioning of cords, plugs, power sockets especially the point where they exit from the unit.
8. Only use attachments/accessories specified by the manufacturer.
9. Unplug this apparatus during lightning storms or when not in use.
10. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, for example, when the power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
11. The AC plug is used to disconnect the device, the disconnected device should remain readily operable in order to disconnect the apparatus from the AC power completely, the AC plug must be removed from the AC outlet completely.

UNPACKING AND SET UP

Remove the soundbar from the carton and remove **all** packing material from the soundbar. Save the packing material, if possible, in case the soundbar ever needs to be serviced or transported. The original carton and packing material are the only safe way to pack your soundbar to protect it from damage in transit.

•Remove any descriptive labels or stickers on the front or top of the cabinet. Do not remove any labels or stickers from the back or bottom of the cabinet.


•Place your soundbar on a level surface such as a table, desk, or shelf, convenient to an AC outlet, out of direct sunlight, and away from sources of excess heat, dirt, dust, moisture, humidity, or vibration.

•Unwind the line cord connecting the AC adapter and extend it to its full length.

CONTROLS AND CONNECTIONS


Get to know your soundbar:

(-) Button	Short press to return to the previous track Long press to decrease the volume
Mode Button	Short press in steps to choose among Bluetooth, HDMI(ARC), Optical, USB and AUX modes
(+) Button	Short press to skip to the next track Long press to increase the volume
Play/Pause Button	In Bluetooth mode, short press to play/pause and long press to disconnect/reconnect. In USB mode, short press to play/pause. In AUX mode, short press to mute/unmute.
Power Button	Short press for standby ON/OFF
USB Input	Connect the USB flash drive to the USB port on the soundbar

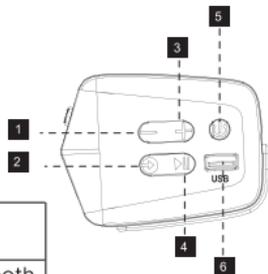


PORTS ON THE SOUNDBAR (REAR SIDE)

1. AUX IN
2. OPTICAL INPUT
3. HDMI (ARC) INPUT
4. SUBWOOFER INPUT
5. AC INPUT

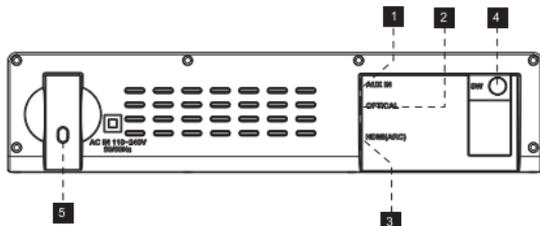

PORTS ON THE SURROUND SPEAKERS (REAR SIDE)

1. PAIR
2. OUTPUT: Connect the master to the slave surround speaker
3. DC IN: Power adapter plug input
4. LED INDICATOR

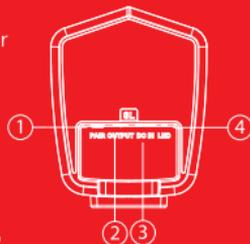


SET UP SURROUND SPEAKERS & PAIR WITH THE SOUNDBAR

1. Plug the soundbar into the main socket and press "POWER" button to unlock standby mode to turn to working status.
2. Power on the rear surround master speaker using a power adapter with its DC IN port. Its LED indicator will turn blue and blink slowly. Then, take out slave surround speaker AUX cable to connect to the master surround speaker using the output port.
3. The soundbar and wireless surround speakers will pair automatically within 5 seconds with a voice prompt indication and solid blue LED.

REMOTE CONTROL

1. Power Button: Standby mode for Power ON/OFF.
2. Mute/Unmute
3. EQ Mode: Short press the button to select among- POP, ROCK, JAZZ, CLASSICAL or COUNTRY EQ modes.
4. INPUT: Short press to switch among- Bluetooth, Optical, HDMI(ARC), USB, AUX input modes
5. Volume (+) : Increase the volume
6. Volume (-) : Decrease the volume
7. Next Button: In Bluetooth mode, short press to skip to the next song; In USB mode, short press to skip to the next song and long press to fast forward.
8. Previous Button: In Bluetooth mode, short press to return to the previous song; In USB mode, short press to return to the previous song and long press to rewind.
9. Reset/Play-Pause Button: In Bluetooth or USB mode, short press to play/pause; In AUX mode, short press to mute/unmute and long press the button to reset the soundbar and clear Bluetooth history.
10. 2.1/5.1: Switch through 2.1 or 5.1 channels of sound.
11. \mathcal{C} :Short press to ONE/ALL/RAN/FOD/OFF- One is to repeat one song; All is to repeat all songs; RAN is random; FOD is to read and play all songs in the files; OFF is turn off repeat mode (only applicable in USB mode)
12. BASS+ : Short press to increase bass
13. BASS- : Short press to decrease bass
14. TREB+ : Increase front and center speaker treble
15. TREB- : Decrease front and center speaker treble
16. R.VOL+ : Increase the surround speaker treble volume
17. R.VOL- : Decrease the surround speaker treble volume

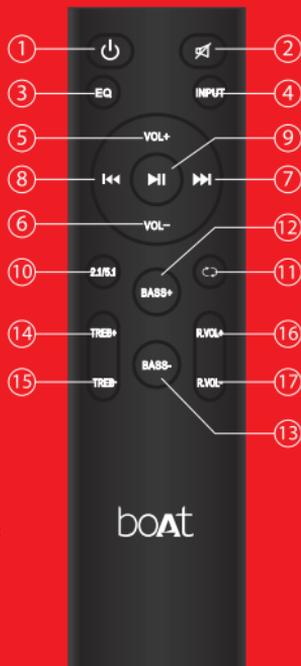


REMOTE CONTROL BATTERY SETUP AND REPLACEMENT

Please insert the batteries as shown below
Step 1: Remove the battery compartment cover.

Step 2: Insert two AAA batteries according to the polarity markings (+ / -) inside the compartment. Make sure the batteries are correctly aligned and properly pushed into place.

Step 3: Close the battery compartment.

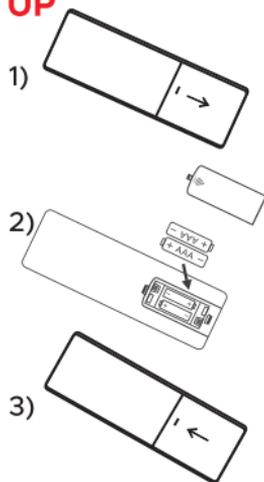

PRECAUTIONS WHEN USING BATTERIES:

- Do not use old and new batteries together.
- The batteries must not be exposed to excessive heat such as sunshine, fire etc.
- Do not use different types of batteries together.
- Install the batteries correctly as per the polarity markings to prevent battery leakage.
- Remove the batteries from the remote if you do not intend to use it for a long time.
- When discarding used batteries, follow the guidelines for recycling and disposal of batteries that apply in your local area.
- Keep batteries away from children and pets.


OPERATING RANGE OF THE REMOTE CONTROL

- When the unit is mounted on a wall, point the remote control at the remote-control sensor on the panel. The provided remote control allows the unit to be operated from a distance.
- Even if the remote control is operated within the effective range of 26.2 feet (8m), remote control operation may be impossible if there are any obstacles between the unit and the remote control.
- If the remote control is operated near other products which generate infrared rays, or if other remote-control device using infrared rays are used near the unit, it may operate incorrectly. Conversely, the other products may operate incorrectly.



INSTALLATION - FREE STANDING

This soundbar can sit free-standing on a surface, or it can be mounted on a wall.

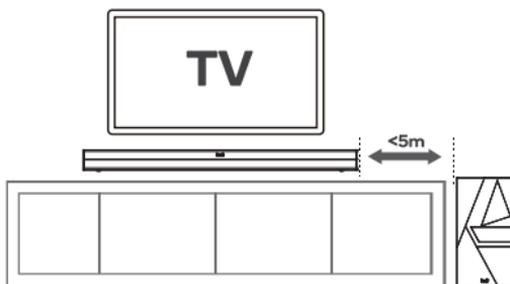

- Place the soundbar horizontally on a flat surface such as a TV unit or shelf and align it centrally with the TV screen.
- Allow some space between the speaker and the wall.
- Don't place it inside a cabinet or a walled shelf. Follow this guidance for the best sound output and good airflow around the soundbar.


INSTALLATION – MOUNT ON THE WALL

Wall mounting instructions are as follows:


- If you don't feel confident to correctly and securely wall-mount the soundbar, seek the assistance of an experienced person or professional.
- Install the speaker on a vertical, fast, reinforced area of the wall.

For plaster walls, it is recommended to screw into wall studs for greater security.


- For optimum performance, allow at least 25mm/1" distance between the soundbar and the TV.

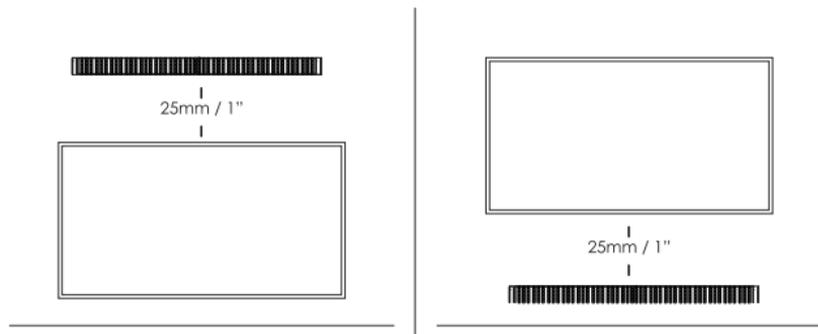

- Measure 24.41 inches (620mm) and drill 2 parallel holes (1/4 inch each) in the wall.
- Firmly apply a dowel into each hole in the wall (dowel is required only for solid wall).

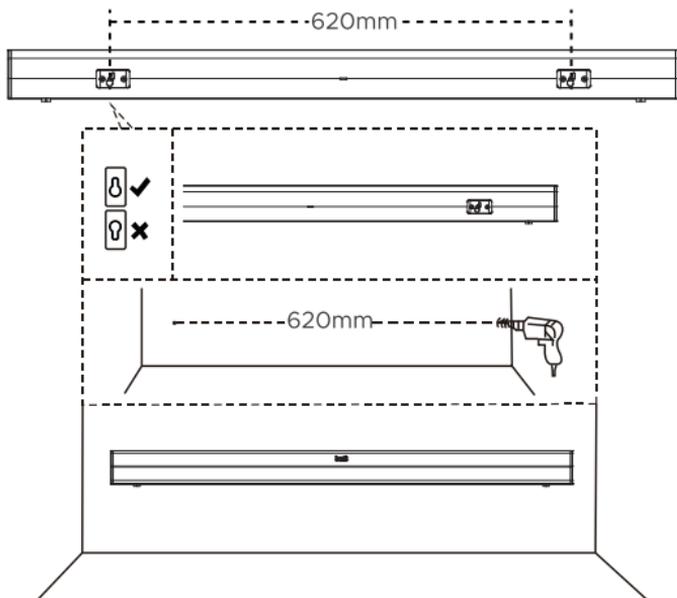


- Attach the soundbar to the screws on the wall and push the soundbar to the right 1/8 inch each to lock.

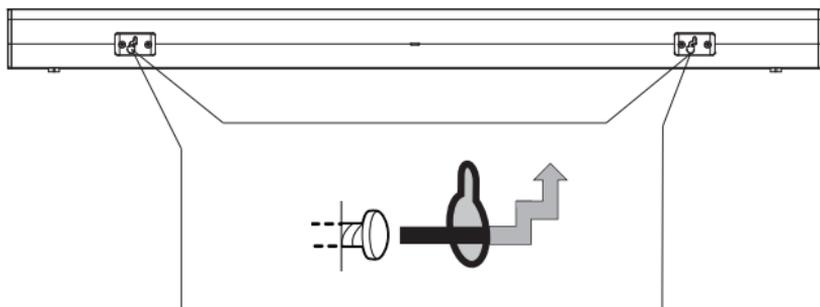

1. Make 2 holes in the wall with the distance of the two surround speakers you need to mount.
2. Put the plastic anchors onto the wall and secure the screws to the plastic clip. Do not tighten the screws all the way making sure to leave some space.


Anchor

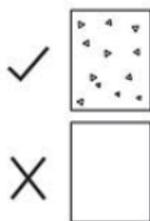

Solid wall (i.e., solid brick, solid concrete, solid wood)

Drywall, plastered wall etc.

3. Attach the 2 EVA pads onto the wall mount bracket. This will make sure that there is enough space between the wall and the surround speakers' outlet, minimum 15mm.
4. Once the screws are securely fastened, hang the surround speakers over by inserting the screws into the wall mount bracket.

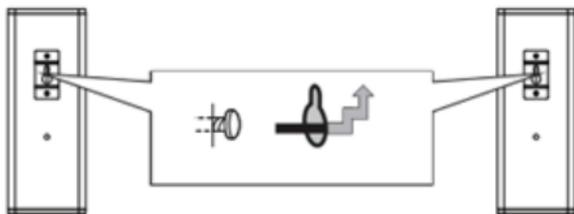

GENERAL OPERATION

Plug in the power cable of the soundbar to an external power socket; the unit goes into standby mode.

Short press the Power Button on the remote or soundbar control panel to turn on the soundbar.

① **AUX:** Use the provided 3.5mm AUX cable to connect external audio sources to the soundbar. Press the Input button on the remote control to select AUX mode.

② **HDMI(ARC):** Use an HDMI cable to connect the soundbar to your HDMI(ARC) enabled device. Press the Input button on the remote control to select HDMI(ARC) mode.

③ **OPTICAL:** Use an Optical cable to connect the soundbar to your Optical device. Press the Input button on the remote control to select OPT mode.

④ **USB:** Insert your USB drive into the USB port on the soundbar. The soundbar goes automatically under USB mode. You can also press the Input button on the remote control to switch to USB mode.

⑤ **Bluetooth:** Press the Input button on the remote control to enter Bluetooth mode. Turn on the Bluetooth functionality on your media device, search for "Aavante Bar Azure Pro" and select the same to establish pairing.

INPUT MODES

Mode	Description
HDMI (ARC)/Optical	Audio from TV (via HDMI ARC port or OPTICAL jack)
Bluetooth	Sound from a Bluetooth-connected device
USB	Sound from a USB storage device
AUX	Sound from a connected device (via AUX port)

AC POWER

- Make sure the power supply is correct and never handle the power cord or its plug with wet hands when plugging into or unplugging from an outlet.
- Ensure the main power switch is in OFF state before connecting the power cord to the power supply to avoid damage to the unit.
- A damaged power cord can easily cause an electric shock or fire hazard, never use a power cord after it has gotten damaged.

AUTO STANDBY

1. The unit will automatically turn to standby mode when no audio input is received for 20 minutes. The soundbar will wake up from standby mode when any button is pressed, or source input is received.
2. If the TV or the external unit is disconnected, switch off the soundbar. To switch the unit off completely, remove the mains plug from the mains socket. Please turn the unit off completely to save energy when not in use.
3. The screen will be turned off for around 20 seconds without any operation, when pressing the power buttons on the soundbar or on the remote control or using the volume button, the display will be wakened up again.

BLUETOOTH PAIRING

Connect the soundbar to your Bluetooth device (such as an iPad, iPhone, iPod touch, Android phone, or laptop), and then you can listen to the audio files stored on the device through your soundbar speakers.

1. Turn on the soundbar and short press the  button repeatedly on the unit or the INPUT button on the remote control to switch the soundbar to Bluetooth mode.
2. On the Bluetooth device, switch on the Bluetooth, search for and select "Aavante Bar Azure Pro" on your Bluetooth list to pair. If prompted for a password, please use "0000".

Note:

- If you face connectivity issues, remove Aavante Bar Azure Pro from your device's Bluetooth history and ensure it's less than 8 meters away. Then try pairing again. To get the best sound quality, make sure there is a clear line of sight between the connected device and your soundbar.
- If your pairing device or connected device is switched off or manually disconnected, the soundbar will automatically enter pairing mode.
- The music streaming may be interrupted by obstacles between the device and soundbar, such as a wall, metallic casing that covers the device, or other devices nearby that operate at the same frequency.
- If you want to connect your soundbar with another Bluetooth device, press and hold the Play/Pause button on the remote control to disconnect the currently connected Bluetooth device.

PLAYING VIA USB PORT

The soundbar automatically switches to USB input mode when a USB flash drive is inserted (this mode isn't selectable on the soundbar or remote control unless a USB flash drive is connected).

1. Ensure that your USB flash drive contains MP3 audio files (other file types not supported)
2. Connect the USB flash drive to the USB port on the soundbar (or your own USB extension cable connected to the USB port).
3. Press the VOL +/- buttons to adjust the volume to your desired level.

PLAYING VIA AUX MODE

Use a 3.5mm to 3.5mm audio cable to connect the PC, tablet, smartphone, TV's headphone socket to the AUX socket on the soundbar.

- Use an RCA to 3.5mm audio cable to connect the Blu-Ray DVD Player/ TV's audio output sockets to the AUX socket on the soundbar.
- Then short press the  button on the soundbar or on the remote control to switch to AUX input mode.
- In this mode, playback can only be controlled on your connected device.

Note: For some computers, you may need to access the audio control panel to manually set the soundbar.

PLAYING VIA OPTICAL MODE

Using an optical cable, connect the OPTICAL connector on your soundbar (Optical digital input) to the OPTICAL OUT connector on the TV or other device. The TV or other device must have an optical digital output. Proceed as follows:

- Connect the optical cable to the OPTICAL jack on the rear of the soundbar.
- Connect the other end of the optical cable to the audio output jack on the TV or other device.
- Set the TV to PCM Stereo or Stereo 2.0.
- Start playing on the TV.
- Press the source input button  on the soundbar or remote control to activate the corresponding mode (the OPTICAL mode) to open the optical digital input of your soundbar. After successfully connecting, operate your audio device directly for playback features.

PLAYING VIA HDMI TV (ARC) MODE

Connect to HDMI TV (ARC) Socket

Some 4K HDR TVs require the HDMI input or picture settings to be set for HDR content reception. For further setup details on HDR display, please refer to the instruction manual of your TV.

> Option 1: ARC (enhanced Audio Return Channel)

- Your soundbar supports HDMI with an enhanced Audio Return Channel (ARC). If your TV is HDMI (ARC) compliant, you can hear the TV audio through your soundbar by using a single HDMI cable.
- Using a high-speed HDMI cable, connect HDMI (ARC) on the soundbar to HDMI (ARC) connector on your TV.
- Then short press the  button on the soundbar or the INPUT button on the remote control to switch to HDMI (ARC) mode. After a successful connection, if the TV supports ARC, LED display will show ARC.

Note: Your TV must support the HDMI-CEC and ARC functions. HDMI-CEC and ARC must be set to be on.

- The setting method of HDMI-CEC and ARC may differ depending on the TV. For details about the ARC function, please refer to your TV owner's manual.
- Only HDMI 1.4 compatible cables can support the ARC function.

TECHNICAL SPECIFICATIONS

Model	boAt AAVANTE BAR Azure Pro
Compatibility	Bluetooth v5.4/ Optical/ HDMI(ARC)/ AUX/ USB
Driver Size (in inches)	2.25"*4 + 5890*1 SoundBar 6.5"*1 SubWoofer 2.25"*2 Surround Speakers
Output Power	550W R.M.S
Frequency Response	40Hz-20kHz
Signal-to-Noise Ratio	≥70dB
Impedance	4Ω*4+ 8Ω*3+3Ω*1
Bluetooth Transmission Range	Up to 10m
Bluetooth	v5.4
Working Voltage	AC 110V-240V
Dimensions	Soundbar: L902.5*W93.6*H69.7mm Wired Subwoofer: L313*W190*H372mm Wireless Surround Speakers: L96.5*W75*H160.2mm