



AAVANTE 2.1 300

boat

AAVANTE 2.1 300
2.1-Channel 40W AHD Signature Sound with Wired Subwoofer

Thank you for choosing boat Aavante 2.1 300 as the audio source for your home. You've a step away from the realm of pure audio bliss. With the Aavante 2.1 300, experience immersive, cinematic audio on a whole new level at home. Stay plugged into the sound with an array of wired connections, USB port, and wireless Bluetooth v5.3 technology. This 2.1 channel soundbar with a wired subwoofer provides balanced sound for movies, music, and even video games where you can experience cinematic sound that revolves around you. We recommend that this manual be carefully read for proper usage and referred to in case of difficulties.

Package Contents:

- 1X Soundbar
- 1X Power Cable
- 1X AUX Cable
- 1X Remote Control
- 1X Wired Subwoofer
- 2X AAA Batteries
- 1X Warranty Card
- 1X User Manual

USER MANUAL

REMOTE CONTROL BATTERY SETUP & REPLACEMENT

Please insert the batteries as shown below.

- Step 1: Remove the battery compartment cover.
- Step 2: Insert two AAA batteries according to the polarity markings (+/-) inside the compartment. Make sure the batteries are correctly aligned and properly inserted into place.
- Step 3: Close the battery compartment.

Precautions When Using Batteries:

- Do not use old and new batteries together.
- The batteries must not be exposed to excessive heat such as sunlight, fire etc.
- Do not use different types of batteries together.
- Insert the batteries correctly as per the polarity markings to prevent battery leakage.
- Remove the batteries from the remote if you do not intend to use it for a long time.
- When disposing used batteries, follow the guidelines for recycling and disposal of batteries that apply in your local area.
- Keep batteries away from children and pets.

SAFETY & WARNINGS

Caution

To reduce the risk of electric shock, do not dismantle the product and do not expose it to rain or moisture. The unit has no user-serviceable parts inside. Please refer servicing to qualified personnel only.

Warning

The lightning flash with an equilateral triangle is intended to alert you to the presence of an unshielded live part within the product's enclosure that may be of sufficient magnitude to constitute an electric shock to a person or persons.

Important This symbol alerts you to read and observe important warnings and instructions on the unit or in this manual.

Notice:

This appliance is not intended for use by people (including children) with reduced physical sensory or mental capabilities, or lack of experience and knowledge unless they are under direct supervision. Children should be supervised to ensure that they do not play with the appliance.

1. To prevent possible hearing damage, do not listen at high volume levels for longer periods of time.
2. Never use the device unattended. Switch off the device when not in use.
3. The appliance is not intended to be operated by means of an external timer or separate remote control system.
4. A fire power supply cord is damaged, it must be replaced by the manufacturer, service agent or similarly qualified person in order to avoid a hazard.
5. Before operating this system, check the voltage of this system to see if it is identical to the voltage of your local power supply.
6. The unit should not be installed by covering the ventilation opening with items such as newspaper, table cloths, curtains etc. Make sure that there are at least 20 cm of space above and at least 5 cm of space on each side of the unit.
7. The grill must not be exposed to dripping or splashing. Do not place objects filled with liquids such as vases, bottles or humidifiers on the unit.
8. To prevent fire or shock hazard, do not expose this equipment to direct heat, rain, moisture or dust.

OPERATING RANGE OF THE REMOTE CONTROL

When the unit is mounted on a wall, point the remote control at the remote-control sensor on the front panel. The provided Remote Control allows the unit to be operated from a distance. Even if the Remote Control is operated within the effective range of 35.2 feet (10.8m), remote control operation may be impossible if there are any obstacles between the unit and the remote control.

If the Remote Control is operated near objects which generate infrared rays, or if other remote control devices using infrared rays are used near the unit, remote operation may be impossible. Conversely, the other products may operate incorrectly.

GENERAL OPERATION

Function	Action
Turn the soundbar ON	Long press the power button on the soundbar or short press the power button on the remote control to switch the soundbar on. The default input mode will appear on the display after being switched on.
Turn the soundbar OFF	Short press the power button on the remote control or unplug from the wall socket to switch the soundbar off.
Change the input source/mode	When the soundbar is on, short press the Power button on the soundbar or the INPUT button on the remote repeatedly to change the input source.
Increase/Decrease the volume	Press the \leftarrow / \rightarrow buttons on the soundbar or the VOL+ / VOL- buttons on the remote control to adjust the volume level.

REMOTE CONTROL OVERVIEW

- 01 Power: When under standby mode, single press the button to power on the soundbar. When under working state, single press this button to shut down into Standby mode. The front display LED turns red in Standby mode.
- 02 MUTE: Single press this button to mute or unmute the audio.
- 03 INPUT: Press the button to switch between USB/AUX/BT/HDMI/ARC input modes.
- 04 BT: Single press this button to select Bluetooth pairing mode. Long press this button for disconnecting BT paired device.
- 05 VOL+ : Single press or long press this button to increase the volume.
- 06 VOL- : Single press or long press this button to decrease the volume.
- 07 NEWS: Select the News EG mode.
- 08 MOVIE: Select the Movie EG mode.
- 09 MUSIC: Select the Music EG mode.
- 10 SILENCE: Select the Silence EG mode.
- 11 SILENCE: Select the Silence EG mode.
- 12 MUSIC: Select the Music EG mode.
- 13 SILENCE: Single or long press this button to increase the system bass pitch.
- 14 BASS: Single or long press this button to lower the system bass pitch.
- 15 REPEAT: Single press this button to repeat the song in USB Mode Single Track Repeat. When by pressing this button, LED blinks once. All Track Repeat: When by pressing this button, LED blinks twice.
- 16 TRE- : Single or long press this button to raise the system treble pitch.
- 17 TRE+ : Single or long press this button to lower the system treble pitch.

UNPACKING AND SET UP

Remove the soundbar from the carton and remove all packing material from the soundbar. Save the packing material. If possible, in case the soundbar ever needs to be serviced or transported. The original carton and packing material are the only safe way to pack the soundbar to protect from damage or harm.

1. Remove any descriptive labels or stickers on the front or top of the cabinet. Do not remove any labels or stickers from the back or bottom of the cabinet.
2. Place your soundbar on a level surface such as a table, desk, or shelf, convenient to an AC power cord, direct sunlight, and away from sources of excess heat, such as heat, moisture, humidity, or vibration.
3. Connect the line cord connecting the AC adapter and extend it to its full length.

INSTALLATION - FREE STANDING

Place the soundbar horizontally on a flat surface such as a TV unit or shelf and attach it firmly with the TV screen.

1. Do not place the unit on a surface that is not level.
2. Do not place the unit on a surface that is not level.
3. Do not place the unit on a surface that is not level.
4. Do not place the unit on a surface that is not level.
5. Do not place the unit on a surface that is not level.
6. Do not place the unit on a surface that is not level.
7. Do not place the unit on a surface that is not level.
8. Do not place the unit on a surface that is not level.
9. Do not place the unit on a surface that is not level.
10. Do not place the unit on a surface that is not level.
11. Do not place the unit on a surface that is not level.
12. Do not place the unit on a surface that is not level.
13. Do not place the unit on a surface that is not level.
14. Do not place the unit on a surface that is not level.
15. Do not place the unit on a surface that is not level.
16. Do not place the unit on a surface that is not level.
17. Do not place the unit on a surface that is not level.
18. Do not place the unit on a surface that is not level.
19. Do not place the unit on a surface that is not level.
20. Do not place the unit on a surface that is not level.

INSTALLATION - FREE STANDING

Place the soundbar horizontally on a flat surface such as a TV unit or shelf and attach it firmly with the TV screen.

1. Do not place the unit on a surface that is not level.
2. Do not place the unit on a surface that is not level.
3. Do not place the unit on a surface that is not level.
4. Do not place the unit on a surface that is not level.
5. Do not place the unit on a surface that is not level.
6. Do not place the unit on a surface that is not level.
7. Do not place the unit on a surface that is not level.
8. Do not place the unit on a surface that is not level.
9. Do not place the unit on a surface that is not level.
10. Do not place the unit on a surface that is not level.
11. Do not place the unit on a surface that is not level.
12. Do not place the unit on a surface that is not level.
13. Do not place the unit on a surface that is not level.
14. Do not place the unit on a surface that is not level.
15. Do not place the unit on a surface that is not level.
16. Do not place the unit on a surface that is not level.
17. Do not place the unit on a surface that is not level.
18. Do not place the unit on a surface that is not level.
19. Do not place the unit on a surface that is not level.
20. Do not place the unit on a surface that is not level.

BACK PANEL CONNECTION

FRONT LED DISPLAY

Red: Stand By Mode
Blue: BT Mode (Blue LED blinks to show BT is unpaired. When paired with any device, it becomes steady)
Pink: HDMI (ARC) Mode
Green: AUX Mode

Notes: When we give any volume, bass, & treble command for increasing or decreasing, then the LED will blink. If it is a complete increase or decrease, the LED will stop blinking.

BLUETOOTH PAIRING

Connect the soundbar to your Bluetooth device such as an iPod, iPhone, iPad, smartphones, or laptop.

1. Turn on the soundbar and short press the Power button (mainly on the unit) of the INPUT button on the remote control to switch the soundbar to Bluetooth mode. The front display LED continuously blinks Blue in the device pairing state.
2. Switch on the Bluetooth on the media device, search for and select 'Aavante 2.1 300' on your Bluetooth list to pair. Remember to pair a powered-on Bluetooth device.
3. Wait until you hear a success prompt from the soundbar. Once paired with the media device, the display LED turns solid blue.

Notes:

- If your pairing device is switched off or manually disconnected, the soundbar will automatically enter pairing mode.
- The connection to the device will be established once you re-enable wireless range 10-10 meters.
- To connect to other devices, repeat the above pairing step.
- There is no automatic Bluetooth pairing mode. The soundbar will remain in pairing mode even if no device is paired, so switch off if not in use.

PLAYING via USB PORT:

The soundbar automatically switches to USB input mode when a USB flash drive is inserted.

1. When a USB flash drive is inserted and the soundbar is powered on, press the INPUT button on the remote control or the Power button on the soundbar to switch to USB input mode. In case it doesn't change automatically, and the music in the USB flash drive will be automatically played.
2. The mode light (left) on the soundbar or remote control shows a USB flash drive is connected.
3. Ensure that your USB flash drive contains MP3 audio files (other file types are not supported).

CONTROLS AND CONNECTIONS

Get to know your soundbar:

Buttons on the Soundbar:

Previous Track/Volume (-) Button	Long press to return to the previous track. Short press to decrease the volume in steps.
Next Track/Volume (+) Button	In Bluetooth & USB modes, short press to play/pause. In AUX & HDMI(ARC) modes, short press to return to menu. In all modes, long press for 6 seconds to reset the soundbar to default settings.
Power Button	Long press for standby (CHARGE). Short press to sleep to choose among Bluetooth, AUX, USB and HDMI(ARC) modes.

Ports on the Soundbar:

USB Port	Connect the USB flash drive to this port on the soundbar
AUX	Auxiliary Audio input from MP3/Phone/MP3 box devices.
H-ARC	Connect to HDMI (ARC)
DC IN	Connect to power supply
BASS OUT	Connect to the wired subwoofer

PLAYING via AUX MODE:

1. Firstly connect the soundbar to your PC, laptop, smartphone, TV, or other audio devices by using an AUX cable. Use a 3.5mm to 3.5mm audio cable to connect the PC, laptop, smartphone, TV's headphone socket to the AUX socket on the soundbar. Make sure that these devices have both AUX IN and AUX OUT terminals.
2. Switch the INPUT button on the remote control or the Power button on the soundbar to switch the soundbar to AUX mode. Once the soundbar is connected in AUX mode, the front display LED turns green and the music on your connected device will play. Playback can only be controlled from your connected device.

Notes: For some computers, you may need to access the audio control panel manually set the soundbar as the steps mentioned above.

PLAYING via HDMI TV (ARC) MODE: Connect to HDMI TV (ARC) Socket

Some tv HDR TVs require the HDMI input or picture settings to be set for HDR content reception. For further setup details on HDR playback, please refer to the instruction manual of your TV.

1. The soundbar supports HDMI (ARC) with audio return channel (ARC). You can hear the TV audio through your soundbar by using a single HDMI (ARC) cable only if your TV is ARC-compliant.
2. Using a high-speed HDMI (ARC) cable, connect the HDMI (ARC) connector on the soundbar to the HDMI (ARC) connector on the TV. The HDMI (ARC) connector on the TV might be labeled differently. For details, see the user manual of your TV.
3. When HDMI (ARC) is connected, TV sound setting in "sound output" mode should be set as external or Auto mode. In addition, digital audio output mode should be set as auto mode. When the HDMI (ARC) cable is connected, the TV digital audio output is set as auto mode. Then start playing music on the TV.
4. Press the INPUT button on the remote control or the Power button on the soundbar to select HDMI (ARC) mode.

PLAYING via HDMI TV (ARC) MODE: Connect to HDMI TV (ARC) Socket

Some tv HDR TVs require the HDMI input or picture settings to be set for HDR content reception. For further setup details on HDR playback, please refer to the instruction manual of your TV.

1. The soundbar supports HDMI (ARC) with audio return channel (ARC). You can hear the TV audio through your soundbar by using a single HDMI (ARC) cable only if your TV is ARC-compliant.
2. Using a high-speed HDMI (ARC) cable, connect the HDMI (ARC) connector on the soundbar to the HDMI (ARC) connector on the TV. The HDMI (ARC) connector on the TV might be labeled differently. For details, see the user manual of your TV.
3. When HDMI (ARC) is connected, TV sound setting in "sound output" mode should be set as external or Auto mode. In addition, digital audio output mode should be set as auto mode. When the HDMI (ARC) cable is connected, the TV digital audio output is set as auto mode. Then start playing music on the TV.
4. Press the INPUT button on the remote control or the Power button on the soundbar to select HDMI (ARC) mode.

Specifications:

Model Name	boat Aavante 2.1 300
Bluetooth Version	v5.3
Net Weight	2.5 kg
Working Range	10 to 10m
Driver Size	Subwoofer: 4" x 1.5mm; Tweeter: 2" x 2"
Working Voltage	150VA
Frequency	35Hz - 20kHz
Output Power	40 W RMS
Compatibility	USB / BT / v5.3 / AUX / HDMI (ARC)

