

boat

boat

PARTYPAL 65 PRO


Thank you for purchasing boAt PartyPal 65 Pro. You are now just a step away from the realm of pure audio bliss. Please follow this user manual carefully in case of any difficulties. Please note that playtime will vary depending on the selected volume level. You can stay plugged into the sound via Bluetooth v5.3 wireless technology, TF card, USB and AUX wire compatibility. This portable party speaker has been designed with a smooth interface that requires minimum efforts.

PACKAGE CONTENTS

- 1. 1x boAt PartyPal 65 Pro
- 2. 1x Wireless Microphone
- 3. 1x Type-C Charging Cable
- 4. 1x AUX Cable
- 5. 1x User Manual
- 6. 1x Warranty Card

OVERVIEW

- 1. Type-C Charging Input
- 2. MicroSD/ TF Card Slot
- 3. USB Port
- 4. Microphone Input Port
- 5. External Audio Input Port
- 6. Power Button
- 7. Bass Adjustment Button
- 8. Switch Mode Button/ Disconnect Bluetooth
- 9. Switch Loop Playback or Repeat Playback/ TWS Function
- 10. Previous Track/ Fast Backward Button
- 11. Volume Down Button
- 12. Play/ Pause Button
- 13. Volume Up Button
- 14. Next Track/ Fast Forward Button
- 15. RGB Light Switch/ Select Light Effect Button

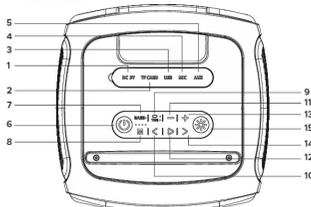

OPERATIONAL INSTRUCTIONS

POWER ON/OFF/STANDBY

- Long press the **⏻** button to switch the speaker ON and OFF.
- The speaker will automatically enter Standby mode, if left idle for 20 minutes or more.

CHANGE CONNECTIVITY MODE

- Short press the **⏻** button on the speaker to switch between Bluetooth, USB, microSD/TF, and AUX modes.

- Bluetooth mode is activated by default during the first operation. The speaker will remember the mode you last used & will enable the respective connectivity mode when powered on next time.

Note: Modes need to be changed manually. You need to press the **M** button every time you need to change the connectivity mode.

BLUETOOTH FUNCTION

- PartyPal 65 Pro supports music playback via wireless connection to a smartphone or other compatible devices.

Note: Compatibility with all commercially available devices cannot be guaranteed.



BLUETOOTH PAIRING

- Press the **Ⓞ** button to switch on the speaker.
- Short press the **M** button to select the Bluetooth Mode.
- Activate the Bluetooth on your smartphone and search for "PartyPal 65 Pro" to connect.
- Select "PartyPal 65 Pro" from the list of available devices. If prompted for a passkey, enter "0000".

Congratulations! PartyPal 65 Pro speaker is now connected to your phone via Bluetooth with a voice prompt.

- Once paired, you can start playback from the external device.
- During music playback, you can press the **⏮** button to pause playback. To resume playback, press the **⏭** button again.

Note:

- PartyPal 65 Pro remembers previously connected devices. Once switched on, the speaker automatically reconnects to the previously connected devices within the working range.
- If pairing is unsuccessful, please remove "PartyPal 65 Pro" from the list of paired devices on your phone, bring the phone closer to the speaker and try pairing again.

DISCONNECT BLUETOOTH DEVICE

- In Bluetooth mode, long press **M** button to force disconnect/reconnect the current Bluetooth device.
- Search for "PartyPal 65 Pro" on the other Bluetooth device to connect.

PARTYPAL 65 PRO

BASS ADJUSTMENT

- Press the **🔊** button on the speaker to increase the bass.

VOLUME ADJUSTMENT

- Short press the **⏮** / **⏭** buttons on the speaker to increase/decrease the playback volume.
- When the volume reaches the minimum or maximum level, a tone prompt is played.

RGB LED EFFECT SELECTION

- After turning on the speaker, short press **Ⓞ** button to turn on the RGB light and long press for 2 seconds to turn off the RGB light effect.
- Press the **Ⓞ** button to switch between 6 different light modes and select your preferred light effect.

Note:

- PartyPal 65 Pro remembers the last activated light effect when you turn on the speaker again.
- If you turn off the LED effect before switching off speaker, you need to press and hold the **Ⓞ** button for more than 2 seconds to turn on the light effect when you power on the speaker again.

TWS FUNCTION

If you have two PartyPal 65 Pro Speakers, you can activate the TWS function which allows you to pair the two speakers together and obtain stereo audio reproduction (the speakers will reproduce the same audio at the same time).

Note: In order to use the TWS function, the two speakers must have a maximum distance of about 5 meters from each other in open spaces.

ACTIVATING TWS FUNCTION

- Make sure the speakers are not paired with any external devices.
- Turn on the two speakers and select Bluetooth mode.
- Short Press the **Ⓞ** button on one speaker (as right channel) for more than 2 seconds to enter the TWS mode.
- While pairing, the TWS LED indicator keeps flashing. When pairing is successful, a tone prompt will confirm the pairing and the indicator lights of both speakers will be on.
- Once TWS is activated, the speakers will automatically pair with each other if turned on at the same time.
- The speaker that is connected to your Bluetooth device will act as the primary speaker (left channel).
- To deactivate the TWS function and unpair the speakers, Short Press the **Ⓞ** button on the speaker after pairing.

USB/ MICRO SD/ TF CARD MODE

- Insert a USB flash drive/microSD/ TF card (containing songs in MP3 format) into the USB port/ TF card slot and it will switch to USB/ TF card mode automatically.
- Press **⏮** once to pause or resume playback.
- Press **⏭** once to skip to the next track and press **⏮** once to return to the previous track.
- Press and hold **⏮** for more than 2 seconds to fast forward; press and hold **⏭** for more than 2 seconds to rewind the currently playing song.
- Switch Player Mode: Press the **Ⓞ** button to play one track on repeat (with the indicator light on) or repeat the playlist (with the indicator light off).

Note:

- Compatibility with all commercially available storage devices cannot be guaranteed.
- External USB drives that require a voltage rating greater than 5V and a current rating greater than 200mA are not supported.
- If you use a USB extension cable, the connected storage device may not be recognized or function properly.
- Use only storage devices formatted with FAT16/FAT32 file system.

AUX MODE

- Connect one end of the appropriate cable to the 3.5 mm AUX input of the speaker and the other to the external device.
- Short press the **M** button several times to switch to AUX connectivity mode.
- Once connected, you can start playback directly from the connected external device.
- In AUX mode, you can control the audio playback via the media device/phone.
- Press **⏮** once to mute playback. Press **⏭** again to unmute playback.

Note:

- In AUX mode, it is necessary to carry out the operation directly from the connected external device instead of the speaker buttons.

MICROPHONE CONNECTION

- Step 1: Slide the "On/Off" button to turn the wireless microphone on/off and connect it to the speaker.
- Step 2: You can also connect a separate wired microphone to the speaker by using the microphone input port.
- Step 3: Use the **⏮** / **⏭** buttons to choose the desired volume level while at least one microphone is connected.

RESET FUNCTIONALITY

Perform the Reset function if the speaker doesn't turn off or doesn't respond properly.

Step: Press and hold the **Ⓞ** button for more than 2 seconds to clear the Bluetooth connection history of the speaker and reset to factory settings.

CHARGING

- PartyPal 65 Pro has a built-in rechargeable battery that can be recharged using 5V/2A power supply.
- Connect one end of the provided charging cable to the charging input and the other end to an adaptor of 5V/ 2A.
- The battery level of the speaker is indicated by four LED indicators:

Speaker Battery Level	LED Indication
100%	Four LEDs remain on
75%	Three LEDs remain on
50%	Two LEDs remain on
25%	One LED blinks slowly

- During charging, the LED indicator remains on with solid red light (the speaker will fully recharge in about 4 hours). Once the speaker is fully charged, the LED indicator will turn off.
- When the battery is low, the speaker will make a low battery tone periodically.

Note:

- Before use, it is recommended to fully charge the battery.
- Please avoid using the speaker while it is charging, as this may decrease the battery's performance.
- If the battery is completely discharged, then recharge the speaker for at least an hour before using it.

Charging norms & Precautionary Guidelines:-

1) Charger/Brick/Adapter	5V 2A
2) Cable/Wire	Standard Cable (35 strands @0.10mm diameter/ strand)

Note: Any other accessory can be used to charge the product as long as the above-mentioned norms are followed.

SPECIFICATIONS

Product Type	Portable Party Speaker
Bluetooth Version	v5.3
Dimensions	264*265*302 mm
Net Weight	3.73 kg
Working Range	10 m
Driver Size (in inches)	5.25"×1 Woofer+ 1.5"×1 Tweeter
Compatibility	BT/AUX/TF Card/USB
TWS Function	Yes
Frequency	60Hz-20kHz
Signal to Noise Ratio	≥65dB
Input Voltage	5V/2A
Output Power	42W
Play Time	Up to 8 hours (At 60% volume with RGB light effect ON)
Charging Time	Up to 4 hours
Battery	4000 mAh @7.4V
Water Resistance	IPX4

WARNING

- Please charge the speaker according to the charging norms mentioned to protect the battery.
- Please do not disassemble, repair, or modify this product by yourself without authorization.
- Please do not submerge the product in water.
- Please keep this product safe from coming in contact with liquids.
- Please store and use this product in an environment of normal temperature.
- Please do not expose this product to extreme temperatures.
- Please keep this product away from heat sources, such as radiators, stoves, etc.
- When cleaning this product, please use a soft cloth or slightly damp cloth if necessary. Please do not use chemicals for cleaning.
- In order to have an extended product life and protect your hearing, please avoid listening to songs on maximum volume for long time.