

ACWOW®



HEADPHONES

TWISTER 717

Manual



Power Button

Volume Up Button

Multi-Function Button

Volume Down Button

ANC Button

Charging Port

Aux Audio Cable Interface

Appearance:

- ① Flexible Design
- ② Power Button
- ③ Volume Up Button
- ④ Multi-Function Button
- ⑤ Volume Down Button
- ⑥ Aux Audio Cable Interface
- ⑦ Charging Port
- ⑧ ANC Button

What You Will Find In The ACwO Box?

- Wireless Headphones
- Type-C Charging Cable
- Scan Card

Product Features:

- Hybrid Active Noise Cancellation up to 38dB
- X-Fidelity Acoustics
- Dual Device Connectivity
- 40mm Bass Boom X™ Drivers
- Dual EQ Modes – Gaming & Cinematic
- Transparency Mode
- Up to 55 Hours of Music Playtime
- AI-ENC Noise Cancellation Technology
- Instant Auto Connect
- Ultra-Low Latency - 45ms
- IPX5 Water & Sweat Resistant
- Bluetooth v5.4 Technology
- Feedback + Feedforward Hybrid Mic Module for Advanced Noise Cancellation

Safety Precautions for Using Wireless Headphones

- Keep volume at moderate levels to protect your hearing.
- Do not use headphones while driving or in situations requiring full attention.
- Avoid using headphones for extended periods to prevent ear fatigue.
- Keep the headphones and charging cable away from water or moisture.
- Do not disassemble or modify the headphones.
- Keep out of reach of small children to avoid choking hazards.
- Stop using immediately if you experience discomfort or irritation.
- Use only the provided or compatible charging cable.
- Charge in a cool, dry area away from direct sunlight or heat.
- Unplug the charger once the battery is full to prevent overheating.

Charging Instructions

- Use the Type-C charging cable provided in the box.
- Plug one end of the cable into the charging port on the headphones.
- Connect the other end to a USB power source (like a laptop or wall adapter).
- While charging, the LED indicator will turn red.
- Once fully charged, the LED will turn blue or turn off.

Bluetooth Connectivity

- Press and hold the Power Button until the LED light flashes indicating pairing mode.
- Open Bluetooth settings on your phone, or laptop and turn Bluetooth ON.
- From the list of available devices, tap on Twister 717 to pair.
- A confirmation tone (or voice prompt) will play once connected.
- Once paired, your headphones will automatically connect to the same device when turned on (if Bluetooth is enabled on the device).

Power On:

- Press and hold the power button for 1–2 seconds. A blue light will flash, followed by a voice prompt saying “Power On.”

Power Off:

- Press and hold the power button for 1–2 seconds. A red light will flash, followed by a voice prompt saying “Power Off.”

Button Functions

- **Play / Pause:**
Press the MFB (Multi-Function Button) once to play or pause your music.
- **Volume Up:**
Press the ‘+’ button to gradually increase the volume.
- **Volume Down:**
Press the ‘-’ button to lower the volume step by step.
- **Next Track:**
Press and hold the ‘+’ button to skip to the next track.
- **Previous Track:**
Press and hold the ‘-’ button to return to the previous track.

- **Switch Modes:**
Short press the ANC button once to switch between Active Noise Cancellation and Transparency modes.
- **Switch EQ Modes:**
Triple press the MFB to toggle between Gaming and Cinematic sound modes.
- **Voice Assistant:**
Double press the MFB to activate voice assistance.
- **Answer a Call:**
Press the MFB once to answer an incoming call.
- **End Call:**
Press the MFB once again to hang up the call.
- **Reject Call:**
Press and hold the MFB for 1 second to reject an incoming call.