


ACWO®



EARBUDS

DWOTS MUZE

Manual

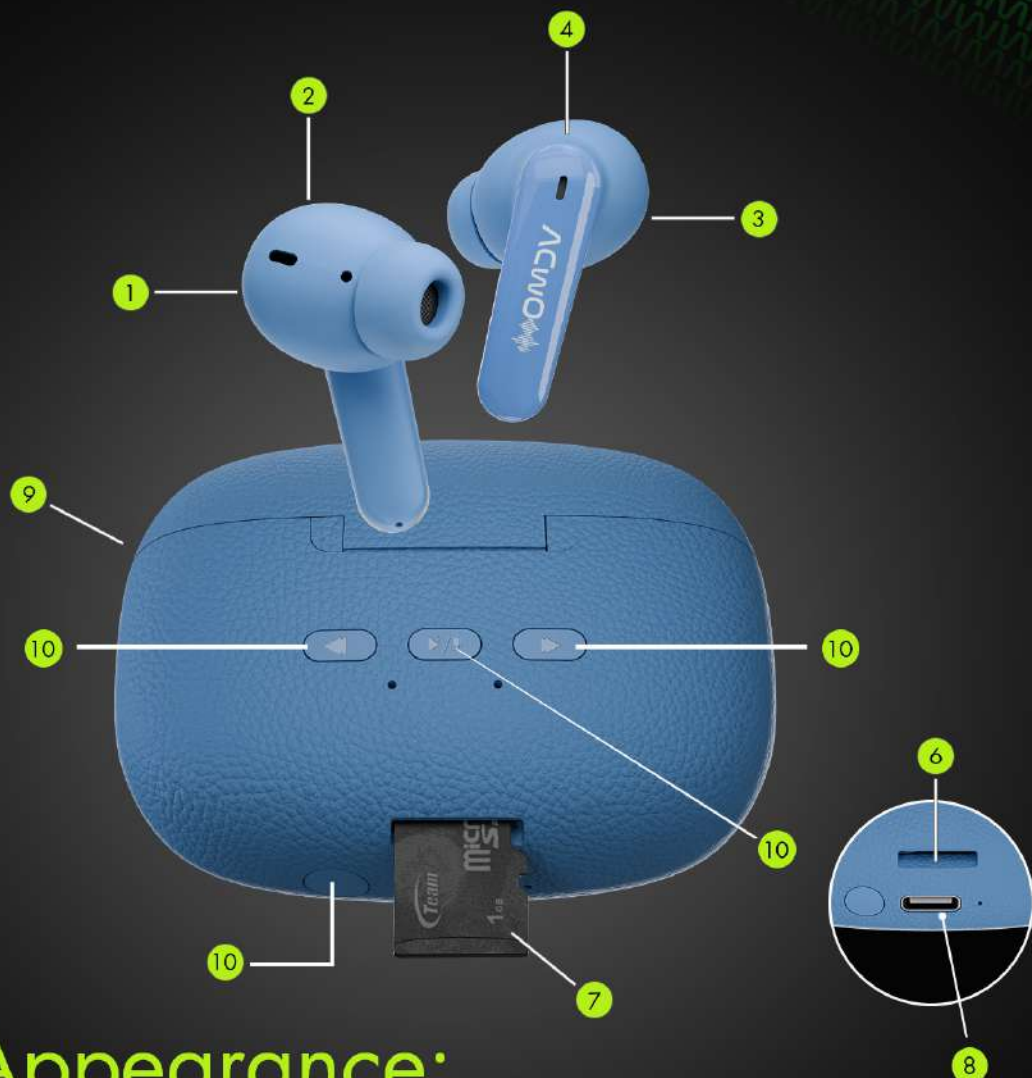

Appearance:

- ① Left Earbud
- ② Left Earbud Charging Slot
- ③ Right Earbud
- ④ Right Earbud Charging Slot
- ⑤ Charging Case
- ⑥ TF Card Slot
- ⑦ TF Card
- ⑧ Type-C Charging Port
- ⑨ Multi-Function Touch Control Area
- ⑩ TF Card Controls
 - Power Button: On/Off
 - Previous Button: Rewind / Previous track
 - Play/Pause Button: Play or Pause music
 - Next Button: Forward / Next track

What You Will Find In The ACwO Box?

- ① Pair of TWS Earbuds
- ② TF Card Included
- ③ Type-C Charging Cable
- ④ Warranty Card

Product Features:

- ① In-built MP3 Music Player
- ② Quad Mic ENC
- ③ Dual Device Connectivity
- ④ TF Card Slot
- ⑤ TF card included
- ⑥ 4 EQ Modes – Podcast, Balance, Bass, Cinematic
- ⑦ Up to 45 Hours Music Playtime
- ⑧ Bluetooth v5.4
- ⑨ IPX5 Water and Sweat Resistant
- ⑩ 10mm Titanium Drivers

Safety Guidelines:

- Please refrain from dismantling the product or attempting to remove its battery. Such actions can pose a fire hazard or cause electrical malfunctions. Seek the services of a qualified technician or manufacturer for any necessary maintenance or repairs.
- When cleaning the earbuds, exercise caution by using a damp, soft cloth. Avoid using any oily or volatile liquids for cleaning purposes. Additionally, ensure that the earphones are kept away from extreme temperature conditions, both hot and cold.
- Please be aware that any damage to the earbuds that is not attributed to a manufacturing defect will render the product's warranty null and void.
- Do not wear them in situations where it is unsafe, such as when operating a vehicle, crossing streets, or engaging in activities requiring full situational awareness.
- To safeguard your hearing, ensure that the volume on your music player is set at an appropriate level when using the earphones. Prolonged exposure to high noise levels can gradually lead to hearing impairment.
- Do not wear the earbuds for a long period of time as it can lead to possible hearing loss or major hearable issues.

ACwO DwOTS Muze

Kindly Note -

- Please take off the sticker peels attached below the earbuds before you charge them.
- Charge the charging case and the ACwO DwOTS Muze Wireless Earbuds at least 70% before the first usage.

Charging:

Charging Case:

- Connect the type-c charging cable to the charging case to charge your ACwO DwOTS Muze Wireless Earbuds.

Earbuds:

- Place the earbuds in the charged Charging Case to charge the ACwO DwOTS Muze Wireless Earbuds.

Bluetooth Pairing Process:

1. Take out the ACwO DwOTS Muze Earbuds from the Charging Case and place them in your ears.
2. Go to the Bluetooth settings of your device and switch it on.
3. Scan available devices.
4. Search For "ACwO DwOTS Muze" from the list of available devices.
5. Pair "ACwO DwOTS Muze" from the list and your Earbuds will be connected.

Once you've completed the initial pairing process, the ACwO DwOTS Muze will connect seamlessly to your device every time you open the charging case.

Kindly Note - If the earbuds are not in use and are left outside the charging case, they will automatically turn off after approximately 5 minutes.

Bluetooth Reset Process: ACwO DwOTS Muze

1. In case your earbuds encounter pairing issues or if only one earbud is functioning, you can easily perform a reset.
2. Clear all Bluetooth data named " ACwO DwOTS Muze " from your device and disable Bluetooth.
3. Place the earbuds back into their charging case and then remove them to initiate the Bluetooth pairing process once more.

How To Use Your ACwO DwOTS Muze ?

- ACwO DwOTS Muze : The Multi-Functional Touch Area, often referred to as the "Touch Area," is situated on the upper section of the Earbud Extension.

Dual Connectivity Instructions:

Pair with the First Device:

- Connect the earbuds to your first device via Bluetooth.

Unpair from the First Device:

- Disconnect or turn off Bluetooth on the connected device.

Pair with the Second Device:

- Enable Bluetooth on the other device and connect the earbuds.

Reconnect to the First Device:

- Turn Bluetooth back on to switch and reconnect to the previously paired device.

Bluetooth Mode : Control Functions

Play/Pause:

- Tap once on the Multi-Function Touch Area of either earbud.

Next Track:

- Double Tap on the Multi-Function Touch Area of the right earbud.

Previous Track:

- Double Tap on the Multi-Function Touch Area of the left earbud.

Switch Between Modes:

- Press and hold the multi-function touch area on the left earbud for 2–3 seconds, then release to switch between Podcast, Balance, Bass, and Cinematic modes.

Activate Voice Assistant:

- Tap four times on the Multi-Function Touch Area of either earbud.

Increase Volume:

- Triple Tap on the Multi-Function Touch Area of the right earbud.

Decrease Volume:

- Triple Tap on the Multi-Function Touch Area of the left earbud.

Answer Calls:

- Single Tap on the Multi-Function Touch Area of either earbud.

Hang Up Calls:

- Single Tap & Hold on the Multi-Function Touch Area of either earbud.

Decline Calls:

- Tap & Hold on the Multi-Function Touch Area of either earbud.

Access Without Phone - Instructions

1. Disconnect the Bluetooth pairing.
2. Press and hold the button near the charging slot to activate the TWS case functions.
3. The TWS will automatically enter MP3 Mode.
4. Double tap the Play & Pause button to switch between MP3, Record, and Live modes.

MP3 Mode - TWS Case Control Functions

Play/Pause:

- Single Tap on the Play & Pause button.

Next Track:

- Long Press the Forward button to skip to the next song.

Previous Track:

- Long Press the Previous button to go back to the previous song.

MP3 Mode - Earbud Control Functions

Play / Pause:

- Single Tap on either earbud.

Mode Change:

- Press and hold the left earbud for 2 seconds.

Next Song:

- Double Tap on the right earbud.

Previous Song:

Double Tap on the left earbud.

-

Increase Volume:

Triple Tap on the right earbud.

-

Decrease Volume:

Triple Tap on the left earbud.

-

Recording Mode - TWS Case Control Functions

Start / Stop Recording:

Single Tap the Play & Pause button to turn recording On /

- Off.

Recording Mode - Earbud Control Functions

Increase Volume:

- Triple Tap on the right earbud.

Decrease Volume:

- Triple Tap on the left earbud.

Recording Status Indicator:

- Green Light ON: Recording in progress.
- Green Light OFF: Recording stopped.

Live Mode Earbuds Control:

Increase Volume:

- Triple Tap on the right earbud.

Decrease Volume:

- Triple Tap on the left earbud.

* Note:

Recording is automatically saved and starts instantly when activated.

To use SD Card you will have access to card reader or device compatible to transfer data into the SD Card.

If there is no SD card, or if the SD card is damaged, the TWS will automatically switch to Live Mode.

When an SD card is inserted and the TWS is not connected to Bluetooth, it will automatically switch to MP3 Mode.