


ACWO®



EARBUDS

DWOTS SENSE PRO

Manual

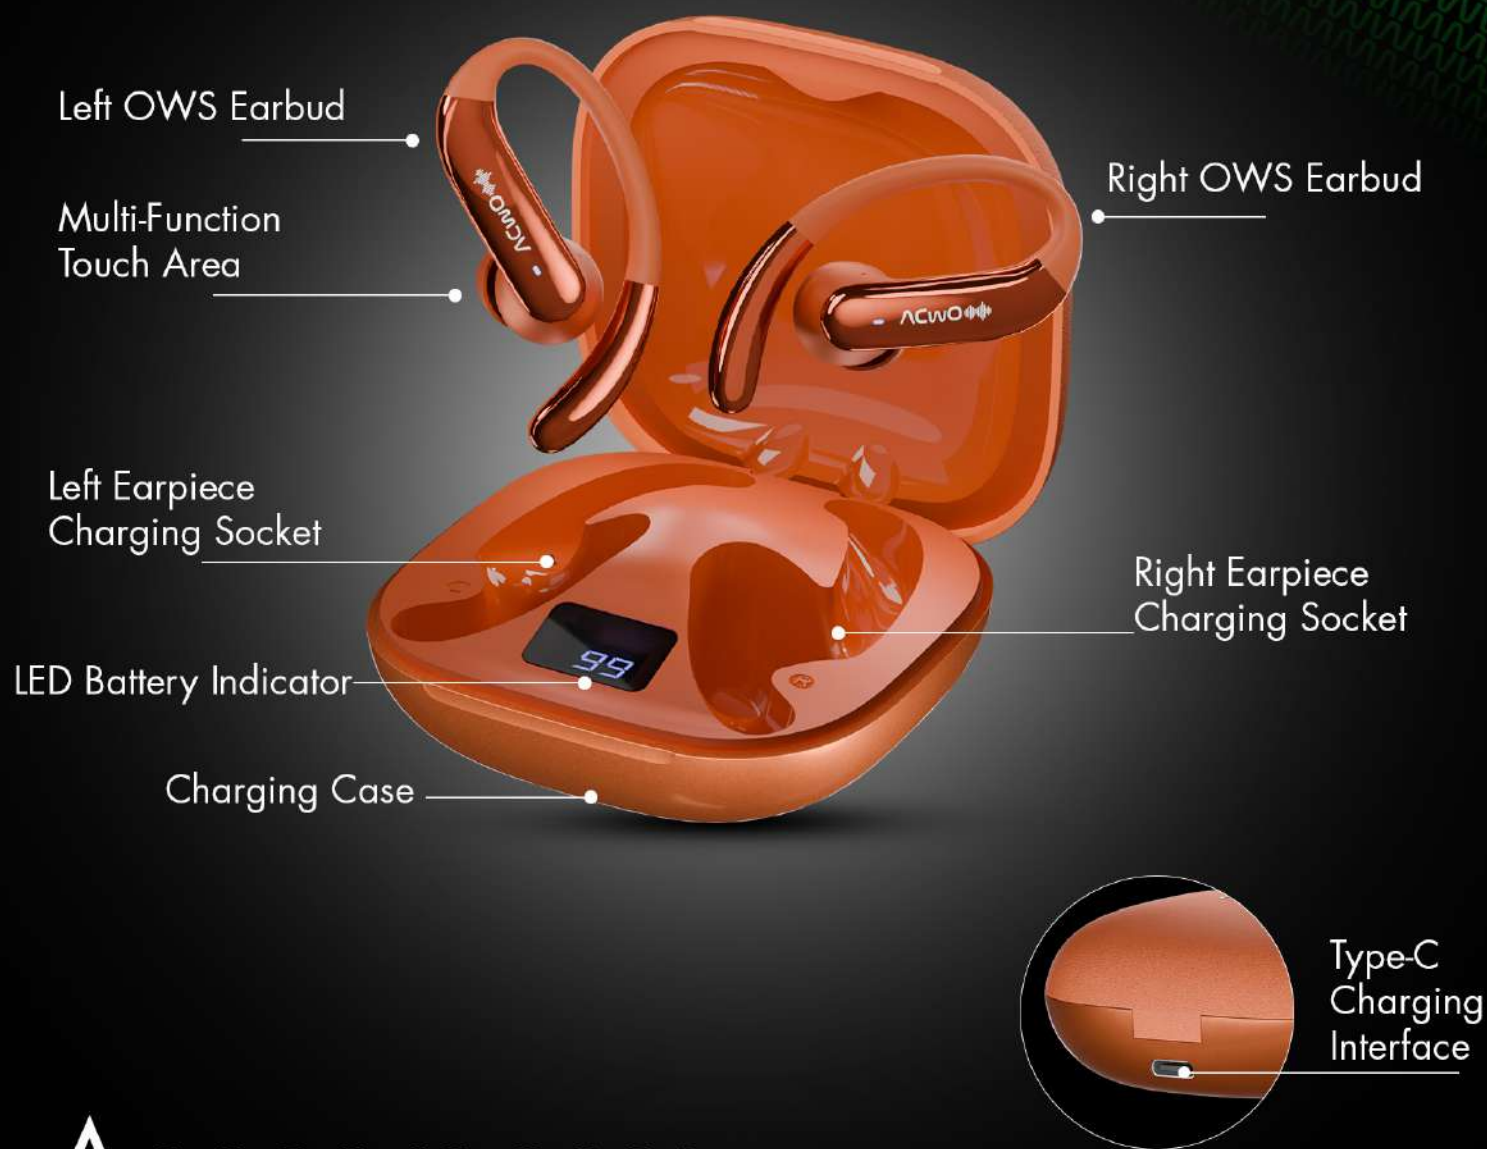

Appearance:

- 1 Left OWS Earbud
- 2 Right OWS Earbud
- 3 Charging Case
- 4 Left Earpiece Charging Socket
- 5 Right Earpiece Charging Socket
- 6 Type-C Charging Interface
- 7 Multi-Function Touch Area
- 8 LED Battery Indicator

What You Will Find In The ACwO Box?

- Charging Case
- Pair of OWS Earbuds
- Scan Me Card
- Extra Eartips

Product Features:

- OWS Design
- Depth Wide-Band Active Noise Cancellation up to 42dB
- Dual Connectivity
- Voice-First Mic System
- Music Playtime Up to 45 Hours
- Advanced Bluetooth V6.0
- IPX5 Water & Sweat Resistant
- 12mm Driver Size
- Hall Switch Enabled
- No Hygiene Concerns
- Skin Friendly Ear Hooks
- 3 Preset EQ Modes
- Single Press Voice Assistant

Safety Guidelines:

- To ensure a safe and enjoyable experience with your OWS Earbuds, please follow these important safety guidelines.

Charging Case:

- Use only the provided charging cable or a compatible charger.
- Avoid overcharging; disconnect once fully charged.
- Keep the charging case and earbuds away from water and moisture.
- Do not expose the earbuds or charging case to extreme heat or direct sunlight.

Usage & Hearing Protection:

- Keep the volume at a moderate level to prevent hearing damage.
- Avoid prolonged listening at high volumes to protect your ears.
- Take regular breaks when using earbuds for extended periods.
- Do not use earbuds while driving or in situations requiring full attention.

Handling & Maintenance:

- Store earbuds in the charging case when not in use to prevent loss or damage
- Clean earbuds regularly using a soft, dry fiber cloth to remove dust and debris.

- Do not attempt to disassemble or repair the earbuds your- self.
- Keep earbuds away from strong magnetic fields or electronic interference.

Water & Sweat Resistance:

- Wipe off sweat or moisture before placing earbuds back in the case.
- Do not submerge the earbuds or expose them to excessive water.

Connectivity & Wireless Safety:

- Keep earbuds within the recommended Bluetooth range for stable connectivity.
- Avoid using earbuds near medical devices, as wireless signals may interfere.
- If experiencing discomfort or irritation, stop using the earbuds immediately.

ACwO DwOTS Sense Pro:

Kindly Note:

- Please take off the sticker peels attached below the earbuds before you charge them.
- Charge the charging case and the ACwO DwOTS Sense Pro Wireless Earbuds at least 70% before the first usage.

Charging:

- **Charging Case:**
Connect the Type-C charging cable to the charging case to charge your ACwO DwOTS Sense Pro Wireless Earbuds.

Earbuds:

- Before use remove the blue protective film on the earbuds. Place the earbuds in the charged Charging Case to charge the ACwO DwOTS Sense Pro Wireless Earbuds.

Bluetooth Pairing Process:

- Take out the ACwO DwOTS Sense Pro earbuds from the Charging Case and place them in your ears.
- Go to the Bluetooth settings of your device and switch it on.
- Scan available devices.
 - Search For" ACwO DwOTS Sense Pro" from the list of available devices.
 - Pair" ACwO DwOTS Sense Pro" from the list and your Earbuds will be connected.

Once you've completed the initial pairing process, the ACwO DwOTS Sense Pro will connect seamlessly to your device every time you open the charging case.

Kindly Note :

If the earbuds are not in use and are left outside the charging case, they will automatically turn off after approximately 5 minutes.

How To Use Your ACwO DwOTS Sense Pro ?

- **DwOTS Sense Pro Controls** : The Multi-Functional Touch Area, often referred to as the "Touch Area," is situated on the upper surface of both the earbuds.

ACwO DwOTS Sense Pro - Smart Functions

Power On:

- Take the earbuds out of the charging case - they automatically turn on and connect.

Power Off:

- Place the earbuds back into the charging case- they automatically turn off.

Music Controls:

Play/Pause:

- Single tap on the Multi-Function Touch Area of either earbud.

Next Track:

- Double tap on the Multi-Function Touch Area of the right earbud.

Previous Track:

- Double tap twice on the Multi-Function Touch Area of the left earbud.

Switch EQ Modes::

- Long press the Multi-Function Touch Area on the left earbud for 3 seconds to switch between the three preset EQ modes:

Bass | Theatre | Normal.

Switch between ANC & Transparency mode:

- Long press the Multi-Function Touch Area on the right earbud for 3 seconds to switch between ANC Mode, Transparency Mode, and to turn off the ANC Mode.

Voice Assistant:

- Tap four times on the Multi-Function Touch Area of either earbud.

Increase Volume:

- Triple tap the Multi-Function Touch Area on the right earbud.

Decrease Volume:

- Triple tap the Multi-Function Touch Area on the left earbud.

Answer Call:

- Single tap the Multi-Function Touch Area on either earbud.

Hang Up Call:

- Double tap the Multi-Function Touch Area on either earbud.

Decline Call:

- Long press the Multi-Function Touch Area for 3 seconds on either earbud.