

ACWO®



EARBUDS

DWOTS FLOW

Manual



Appearance:

- ❶ Left Earbud
- ❷ Left Earbud Extension
- ❸ Right Earbud
- ❹ Right Earbud Extension
- ❺ Charging Case
- ❻ Left Earbud Slot
- ❼ Left Earbud Extension Charging Slot
- ❽ Right Earbud Slot
- ❾ Right Earbud Extension Charging Slot
- ❿ Type-C Charging Port
- ⓫ Multi-Function Touch Control Area

What You Will Find In The ACwO Box?

- ① Charging Case
- ② Pair of Clip-On OWS Earbuds
- ③ Type-C Charging Cable
- ④ Warranty Card

Product Features:

- ① Open-Ear OWS Earbuds
- ② X-Fidelity Acoustics for Immersive Sound
- ③ AI-ENC Technology for Clear Calls
- ④ Dual Connectivity (Two Devices at Once)
- ⑤ 50 Hours Total Playtime
- ⑥ Environmental Awareness Mode for Ambient Sound
- ⑦ Dedicated Music & Gaming Modes
- ⑧ HYPERBOOST™ Charging Technology
- ⑨ Instant Auto Connect with Hall Switch
- ⑩ Featherlight Design – Only 4g per Earbud
- ⑪ Bluetooth 5.3 for Stable, Fast Connection
- ⑫ IPX5 Water & Sweat Resistant

Safety Guidelines:

- Please refrain from dismantling the product or attempting to remove its battery. Such actions can pose a fire hazard or cause electrical malfunctions. Seek the services of a qualified technician or manufacturer for any necessary maintenance or repairs
- When cleaning the earbuds, exercise caution by using a damp, soft cloth. Avoid using any oily or volatile liquids for cleaning purposes. Additionally, ensure that the earphones are kept away from extreme temperature conditions, both hot and cold.
- Please be aware that any damage to the earbuds that is not attributed to a manufacturing defect will render the product's warranty null and void.
- Do not wear them in situations where it is unsafe, such as when operating a vehicle, crossing streets, or engaging in activities requiring full situational awareness.
- To safeguard your hearing, ensure that the volume on your music player is set at an appropriate level when using the earphones. Prolonged exposure to high noise levels can gradually lead to hearing impairment.
- Do not wear the earbuds for a long period of time as it can lead to possible hearing loss or major hearable issues.

ACwO DwOTS Flow

Kindly Note -

- Please take off the sticker peels attached below the earbuds before you charge them.
- Charge the charging case and the ACwO DwOTS Flow Wireless Earbuds at least 70% before the first usage.

Charging:

Charging Case:

- Connect the type-c charging cable to the charging case to charge your ACwO DwOTS Flow Wireless Earbuds.

Earbuds:

- Before use remove the blue protective film on the earbuds. Place the earbuds in the charged Charging Case to charge the ACwO DwOTS Flow Wireless Earbuds.

Bluetooth Pairing Process:

1. Take out the ACwO DwOTS Flow Earbuds from the Charging Case and place them in your ears.
2. Go to the Bluetooth settings of your device and switch it on.
3. Scan available devices.
4. Search For " ACwO DwOTS Flow " from the list of available devices.
5. Pair " ACwO DwOTS Flow " from the list and your Earbuds will be connected.

Once you've completed the initial pairing process, the ACwO DwOTS Flow will connect seamlessly to your device every time you open the charging case.

Kindly Note - If the earbuds are not in use and are left outside the charging case, they will automatically turn off after approximately 5 minutes.

Bluetooth Reset Process: ACwO DwOTS Flow

1. In case your earbuds encounter pairing issues or if only one earbud is functioning, you can easily perform a reset.
2. Clear all Bluetooth data named " ACwO DwOTS Flow " from your device and disable Bluetooth.
3. Place the earbuds back into their charging case and then remove them to initiate the Bluetooth pairing process once more.

How To Use Your ACwO DwOTS Flow ?

ACwO DwOTS Flow: The Multi-Functional Touch Area, often referred to as the "Touch Area," is situated on the upper section of the Earbud Extension.

Smart Functions ACwO DwOTS Flow

Play/Pause:

- Tap once on the Multi-Function Touch Area of either earbud extension.

Next Track:

- Double Tap on the Multi-Function Touch Area of the right earbud extension.

Previous Track:

- Double Tap on the Multi-Function Touch Area of the left earbud extension.

Switch Between Modes:

- Press and hold the Multi-Function Touch Area on either earbud extension for 4 seconds, then release

Activate Voice Assistant::

- Tap five times on the Multi-Function Touch Area of either earbud extension.

Increase Volume:

- Triple Tap on the Multi-Function Touch Area of the right earbud extension.

Decrease Volume:

- Triple Tap on the Multi-Function Touch Area of the left earbud extension.

Answer Calls:

- Single Tap on the Multi-Function Touch Area of either earbud extension.

Hang Up Calls:

- Single Tap & Hold on the Multi-Function Touch Area of either earbud extension.

Decline Calls:

- Tap & Hold on the Multi-Function Touch Area of either earbud extension.

One need not activate Environmental Noise Cancellation as the built-in mic is already equipped with the same and activated by default to make your conversations smoother and clear without any disturbances, no matter how noisy your environment is.