


ACWVO®



EARBUDS

DWOTS X PRO

Manual

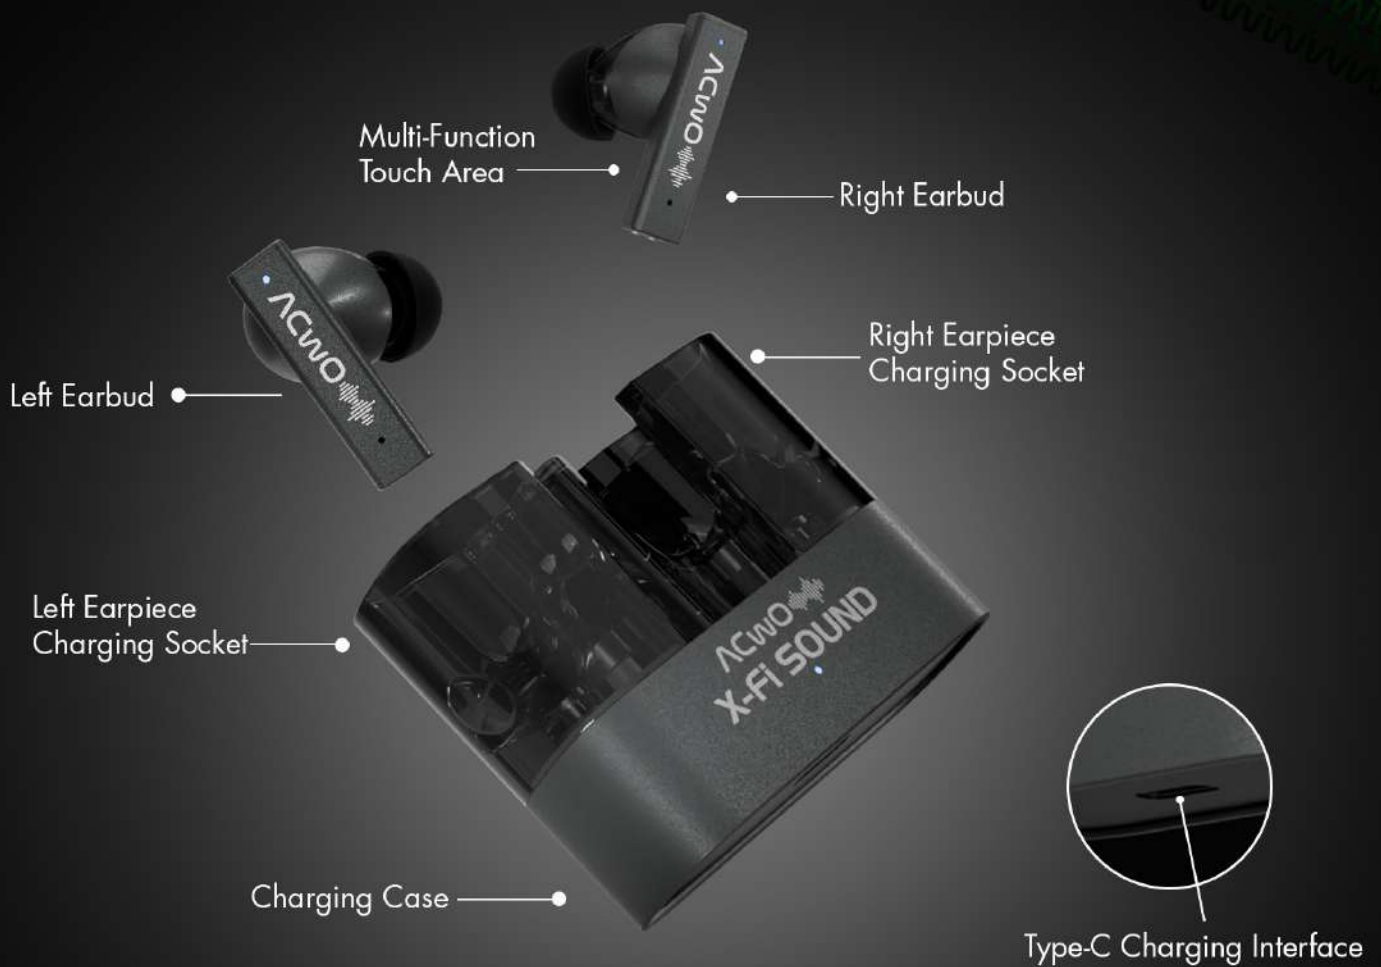

Appearance:

- ❶ Left Earbud
- ❷ Right Earbud
- ❸ Charging Case
- ❹ Left Earpiece Charging Socket
- ❺ Right Earpiece Charging Socket
- ❻ Type-C Charging Interface
- ❼ Multi-Function Touch Area

What You Will Find In The ACwO Box?

- ① Charging Case
- ② Pair of TWS Earbuds
- ③ Type-C Charging Cable
- ④ Scan Me Card
- ⑤ Comfortable Ear Tips

Product Features:

- ① X-Fi Sound Technology
- ② 13mm PU + PEEK Dual-Layer Composite Diaphragm Drivers
- ③ 32dB Advanced Active Noise Cancellation (ANC)
- ④ Open Case Design
- ⑤ Forged Zinc Alloy Metallic Case
- ⑥ AI-ENC Technology for Clear Calls
- ⑦ Rich Bass, Clear Mids, Crisp Highs
- ⑧ 2 Preset EQ Modes: Bass & Cinematic
- ⑨ 50 Hours Playtime
- ⑩ Bluetooth 5.3
- ⑪ Instant Auto Connect with Hall Switch
- ⑫ IPX5 Water & Sweat Resistant
- ⑬ In-Ear Design
- ⑭ HYPERBOOST™: 10 Minutes Charging = 120 Minutes Playtime
- ⑮ Gaming Ready with Super Low Latency up to 40ms

Safety Guidelines:

- Please refrain from dismantling the product or attempting to remove its battery. Such actions can pose a fire hazard or cause electrical malfunctions. Seek the services of a qualified technician or the manufacturer for any necessary maintenance or repairs.
- When cleaning the earbuds, exercise caution by using a damp, soft cloth. Avoid using any oily or volatile liquids for cleaning purposes. Additionally, ensure that the earphones are kept away from extreme temperature conditions, both hot and cold.
- Please be aware that any damage to the earbuds that is not attributed to a manufacturing defect will render the product's warranty null and void.
- Do not wear them in situations where it is unsafe, such as when operating a vehicle, crossing streets, or engaging in activities requiring full situational awareness.
- To safeguard your hearing, ensure that the volume on your music player is set at an appropriate level when using the earphones. Prolonged exposure to high noise levels can gradually lead to hearing impairment.
- Do not wear the earbuds for a long period of time as it can lead to possible hearing loss or major hearable issues.

ACwO DwOTS X PRO

Kindly Note -

- Please take off the sticker peels attached below the earbuds before you charge them.
- Charge the charging case and the ACwO DwOTS X PRO Wireless Earbuds at least 70% before the first usage.

Charging:

Charging Case:

- Connect the type-c charging cable to the charging case to charge your ACwO DwOTS X PRO Wireless Earbuds.

Earbuds:

- Place the earbuds in the charged Charging Case to charge the ACwO DwOTS X PRO Wireless Earbuds.

Bluetooth Pairing Process:

1. Take out the ACwO DwOTS X PRO Earbuds from the Charging Case and place them in your ears.
2. Go to the Bluetooth settings of your device and switch it on.
3. Scan available devices.
4. Search For "ACwO DwOTS X PRO" from the list of available devices.
5. Pair "ACwO DwOTS X PRO" from the list and your Earbuds will be connected.

Once you've completed the initial pairing process, the ACwO DwOTS X PRO will connect seamlessly to your device every time you open the charging case.

Kindly Note - If the earbuds are not in use and are left outside the charging case, they will automatically turn off after approximately 5 minutes.

Bluetooth Reset Process: ACwO DwOTS X PRO

1. In case your earbuds encounter pairing issues or if only one earbud is functioning, you can easily perform a reset.
2. Clear all Bluetooth data named "ACwO DwOTS X PRO" from your device and disable bluetooth.
3. Place the earbuds back into their charging case and then remove them to initiate the Bluetooth pairing process once more.

How To Use Your ACwO DwOTS X PRO?

DwOTS X PRO: The Multi-Functional Touch Area, often referred to as the "Touch Area," is situated on the upper section of the earbud's handle.

Smart Functions ACwO DwOTS X PRO

Play/Pause:

- Tap once on the Multi-Function Touch Area of either earbud.

Next Track:

- Double Tap on the Multi-Function Touch Area of the right earbud.

Previous Track:

- Double Tap on the Multi-Function Touch Area of the left earbud.

Switch Between ANC & Transparency Modes:

- Press and hold the Multi-Function Touch Area of the right earbud for 3 seconds, then release.

Switch Between Modes:

- Press and hold the Multi-Function Touch Area of the left earbud for 3 seconds, then release.

Activate Voice Assistant::

- Tap five times on the Multi-Function Touch Area of either earbud.

Increase Volume:

- Triple Tap on the Multi-Function Touch Area of the right earbud.

Decrease Volume:

- Triple Tap on the Multi-Function Touch Area of the left earbud.

Answer Calls:

- Single Tap on the Multi-Function Touch Area of either earbud.

Hang Up Calls:

- Single Tap & Hold on the Multi-Function Touch Area of either earbud.

Decline Calls:

- Tap & Hold on the Multi-Function Touch Area of either earbud.

One need not activate Environmental Noise Cancellation as the built-in mic is already equipped with the same and activated by default to make your conversations smoother and clear without any disturbances no matter how noisy your environment is.