

## ROCKERZ 80 PRO



USER MANUAL

boat


## ROCKERZ 80 PRO

Thank you for choosing boAt Rockerz 80 Pro. This manual is meant to guide you through the functionality of the wireless earphone neckband. Knowledge of Bluetooth and device connection is essential for the usage of the headset. Therefore, we strongly advise that this manual is thoroughly read before use, and referred to in times of difficulty, so that you can always be easily guided towards the shores of musical bliss.

### PACKAGE CONTENTS

- 1 x Rockerz 80 Pro
- 1 x USB Type C charging cable
- 2 x Pairs of additional earmuffs (Small & Large)
- 1 x Manual
- 1 x Catalogue
- 1 x Warranty Card

### PRODUCT OVERVIEW

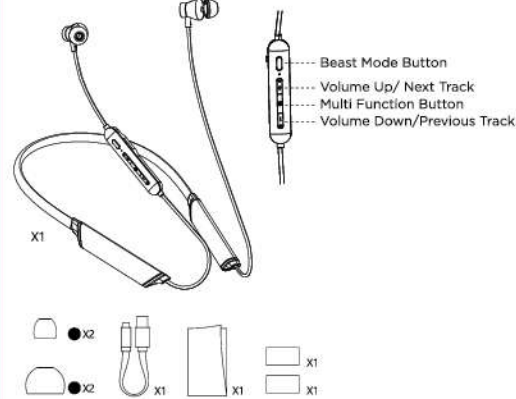

### TO PAIR WITH BLUETOOTH

(1) When switched off, separate left and right earbuds to switch on the wireless neckband and put them into pairing mode. The earphones automatically enter pairing mode with blue and red LED flashes alternatively to indicate the same.

(2) Open Bluetooth functionality on your media device and search for "Rockerz 80 Pro" from the list of available devices.

(3) Choose "Rockerz 80 Pro" from the list and if asked for a passcode, enter the pairing code "0000" to establish Bluetooth connectivity.

(4) Once successfully connected, the blue LED flashes once every 5 seconds to indicate the same

*Note: The wireless neckband automatically turns off if there is no pairing established in 5 minutes.*



Front

### FUNCTIONALITIES

- (1) **Power On:** When switched off, separate both the earbuds from each other. Blue LED flashes to indicate the same.
- (2) **Power Off:** In powered on state, unite both the earbuds together.
- (3) **Play/Pause:** Short press the MFB (Multi-function Button) to play/pause music at your convenience.
- (4) **Volume Up:** Short press the Volume Up "+" button in steps to increase the volume. A voice prompt indicates maximum volume.
- (5) **Volume Down:** Short press the Volume Down "-" button in steps to decrease the volume.
- (6) **Answer/End call:** Short press the MFB once when answering or ending a call to complete the action.
- (7) **Reject call:** Double press the MFB during an incoming call to reject the call.
- (8) **Previous Track:** To go back to the previous track or start the track from beginning, press and hold the Volume Down "-" button for 2 seconds.
- (9) **Next Track:** To skip to the next track, press and hold the Volume Up "+" button for 2 seconds.
- (10) **Reset Device (Clear Paired List):** Press and hold the MFB and Volume Down buttons simultaneously for 5 seconds to clear the list of paired devices. Purple LED flash for a second to indicate the same and then the device enters into pairing mode.

(1) **Dual Pairing:** To connect Rockerz 80 Pro to two devices simultaneously, firstly connect the earphones to one of the devices. Then, switch off the device's Bluetooth. Thereafter, connect the earphone to the second device, and again switch on the first device's Bluetooth. The earphone gets connected to both devices. If not, connect the first device manually once again to activate dual pairing

### BEAST™ MODE

Short press the BEAST Mode button to switch to Low Latency mode, also known as the BEAST™ Mode. Once switched on, it gets notified via a sound prompt. Short press the BEAST Mode button again to turn it off and return to normal music mode.  
*Made for the Gamers - By Gamers, BEAST™ Mode reduces the latency significantly and improves the overall gaming experience.*

### ENx™ TECH

Our ENx™ tech algorithm cancels out the background noise so that you can be heard crystal clear via voice calls. One need not activate ENx™ as the mic is equipped with the same and activated by default.  
*Deliver your voice without interruptions anywhere - traffic, railway stations, airports, work space; literally anywhere!*

### VOICE ASSISTANT

Double press the MFB to wake up default smart voice assistant.  
*Note: If the voice assistant doesn't get triggered then the functionality has to be first enabled by your media device.*

### TO CHARGE

Use the provided USB Type C charging cable to charge the earphones through either laptop / adaptor/ powerbank.

- (1) **Low Battery:** When the remaining battery is below 20%, there is a 'Battery Low' prompt every few minutes and red LED quickly flashes to indicate the same.
- (2) **Charging:** Solid red LED indicates that the earphone is being charged (please note that the earphone cannot / should not be turned on while charging).
- (3) **Fully charged:** The LED turns off, indicating the same.

### SPECIFICATIONS

|                   |                             |
|-------------------|-----------------------------|
| Bluetooth Version | V5.2                        |
| Operating Range   | 10m                         |
| Frequency         | 20Hz-20kHz                  |
| Driver Size       | 10mm*2                      |
| Battery           | 440mAh                      |
| Talk time         | Up to 80 hours              |
| Music time        | Up to 80 hours (at 60% vol) |
| Bluetooth Profile | HFP/HSP/A2DP/AVRCP          |
| Charging Time     | About 1 hour                |
| Charge Interface  | USB Type C                  |
| BEAST Mode        | Yes                         |
| Low Latency       | About 60ms                  |
| ASAP Charge       | Yes                         |
| Water Resistance  | IPX4                        |

### SAFETY CAUTIONS

- Please don't dismantle the product in any way or remove the product's battery by yourself, as this can lead to a fire or electrical breakdown. Any maintenance or servicing of the earphones should be done only through a qualified service provider/manufacturer.
- Please clean the earphones with the utmost of care with only a damp, soft cloth, if cleaning is required. Please do not use any oily volatile liquid. In addition, ensure that the earphones are kept away from extremely hot or cold substances.
- Any damage to the earphones that is NOT a manufacturing issue will make the products warranty null and void.
- Do not use earphones when it is unsafe to be wearing them, such as while operating a vehicle, crossing a street, or during any activity where full awareness of your surroundings is required.
- To avoid damage to your hearing, make sure that the volume on your music player is at an appropriate level when you are putting on the earphone. Exposure to any noise levels at or above 85 dB can gradually lead to a loss of hearing.

### CHARGING NORMS & PRECAUTIONARY GUIDELINES: -

- 1) Charger/Brick/Adapter : 5V/2A
- 2) Cable/Wire: Standard Cable (35 strands @0.10mm diameter/ strand)  
Any other accessory can be paired up with the product as long as the specifications are as per above norms.

Back