

Wireless Speaker

Reference Guide
Panduan Rujukan
参考指南

คู่มืออ้างอิง
كتاب مراعي

ULT FIELD 7

Model: YY7858E



©2024 Sony Corporation
Printed in China
https://www.sony.net/



* 5 0 5 6 5 3 1 6 2 * (1)

English Wireless Speaker

Model: YY7858E

The term "product" in this document refers to the unit or its accessories.

CAUTION: To avoid deterioration of the water-resistant performance, make sure that the cap is closed completely when using the unit.

Do not install the product in a confined space, such as a bookcase or built-in cabinet.

Install the unit so that the power cord can be unplugged from the wall socket immediately in the event of trouble.

The unit is not disconnected from the AC power source (mains) as long as it is connected to the wall outlet, even if the unit itself has been turned off.

Do not expose the batteries (battery pack or batteries installed) to excessive heat, such as sunshine, fire or the like, for a long time.

Do not subject the batteries to extreme low temperature conditions that may result in overheating and thermal runaway.

Do not dismantle, open, or shred secondary batteries.

In the event of a secondary battery leaking, do not allow the liquid to come in contact with the skin or eyes. If contact has been made, wash the affected area with copious amounts of water and seek medical advice.

Secondary batteries need to be charged before use. Always refer to the manufacturer's instructions or product manual for proper charging instructions.

After extended periods of storage, it may be necessary to charge and discharge the secondary batteries several times to obtain maximum performance.

Dispose of properly.

Do not expose the unit to naked flame sources (for example, lighted candles).

This unit has been tested and found to comply with the limits set out in the EMC regulation using a connection cable shorter than 3 m.

This product has magnet(s) which may interfere with pacemakers, programmable shunt valves for hydrocephalus treatment, or other medical devices. Do not place this product close to persons who use such medical devices. Consult your doctor before using this product if you use any such medical device.

Inserting the USB plug or AC plug while it is wet may cause a short circuit due to foreign matter or liquid (tap water, seawater, soft drinks, etc.) getting on the main unit or charging cable.

This may cause malfunctions or abnormal overheating.

Never insert the USB plug or AC plug while the main unit or charging cable is wet.

Licenses

- This product contains software that Sony uses under a licensing agreement with the owner of its copyright. We are obligated to announce the contents of the agreement to customers under the requirement by the owner of copyright for the software. Please access the following URL and read the contents of the license.
- https://rd1.sony.net/help/speaker/sl/24/
- This product is protected by certain intellectual property rights of Microsoft Corporation. Use or distribution of such technology outside of this product is prohibited without a license from Microsoft or an authorized Microsoft subsidiary.
- Services offered by third parties may be changed, suspended, or terminated without prior notice. Sony does not bear any responsibility in these sorts of situations.

Notes on waterproof and dustproof features (Read before using the unit)

The supplied accessories are neither waterproof nor dustproof.

On waterproof and dustproof performance of the unit

The unit, with the cap fastened securely, has a waterproof specification of IPX7 as specified in "Degree of protection against water immersion" of the IEC60529 "Ingress Protection Rating (IP Code)", and a dustproof specification of IP6X as specified in "Degrees of protection against solid foreign objects".

The supplied accessories and the connectors of this unit (AC IN, USB, AUDIO IN, MIC) are neither waterproof nor dustproof. To reduce the risk of fires or electric shocks, do not expose the unit to water or droplets while using any connectors (AC IN, USB, AUDIO IN, MIC).

Note that malfunctions as a result of water immersion or dust intrusion caused by misuse by the customer are not covered by the warranty.

To maintain waterproof and dustproof performance

Carefully note the precautions below to ensure proper use of the unit.

• Do not pour hot-temperature water or blow hot air from a hair dryer or any other appliance on the unit directly. Also never use the unit in a place subject to high temperatures, such as in a sauna or a heat source.

CAUTION: Handle the cap with care. The cap plays a very important role in maintenance of the waterproof and dustproof performance. When using the unit, make sure that the cap is closed completely. When closing the cap, be careful not to allow foreign objects inside. If the cap is not closed completely the waterproof and dustproof performance may deteriorate and may cause a malfunction of the unit as a result of water or dust particles entering the unit.

Passive radiator

Cap

• Do not expose the unit to direct sunlight or lighting equipment, near a heat source, or in a sauna.

• Inside a vehicle with the windows closed (especially in summertime).

• A place exposed to hot air, such as from a hair dryer.

• Place this unit on a flat, level surface. When placed on a sloped surface, the unit may fall over or fall off the surface due to its own vibration, resulting in injuries, malfunctions, or performance degradation.

• This unit is not anti-magnetic. Keep objects susceptible to magnetism (recorded tapes, watches, cash cards and credit cards with magnetic coding, etc.) away from the unit. When you carry around the unit, keep this in mind as well.

How to care for the unit

Although the fabric part of the unit has water repellent treatment applied, you can use the unit more comfortably and for a longer period of time by following the maintenance procedure below.

• If the surface of the unit gets dirty in the following cases, wash the unit with fresh water (tap water, etc.) promptly to remove the dirt. Leaving dirt on its surface may cause the fabric part or the passive radiator section to discolor or deteriorate, or the unit to malfunction.

Ex.

- When the unit has sand, salt (chlorine), or other residue on it after having been used in a mountain area, by a swimming pool, etc.

- When the unit is stained with foreign substances (sunscreen, suntan oil, etc.).

Note

• If the surface of the unit gets dirty, do not use detergent, thinner, benzine, alcohol, etc. to clean the unit because it will affect the water repellent function of the fabric part of the unit.

• If sand grains, etc. enter the fabric or other part of the unit, remove them carefully. Never use a vacuum cleaner, etc. on the unit. It may cause damage of the speaker section or other part of the unit.

Other notes

• Do not use or leave the unit in an extremely cold or hot environment (temperature outside the range of 5°C ~ 35°C). If the unit is used or left in outside the above range, the unit may automatically stop to protect internal circuitry.

• Even if you do not intend to use the unit for a long time, charge the battery to its full capacity once every 6 months to maintain its performance.

• If your skin remains in contact with the handle for a long time while the light is turned on, there is a risk of heat temperature burns. To carry a speaker while it is powered on, turn the light (lighting function) off.

• If you have any questions or problems concerning this unit that are not covered in this manual, please consult your nearest Sony dealer.

Trademarks

• Microsoft and Windows are registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries.

• The BLUETOOTH® word mark and logo are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Sony Group Corporation and its subsidiaries is under license.

• LDAC and LDAC logo are trademarks of Sony Group Corporation or its affiliates.

All other trademarks and registered trademarks are trademarks or registered trademarks of their respective holders. In this manual,™ and ® marks are not specified.

Specifications

BLUETOOTH®

Frequency band 2.4 GHz band (2.400 0 GHz - 2.483 5 GHz)

General

Inputs • Type A USB port: Supported USB Device (Mass Storage Class)

• AUDIO IN jack (Φ 3.5 mm)

• MIC/GUITAR jack (Φ 6.3 mm)

DC OUT

Type A USB port (for charging the battery of a connected device) (DC 5 V/MAX. 1.5 A)

Power

AC 120 V - 240 V, 50/60 Hz or, using built-in lithium-ion battery

Power consumption

Approx. 45 W

Standby power consumption

When BLUETOOTH standby mode is set to on: 2 W or less

When BLUETOOTH standby mode is set to off: 0.5 W or less

Lithium-ion battery life (while Battery Care mode*1 is not activated)

With playback via a BLUETOOTH connection

Approx. 30 hours*

- Volume level: 16

- Sound: ULT1/2 on

- Lighting: off

Approx. 25 hours*

- Volume level: 16

- Sound: ULT1/2 on

- Lighting: on

Approx. 3 hours*

- Volume level: 50 (MAX.)

- Sound: ULT1/2 on

- Lighting: on

Time required for charging the built-in rechargeable battery (while Battery Care mode*1 is not activated)

Approx. 5 hours*

- 10 minutes of charging provide approximately 3 hours*2 of music playback.

(Volume level: 16 / Sound: ULT1/2 on / Lighting: off)

Operating temperatures

5°C ~ 35°C

Dimensions (including projecting parts and controls)

Approx. 512 mm × 224 mm × 222 mm (w/h/d)

Mass (including battery)

Approx. 6.3 kg

Included items

Wireless Speaker (1)

AC power cord (mains lead) (1)

AC plug adaptor (1)

Documents (1 set)

* Mode for prolonging the durability life of the built-in rechargeable battery by limiting the charging capacity up to approximately 90%. The unit in this mode is capable of playing for a shorter period of time than stated.

*2 The built-in battery life above is measured using our specified music source. Actual performance time may vary from the listed time due to the volume, songs played, surrounding temperature, and usage conditions.

*3 Time required for the empty battery to be fully charged (100%) while the unit is powered off.

Design and specifications are subject to change without notice.

Bahasa Melayu

Pembesar Suara Tanpa Wayar

Model: YY7858E

Istilah "produk" dalam dokumen ini merujuk kepada unit atau aksesori.



AWAS: Untuk mengelakkan kemerosotan prestasi kalis air, pastikan penutup ditutup sepenuhnya semasa menggunakan unit.

Jangan pasangkan produk di dalam ruang yang terkurnik seperti almari buku atau kabinet terbina dalam.

Pasang unit dalam keadaan kord kuasa boleh dicabut palamna dari soket dengan serta-merta sekiranya berlaku masalah.

Unit tidak diputuskan sambungan daripada sumber kuasa AC (sesulur kuasa) selagi ia disambungkan ke saluran kejuruteraan, walaupun unit itu sendiri telah dimatikan.

Jangan dedahkan bateri (pek bateri atau bateri yang dipasang) kepada haba berlebihan, seperti cahaya matarai, api atau seumpama untuk jangka masa yang lama.

Jangan letakkan bateri dalam keadaan suhu rendah yang melampau yang boleh menyebabkan pemanasan lampau dan larian tema.

Jangan cerakan, buka atau cincang bateri sekunder.

Sekiranya bateri sekunder bocor, jangan biarkan cecair tersebut pada kulit atau mata. Sekiranya terkena, basuh kawasan yang terkena dengan air yang banyak dan dapatkan nasihat perubatan.

Bateri sekunder perlu dicuci sebagaimana dituduh. Sentiasa rujuk arahan pengeluar atau manual produk untuk arahan pencegahan yang betul.

Selepas tempo penyimpanan yang lama, anda mungkin perlu mengelaskan dan menyahasarkan bateri sekunder beberapa kali untuk mendapatkan prestasi yang maksimum.

Lupusukan dengan cara yang betul.

Jangan dedahkan unit kepada sumber nyalaan terdedah (contohnya, liliun yang dinyalakan).

Unit telah diuji dan dipastikan mematuhi had yang ditetapkan dalam peraturan EMC menggunakan kabel sambungan yang lebih pendek daripada 3 m.

Produk ini mempunyai magnet yang mungkin mengganggu perantekan jalinan, injap pintasan boleh dilakukan oleh pemilik hak cipta perisian. Kami mempunyai komitmen untuk menjelaskan kandungan perjanjian kepada pelanggan sebagai syarat oleh pemilik hak cipta perisian. Sila akses URL berikut dan baca kandungan lesen.

https://rd1.sony.net/help/speaker/sl/24/

• Produk ini dilindungi oleh hak harta intelektual tertentu Microsoft Corporation. Penggunaan atau pengedaran teknologi tersebut di luar produk ini adalah dilarang tanpa lesen daripada Microsoft atau anak syarikat Microsoft yang dibenarkan.

• Perkhidmatan yang ditawarkan oleh pihak ketiga boleh ditukar, digantung atau ditamatkan tanpa notis terlebih dahulu. Sony tidak bertanggungjawab ke atas situasi seperti ini.

