

aiwa

Exos 5 Wireless Speaker



 
 **Bluetooth®**

SAFETY PRECAUTIONS

1. READ AND FOLLOW ALL INSTRUCTIONS. HEED ALL WARNINGS .

2. Do not use device near water.
3. Clean only with dry cloth.
4. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
5. Do not install near any heat sources such as radiators, heat registers, stoves, or other devices (including amplifiers) that produce heat.
6. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
7. Protect the power cord from being walked on or applied force that may bend the plugs, prongs, wires or device entry points.
8. Only use attachments/accessories specified by the manufacturer.
9. Unplug this device during lightning storms or when unused for a long period of time.
10. This appliance shall not be exposed to dripping or splashing water and that no object filled with liquids such as vases shall be placed on or next to the device.
11. Do not overload wall outlet. Only use power source as indicated.
12. Use replacement parts as specified by the manufacturer.
13. Upon completion of any service or repairs to this product, ask the service technician to perform safety checks.
14. Power Sources - This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply to your home, consult your product dealer or local power company. For products intended to operate from battery power, or other sources, refer to the operating instruction.
15. Object and Liquid Entry - Never push objects of any kind into this product through openings as they may touch dangerous voltage points or short-out parts that could result in a fire or electric shock. Never spill liquid of any kind on the product.
16. Damage Requiring Service - Unplug this product from the wall outlet and refer servicing to qualified service personnel under the following conditions:
 - a) When the power-supply cord or plug is damaged,
 - b) If liquid has been spilled, or objects have fallen into or onto the product.
 - c) If the product has been exposed to rain or water.
 - d) If the product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions as an improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to its normal operation.
 - e) If the product has been dropped or damaged in any way.
 - f) When the product exhibits a distinct change in performance.
17. Disconnect plugs completely from sockets.
18. Do not expose batteries to excessive heat.
19. Excessive sound pressure from earphones and headphone can cause hearing loss.
20. Keep external objects away at a minimum distance of 4 inches around the device for sufficient ventilation.
21. The ventilation should not be impeded by covering the ventilation openings with items, such as newspapers, table-cloths, curtains, etc.
22. No naked flame sources, such as lighted candles, should be placed on or next to the device.
23. Dispose batteries properly based on local laws and regulations.

TO PREVENT FIRE OR SHOCK HAZARD, DO NOT USE THIS PLUG WITH AN EXTENSION CORD, RECEPTACLE OR OTHER OUTLET UNLESS THE BLADES CAN BE FULLY INSERTED TO PREVENT BLADE EXPOSURE. TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

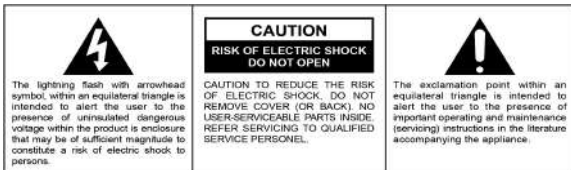

SAFETY PRECAUTIONS CONT.

FOLLOW THE ADVICE BELOW FOR SAFE OPERATIONS

ON PLACEMENT

- Do not use the device in places which are extremely hot, cold, dusty or humid.
- Place the device on a flat and even surface.
- Do not restrict the air-flow of the unit by placing it in a place with poor ventilation, by covering it with a cloth or by placing it on a carpet.

ON CONDENSATION

- When left in a warm and damp room, water droplets or condensation may form inside of the device.
- When there is condensation inside of the device, it may not function normally. Let it standby for 1 to 2 hours before turning the power on, or gradually heat the room up and dry the device before use.

 
Should any trouble occur, remove the power source and refer servicing to qualified personnel.

WHAT'S INCLUDED

- AI6008 Exos Wireless speaker
- USB-C Power Adapter
- FM Antenna Cable
- 3.5mm AUX Cable
- Remote Control
- 2 AAA Batteries
- User Manual


YOUR REMOTE

BUTTON FUNCTIONS

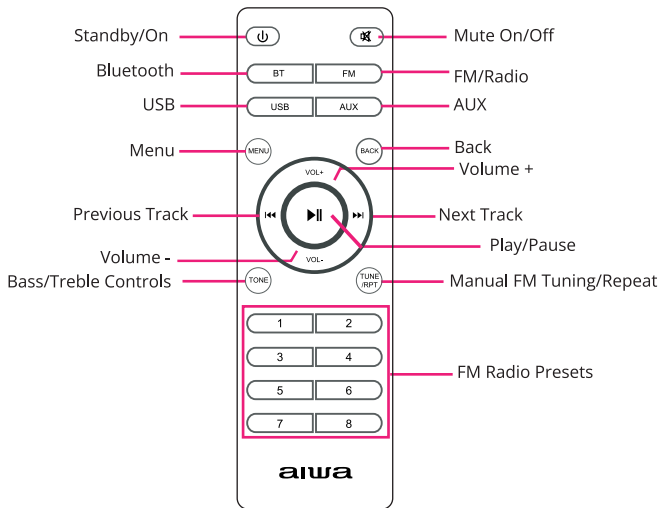

Inserting Batteries

 1. Your remote control takes 2 AAA batteries (included).
2. Open the battery compartment on the rear of your remote.
3. Insert batteries with the correct polarity (+,-).
4. Close the battery compartment.

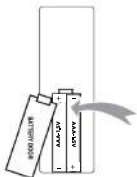



BATTERY WARNING:

- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickle-cadmium) batteries.
- Batteries are not to be inserted with the wrong polarity.
- Exhausted batteries are to be removed.
- The supply terminals are not to be short-circuited.

Please recycle or dispose of the battery properly. Contact local recycling facilities and/or the manufacturer of your battery for further information

YOUR SPEAKER

  BUTTON FUNCTIONS AND CONNECTIONS

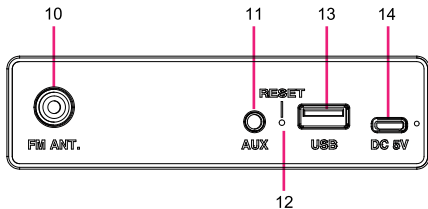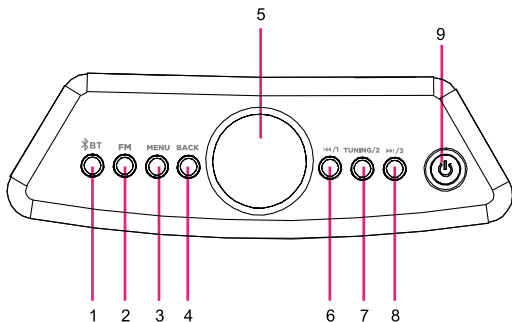

- | | |
|-----------------------------------|--------------------------------|
| 1. Bluetooth | 10. FM Antenna |
| 2. FM/Radio | (connect the included antenna) |
| 3. Menu | 11. AUX IN |
| 4. Back | 12. Reset Button |
| 5. Play/Pause/Volume Knob | 13. USB Port |
| 6. FM Preset 1/Previous | 14. Power input |
| 7. FM Preset 2/Manual Tuning Mode | |
| 8. FM Preset 3/Next | |
| 9. Standby/On | |

POWER

1. Insert the included USB-C power adapter into the power input located at the back of your speaker.
2. Plug the other end of the power adapter into a suitable power outlet.



USING YOUR REMOTE

Press the Standby/On button to go between Standby mode and On.

Press the Mute button to mute sound/music.

Press the AUX, Bluetooth, FM and USB buttons to choose mode.

Press the MENU button to enter menu.

Press the BACK button to return to the previous menu.

Press the ►|| button to pause or play in Bluetooth or USB playback mode.

Press the VOL- button to lower the volume.

Press the VOL+ button to raise the volume.

Press the ►► button to go to the next song.

Press the ◀◀ button to go to the previous song.

 
Press the TONE button to adjust the Bass & Treble.

Press the TUNE/RPT button to enter analog style manual tuning in FM mode or to repeat track in USB mode.

Press the 1-8 buttons to choose the corresponding radio preset.



QUICK GUIDE TO CONTROLS

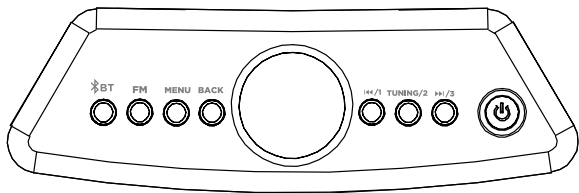

Press the Bluetooth button to turn on Bluetooth mode.

Press the FM button to turn on FM mode.

Press the MENU button to enter menu.

Press the BACK button to return to the previous menu.

Press the Play/Pause/Volume knob to:

Pause or play the track in Bluetooth or USB mode.

Mute sound on AUX or FM mode.

Confirm in menus.

Rotate the Play/Pause/Volume Knob to control volume.

Press the <1/2> |, 2 |Tune or >2/3 | buttons to select the first 3 presets in FM mode.

Press and hold the <1/2> | or 2 |Tune buttons to scan backwards/forwards in FM Mode.



Press and hold the 2 |Tune button to enter analog style manual tuning in FM mode.

Press the <1/2> | or >2/3 | buttons to skip back/forwards in Bluetooth or USB mode.

BLUETOOTH FUNCTION

The Bluetooth feature enables you to stream and play digital music from your Bluetooth enabled device to your speaker.

  1. With your speaker powered on, press the Bluetooth button to activate Bluetooth mode.
2. Go to the Bluetooth settings menu of your phone or Bluetooth compatible device and make sure Bluetooth is turned ON. Then, connect to the device listed as "AIWA Exos 5".

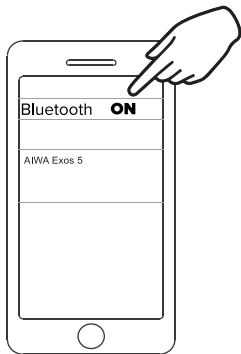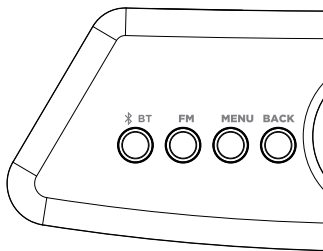

3. You can use the speaker, remote or the connected device to adjust the volume.

Note: To disconnect from a previously paired device and pair a new one, press and hold the volume knob in.

AUX IN FUNCTION

You can play other music sources (iPods, MP3 players or other analog sources) by connecting the AUX IN Jack to your external player's audio out jack or headphone jack.

1. Plug one end of a 3.5mm AUX cable (included) into the AUX IN Jack located on the rear of the speaker and the other end of the cable to the headphone jack of your source device.
2. Press the Menu button then select the LINE IN/AUX MODE.
3. Turn on and start playing the external device you plugged into the AUX IN Jack.
4. Slowly adjust both the volume controls of your unit and the external device until you reach a comfortable listening level.
5. Turn off both the external audio player and your speaker after use. Unplug the audio cable from AUX IN Jack.

USB FUNCTION

You can play music from a USB thumb drive. Plug a suitably formatted USB stick with music files on it into the rear USB socket. Note: The Exos 5 can play files in mp3, wav and flac formats.

The Exos 5 will scan the drive and start playback. If you change to another source you can also re-select USB playback via the Menus. Use the Play/Pause, Forward and Back buttons on the speaker and remote to control playback.

You can also use the USB port to charge devices that are compatible with a USB charging cable.

BASS/TREBLE

Select the BASS or TREBLE menu. Use the volume knob to turn up or down the Bass 12db at 100Hz, shelving) or Treble 12db at 10kHz), shelving.

FM RADIO FUNCTION

Press the FM/Radio button on your remote or speaker to enter FM/Radio Mode. Press the 1/>|, 2|Tune or 3/>| buttons to select the first 3 presets .

You can select more presets by using the numerical buttons on the remote or using the RECALL PRESET menu.

Press and hold the 1/|< or 2/>| buttons to scan backwards/forwards until the Exos 5 finds a strong signal.

Note: The FM antenna MUST be connected for FM operation.

SETTING YOUR RADIO PRESETS

1. To store a station as a preset , press the Menu button when in FM mode and select STORE PRESET MENU.
2. Scroll to the preset you wish to store the current station in, then press in the volume knob to confirm.

AUTOSTORE

In FM mode press and hold the volume knob in. The Exos 5 performs a scan of the FM band and stores the strongest signals it finds as presets.

ANALOG STYLE MANUAL TUNE MODE

Press and hold the 2|Tune button to engage manual analog style tuning mode. In this mode 'Tuning' appears in the display and you can use the volume knob to scroll up and down the tuning dial to any frequency. Press the volume knob in to exit manual tuning.

CLOCK/ALARM

SETTING THE TIME

1. Press the Menu button and select the CLOCK menu.
2. Use the volume knob to adjust the first item (hours) then press it in to store and move to the next item (minutes). AM/PM changes automatically when you roll over 12:00.
3. Do this for all items. The day is set automatically from the date.

SETTING AN ALARM

1. Press the Menu button and select the ALARM menu.
2. Use the volume knob to scroll and select one of 5 alarms you can set then press it into enter the setting menu.
3. Adjust the first item (hours) then press it in to store and move to the next item (minutes). AM/PM changes automatically when you roll over 12:00.
4. Set the day or range of days you want the alarm to sound for. Once means the alarm will sound then next time it's time is reached and then will not sound again.
5. You can turn On/Off any alarm also within this menu without losing its settings.

RESET SPEAKER

Reset your speaker to default settings by pushing a pin into the reset button on your speaker.

CARE AND MAINTENANCE

1. Do not subject the unit to excessive force, shock, dust or extreme temperatures.
2. To prevent fire or shock hazard, disconnect your unit from the power source when cleaning.
3. Do not tamper with the internal components of the unit.
4. Clean your unit with a dry cloth. Solvents or detergents should never be used.
5. Avoid leaving your unit in direct sunlight or in hot, humid or dusty places.
6. Keep your unit away from heating appliances and sources of electrical noise such as fluorescent lamps or motors.

CAUTION: Never allow any water or other liquids to get inside the unit while cleaning.

FCC STATEMENT

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

SPECIFICATIONS

Speaker Dimensions: 34x18.9x11.2 cm

Driver Units: 2x4"

Audio Output Power: 20W

USB-A Output: 5V \equiv 1A

Type-C Input: 5V \equiv 2A

UL Adapter Cable Length: 110 cm

*Note: specifications may change due to factory model or system upgrades

WARRANTY

This warranty covers the original consumer purchaser only and is not transferable.

This warranty covers products that fail to function properly UNDER NORMAL USAGE, due to defects in material or workmanship. Your product will be repaired or replaced at no charge for parts or labor for a period of one year.

What Is Not Covered By Warranty

Damages or malfunctions not resulting from defects in material or workmanship and damages or malfunctions from other than normal use, including but limited to, repair by unauthorized parties, tampering, modification or accident.

To Obtain Warranty Service and Troubleshooting Information:

Call (877) 397-8200 or visit our website at www.aiwa.com.

To receive Warranty service along with the name and address of an authorized product service center, the original consumer purchaser must contact us for problem determination and service procedures. Proof of purchase in the form of a bill of sale or receipted invoice, evidencing that the product is within the applicable Warranty period(s), MUST be presented in order to obtain the requested service. It is your responsibility to properly package and send any defective products along with a dated copy of proof of purchase, a written explanation of the problem, and a valid return address of the authorized service center at your expense. Do not include any other items or accessories with the defective product. Any products received by the authorized service center that are not covered by warranty will be returned unrepai red.

