

ROCKERZ 400 PRO



boat

ROCKERZ 400 PRO

Thank you for choosing boAt Rockerz 400 Pro. This manual is meant to guide you through to the shores of Nirvana without much difficulty. Please think of this manual as your map. Knowledge of Bluetooth and device connection is essential for steering this boAt. Therefore, we strongly advise that this manual is thoroughly read before use, and referred to in times of difficulty.



PACKAGE CONTENTS

- 1 x boAt Rockerz 400 Pro
- 1 x USB Type-C Charging Cable
- 1 x Aux Cable
- 1 x Manual
- 1 x Warranty Card

PRODUCT OVERVIEW



1. Aux Port
2. Type-C Port
3. Charging/Bluetooth LED
4. Volume -
5. Volume +
6. MFB (Multifunction Button)



Power On: Press and hold the MFB (Multifunction Button) for 3 seconds. The blue and red LEDs flash alternatively accompanied by a power prompt.

Power Off: Press and hold the MFB for 5 seconds. Red LED blinks once to indicate the device getting switched off.

BLUETOOTH CONNECTIVITY

1. Turn on the Bluetooth functionality in your phone and switch on Rockerz 400 Pro by long pressing the MFB for 3 seconds
2. In case if the headphone is not in pairing mode, then don't release the button and keep on long pressing the MFB for 5 seconds to turn on the Bluetooth pairing mode in the headphone, until the indicator starts blinking in blue and red colours alternatively.
3. Then, click on the headphones 'Rockerz 400 Pro' from the list of available devices after search
4. If asked for a passkey, confirm the passkey '0000' on phone
5. Once confirmed, the headphone and phone get connected via Bluetooth indicated by slowly flashing blue LED

Note: If there's a connection history between the phone and the headphone, then they will automatically get reconnected in a working range whenever the headphone gets switched on.

Front

BASIC FUNCTIONS

- Play: Short press the MFB once to play
- Pause: Short press the MFB once to pause
- Volume Up: Press Volume + button to increase volume
- Volume Down: Press Volume - button to decrease volume
- Next Track: Press & Hold Vol + button to skip to the next track
- Previous Track: Press & Hold Vol - button to return to previous track
- Answer Incoming Calls: Short press the MFB once
- Hang Up Ongoing Calls: Short press the MFB once
- Reject Calls: Double press the MFB
- Voice Assistant: Press and hold the MFB & Volume + buttons for 1 second
- BEAST™ Mode for Gaming: Double press the MFB to activate BEAST™ Mode for low latency. To switch back to Music mode, double press the BEAST™ Mode button again

Note: If the voice assistant doesn't get triggered, then the functionality has to be first enabled via your media device settings.

CHARGING NORMS & GUIDELINES

Charger/Adapter at 5V 2A & Standard Cable (35 strands @0.10mm diameter/strand)

CHARGING

- Connect one end of the provided cable to the USB Type-C port on the headset and the other end to a wall adapter or laptop
- While charging the indicator LED turns into steady red
- When the headphone is fully charged, the indicator switches off
- Use only authorized/company chargers for the headset, as unauthorized ones may damage the same and invalidate the warranty on the headset as well
- The headphones cannot be utilized for listening purposes while it is charging mode

Note: When the headphones are in low power state, then that gets indicated by slowly flashing red LED.

ENx™ TECH

Our ENx™ tech algorithm cancels out the background noise so that you can be heard crystal clear via voice calls. One need not activate ENx™ as the mic is equipped with the same and activated by default.

Deliver your voice without interruptions anywhere – traffic, railway stations, airports, work space; literally anywhere!

RESET

When the headphone is in the 'ON' state, press and hold the MFB and Vol - buttons simultaneously for 5 seconds
Note: Reset should be done in pairing mode.

OTHER FUNCTIONS

- If there's no connection established when the Bluetooth is switched on then the device powers off automatically after a while
- If you receive an incoming call during playing music, the music automatically disconnects. When the call is done and disconnected, the music starts to play automatically from where it left.

ANOMALIES & SOLUTIONS

- A. Mobile can't search the headset
- Check if the Bluetooth headset is powered on or off (When powered on, the LEDs blink with red and blue colours alternatively)
 - If it is powered on and the device still can't connect, then please reboot the Bluetooth device and the phone
- B. After connecting the headset with the phone, disconnection or noise occurs
- This may be due to the low power of the headset. Please charge the Bluetooth headset
 - There might be obstruction between the headset and the phone or the distance between them exceeds the maximum range for signal reception
- Voice Assistant support doesn't respond
- If the voice assistant doesn't get triggered, then the functionality has to be first enabled via your media device's settings.

SPECIFICATION:

Headphone Type	Bluetooth Headphones
Driver Size	40mm*2
HD Sound	Yes
THD	≤3% at 1kHz
Frequency Range	20Hz-20 KHz
SNR	≥90dB
Bluetooth Version	V5.3
Bluetooth Profile	A2DP, AVRCP, HFP, HID, AVCTP, AVDTP, SPP
Bluetooth Range	10m
Battery Capacity	300mAh
Playing Time	Up to 30 Hours (at 60%vol approx.)
Charging Time	1.5HRS
Standby Time	>300HRS
Charging Interface	USB Type-C
Mic Sensitivity	126dB±3dB
Charging Voltage	5V 2A
BEAST™ Mode	Yes
ENx™ Tech	Yes

SAFETY PRECAUTIONS

- This is not a toy. The children are advised to use this under adult supervision.
- Avoid exposing the device to extremely hot or cold temperatures.
- Avoid using the headphone for listening to full volumes to protect from hearing damage.
- Please do not use the device under thunder storms.
- Don't dismantle the product in any way.
- Please don't clean the product using oily volatile liquid.

Back