

boat

ROCKERZ 370 PRO

Pro. This manual is meant to guide you through to the shores of Nirvana without much difficulty.

Knowledge of Bluetooth and device connection is essential for steering this boAt. Therefore, we strongly advise that this manual is thoroughly read before use, and referred to in times of difficulty.



PACKAGE CONTENTS

- •1 x boAt Rockerz 370 Pro
- •1 x USB Type C Charging Cable •1 x Aux Cable

•1 x Manual •1 x Warranty Card

PRODUCT OVERVIEW





- 1. Type C Port 2. Charging/ Bluetooth LED
- 4. Volume +
- 5. MFB (Multifunction Button) 6. Volume -
- 8 Aux Port

7. Power ON&OFF/ BEAST Mode

Power On: Press and hold the Power ON/OFF Button for 3 seconds. The blue and red LEDs flash alternatively accompanied by a voice

Power Off: Press and hold the Power ON/OFF Button for 5 seconds. Red LED blinks once to indicate the device getting switched off.

BLUETOOTH CONNECTIVITY

1. Turn on the Bluetooth functionality in your phone and switch on Rockerz 370 Pro by long pressing the MFB for 3 seconds 2. In case if the headphone is not in pairing mode, then don't release the button and keep on long pressing the MFB for 5 seconds to turn on the Bluetooth pairing mode in the headphone, until the indicator starts blinking in blue and red colours alternatively.

- 3. Then, click on the headphones 'Rockerz 370 Pro' from the list of available devices after search
- 4. If asked for a passkey, confirm the passkey '0000' on phone 5. Once confirmed, the headphone and phone get connected via Bluetooth indicated by slowly flashing blue LED

Note: If there's a connection history between the phone and the headphone, then they will automatically get reconnected in a working range whenever the headphone gets switched on.

Front

BASIC FUNCTIONS

- · Redial: Triple press the MFB

- button to activate BEAST Mode for low latency playtime. To switch

CHARGING NORMS & GUIDELINES

CHARGING

- Connect one end of the provided cable to the USB Type C port on the headset and the other end to a wall adapter or laptop · While charging the indicator LED turns into steady red
- · When the headphone is fully charged, the indicator switches off · Use only authorized/company chargers for the headset, as
- unauthorized ones may damage the same and invalidate the warranty on the headset as well
- · The headphones cannot be utilized for listening purposes while it is charging mode

Note: When the headphones are in low power state, then that gets indicated by slowly flashing red LED.

DUAL PAIRING

To connect Rockerz 370 Pro to two devices simultaneously, firstly connect the earphone to one of the devices. Then, switch both the earphone and the device's Bluetooth off. Thereafter, connect the earphone to the second device, and again switch the first device on. The earphone gets connected to both devices. If not, connect the first device manually once again to activate dual pairing.

Our ENx™ tech algorithm cancels out the background noise so that you can be heard crystal clear via voice calls. One need not activate ENx™ as the mic is equipped with the same and activated by default.

Deliver your voice without interruptions anywhere - traffic, railway stations, airports, work space; literally anywhere!

RESET

When the headphone is in the 'ON' state, press and hold the Power ON/OFF Button and Vol - buttons simultaneously for 5 seconds Note: Reset should be done in pairing mode.

OTHER FUNCTIONS

- · If there's no connection established when the Bluetooth is switched on then the device powers off automatically after a while
- . If you receive an incoming call during playing music, the music automatically disconnects. When the call is done and disconnected, the music starts to play automatically from where it left.

ANOMALIES & SOLUTIONS

- A Mobile can't search the headset
- . Check if the Bluetooth headset is powered on or off (When powered on, the LEDs blink with red and blue colours alternatively)
- · If it is powered on and the device still can't connect, then please reboot the Bluetooth device and the phone
- B. After connecting the headset with the phone, disconnection or noise occurs
- . This may be due to the low power of the headset. Please charge the Bluetooth headset
- · There might be obstruction between the headset and the phone or the distance between them exceeds the maximum range for signal
- tant support doesn't respond
- · If the voice assistant doesn't get triggered, then the functionality has to be first enabled via your media device's settings.

SPECIFICATION:

Headphone Type	Bluetooth Headphones
Driver Size	40mm*2
HD Sound	Yes
THD	≤3% at 1kHz
Frequency Range	20Hz-20 KHz
SNR	≥90dB
Bluetooth Version	V5.3
Bluetooth Profile	A2DP,AVRCP,HFP,HID,AVCTP,AVDTP,SPP
Bluetooth Range	10m
Battery Capacity	500mAh
Playing Time	Up to 40 Hours (at 60%vol approx.)
Charging Time	1.5HRS
Standby Time	>300HRS
Charging Interface	USB Type C
Mic Sensitivity	120dB±3dB
Charging Voltage	5V 1A
Beast Mode	Yes
FNy Tech	Voc

SAFETY PRECAUTIONS