 



Specifications

Model	MadRabbit BOOM BAR
Product Name	MadRabbit BOXO BOOM BAR
Bluetooth Version	5.3
Bluetooth Range	10M (Without Obstacles)
Frequency Range	40Hz - 20KHz
Speaker Size	52mm x 2
Output Power	12W x 2 = 24W
Battery Capacity	2000mAh
Playtime	20 Hours
Charging Time	3 Hours
Charging Interface	Type-C
Support	TF Card / USB / AUX In & Out / Bluetooth / TWS
Dimensions	L 415 x W 60 x H 60 mm
Net Weight	784gms

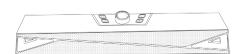

 
Know Your Soundbar

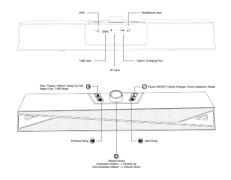

Charging the Soundbar

- . Fully charge the device before using the product for the first time.
- Connect the provided charging cable to the soundbar Type-C charging port and plug-in to a USB AC adapter.



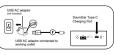

Getting Started: Power ON / OFF

- Long Press @'POWER' Button for 3 secs to Power ON the Soundbar.
- Long Press @'POWER' Button for 3 secs to Power OFF the Soundbar



AUX

The soundbar includes AUX-IN port. Simply connect the soundbar and your music player with the provided 3.5mm AUX cable. Successful connection can be noted when the LED indicator flashes blue.



TF CARD

The soundbar has a TF card slot. It can support a memory card of up to 256 GB.



USB MODE

To enable USB Mode, plug in your pen drive to the USB port in the soundbar





Bluetooth Pairing

Bluetooth Pairing with Your Smartphone, Laptop or Smart TV for the First Time:



- Turn ON the soundhar
- . On the backside of the soundbar, a Blue LED light will flash, indicating Pairing Mode.
- In your device's Bluetooth menu, scan for new devices and select 'MadRabbit BOOM BAR'.
 The flashing Blue LED light will stabilize, indicating a successful connection.
- When the soundbar is in Pairing Mode, it will automatically connect to the last paired device. To connect to another device, disconnect from the last paired device.
- To disconnect the soundbar from the paired device, long press the (R) button for 1.5 secs.

Auto OFF

When the soundbar is turned on and there is no connection or operation for 10 mins, it will automatically turn off.

LED INDICATOR

- Blue LED light flashes: Waiting for connection
- Blue LED light stabilizes: Successful Bluetooth connection
- Blue LED light flashes: AUX-IN connection
- · Red LED light stabilizes: Charging
- · Red LED light turns off: Charging Completed

Function

Button	Operating	Function Description
(M)	Long Press	Turn ON / OFF: Long Press for 3 secs.
		Reset: Long Press for 1.5 secs.
	Tap Once	Switch between Bluetooth and other connectivity modes.
	Tap Twice	Activate Voice Assistant.
	Tap Three Times	Turn ON / OFF: Knob LED Light.
	Tap Once	Music Playback Status: Tap Once to Play / Pause. Incoming Calls: Tap Once to Connect. When on a Call: Tap Once to Hang Up.
	Tap Twice	Incoming calls: Tap Twice to Reject. After a Recent Call: Tap Twice to Redial Automatically.
	Long Press	TWS Mode: Long Press for 1.5 secs.
(M)	Tap Once	Switch to Next Song.
(4d)	Tap Once	Switch to Previous Song.
(a)	Clockwise Rotation	Turn Up the Volume.
	Anti-clockwise Rotation	Turn Down the Volume.

TWS (Twin Speaker Pairing)



Pairing:

- Turn on both soundbars and keep them close
- Make sure they are not connected to any other Bluetooth devices.
- Long press the play / pause button on any one soundbar until you hear a sound.
- After that, you will hear another sound on both soundbars, indicating the soundbars are paired.
- 5. Now, you can simply connect your device to the soundbar and enjoy the TWS mode.

Unpairing:

- 1. Long press @play / pause button on any one of the connected soundbars.
- 2. You will hear a sound, indicating the soundbars are unpaired from TWS mode.

(FOR TWS MODE, YOU WILL NEED TO PURCHASE ANOTHER SOUNDBAR)

Safety Information

Before using and operating the soundbar, please read and follow the below precautions to ensure its best performance and to avoid dangerous or illegal situations.

Electronic Devices

Do not use this device in the place where wireless devices are prohibited, otherwise it will
interfere with other electronic devices or cause other dangers.

Medical Equipment Interference

- In medical and health care places where the usage of wireless devices are prohibited, please follow the rules and turn off the device.
 The radio waves generated by the device may affect the normal operation of implanted
 - or personal medical devices, such as pacemakers, cochlear implants, speaker aids, etc. If you use these medical devices, please consult the manufacturer for restrictions on the usage of this device.
- When using this device, kindly keep a distance of at least 15 cm from the implanted medical devices (such as pacemakers, cochlear implants, etc.)

Hearing Loss

- Listening to sound at high volume may permanently damage your hearing. When you use soundbar to listen to music or calls, it is recommended to use the minimum volume required to avoid hurting your hearing.
- · Exposure to high-level volume while driving may distract the driver and cause accidents.

Operating Environment

- Do not use the device in dusty, sharp, compact areas or near magnetic fields, etc., to avoid failure of the internal circuit of the device.
- · Preferably use the product in a typical indoor environment.
- When installing the device, please keep away from strong magnetic fields or electrical
 appliances with strong magnetic fields, such as ovens and refrigerators.
- Do not use the device in thunderstorm weather. It may cause equipment failure or electric shock hazard.



Safety Information

- Please use the device within a temperature range of -10 °C ~ +55 °C, and store the device and its accessories within a temperature range of -40 °C ~ +70 °C. When the ambient temperature is too high or too low, it may lead to device malfunction. When the temperature is below 5 °C. the performance of the battery is limited.
- . Do not place the device in direct sunlight, such as the dashboard or window sill of a car.
- Do not place the device near heating sources or exposed fire sources, such as electric heaters, ovens, water heaters, stoves, candles, or other places that generate high temperatures
 - Do not place sharp metal objects such as pins near the device's earpiece or speaker, as the metal objects may adhere and cause injury to you.

Child Health

- This device and its accessories may contain some small parts. Keep the device and its accessories in a place out of children's reach. Children may inadvertently damage the device and its accessories, or swallow small parts, causing suffocation or other hazards.
- . This device is not a toy, children should use this device under adult supervision.

Battery Safety

- Do not disassemble or modify the battery, or immerse in water or other liquids, to avoid battery leakage, fire or explosion.
- Do not drop, crush or puncture the battery. It can cause internal short circuits and overheating.
- This device is equipped with a non-removable built-in battery. Do not replace the battery
 yourself to avoid damage to the battery or device.
- Please dispose batteries in accordance with local regulations. Do not dispose batteries as household waste. Improper disposal of the battery may cause the battery to explode.

Charge Safety

- When charging the device, the power socket should be installed near the device and should be easily accessible.
- When charging is completed or when charger is not in use, disconnect the charger from the device and unplug the charger from the power outlet.

Environmental Protection

- Do not dispose this device and its accessories as ordinary household garbage.
- Kindly abide by the local laws and regulations on the handling of this device and its accessories, and support recycling operations.



Trademarks

YMadRabbit word mark and logo are registered trademarks of Redster Commerce Pvt. Ltd. Reproduction in whole or in part without written permission is strictly prohibited. Other companies and products mentioned herein are trademarks of their respective owners.

MadRabbit Warranty

- The device is guaranteed for 12 months from the date of purchase. Repair and maintenance service are free during this period.
- · The warranty limitation:
 - Man-made damage.
 Beyond the warranty period.
 - Doyona ino wananiy ponoa
 - Accessories damage due to improper use and maintenance.
 - Disassembling the device without the authority of the manufacturer.
- Service Information
 - MadRabbit Website : https://www.madrabbit.in

