



AC POWER

IMPORTANT NOTES

- Make sure the power supply is correct and never handle the power cord or its plug with wet hands when plugging into, or unplugging from an outlet.
- Ensure that the main power switch is in the "OFF" position before connecting to AC power cord to the power supply to avoid damage to the unit.
- A damaged power cord can easily cause an electric shock or fire hazard, never use a power cord after it has been damaged.

- Do not block any ventilation openings.
- Do not install the speaker system near any heat sources such as radiators, heat registers, stoves or other apparatus (including amplifiers) that produce heat.
- Protect the power cord from being walked on or pinched particularly at plug points and the point where they exit from the unit.
- Only use attachments/accessories specified by the manufacturer.
- Use only with the cart, stand, tripod, bracket or table specified by the manufacturer or sold with the unit. When cart is used, be cautious while moving the cart unit combination to avoid injury from tip-over.

Explanation of the symbols on the device

CAUTION
RISK OF ELECTRIC SHOCK
DO NOT OPEN

Warning: To reduce the risk of electric shock, do not remove cover (or back). No user-serviceable parts inside. Refer servicing to qualified service personnel.

The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.

The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

Get ready for MORE, for a LIFE of WOW with your all new GoSurround 870. We strongly recommend you go through this manual completely before beginning to use the product as it contains important technical information to ensure you have a seamless audio experience. It can also be referred to in times of difficulty.

DOLBY AUDIO

It is equipped with Dolby Audio technology, providing an enthralling and breathtaking auditory experience. Dolby Audio features greatly improved sound, more channels, less compression, and a more realistic audio experience compared to standard-definition audio formats. At higher bit rates, it is virtually indistinguishable from the source audio.

NOTE:
*Dolby Audio and the double-D symbol are trademark of Dolby Laboratories.
*Dolby Audio (format supporting Dolby Digital Plus)

USING DOLBY AUDIO

- Ensure that the connected device and content support Dolby Audio.
- Set the audio format on the connected device (for example, Blu-ray player, TV) to either "Bitstream," "Auto," or "Bypass" to skip the encoding process. This allows the soundbar to receive the non-decoded audio signal.

Note: Dolby Audio is only available in HDMI ARC modes.

PACKAGE CONTENTS

- 1 N Soundbar
- 1 N Subwoofer
- 1 N Remote Control

- 1 N Aux Cable
- 1 N Power cord
- 1 N User Manual
- 1 N Warranty Card

SPECIFICATIONS

Input voltage	100-240V AC 50/60Hz
Output Power	240W
Soundbar Driver	4 x 2.0"
Subwoofer Driver	1 x 6.5"
Subwoofer (Dimension)	W170 x D309 x H353mm
Soundbar (Dimension)	W840 x D75 x H65mm
Bluetooth version	5.3

WALL MOUNTING

SOUNDBAR

- Measure 20 inches (510mm) and drill 2 parallel holes (1/4 inch each) in the wall.
- Firmly apply a dowel into each hole in the wall (dowel only required for solid wall).
- Attach the soundbar to the screws on the wall and press and push the soundbar to the right 1/8 inch each to lock.

SAFETY INSTRUCTIONS

- Read these instructions before using the product.
- Read all warnings carefully.
- Follow all instructions carefully.
- Do not use this apparatus near water.
- Clean only with dry cloth.

PRODUCT USE

- Plug the detachable power cable of the subwoofer into the external socket.
- Please connect the RCA cable and DC cable of the subwoofer to the BASS OUT and DC IN ports on the soundbar. the unit is currently in standby mode.
- AUX: Use 3.5mm AUX in cable to connect external audio sources (DVD, Mobile, TV). Press **M** on panel or "INPUT" button on the remote control to select AUX IN mode.
- H-ARC: Use your HDMI cable to connect the soundbar to the device using the H-ARC port. Press **M** on panel or "INPUT" in the remote control to select HDMI mode.

BUTTON CONTROL

- M**: Press to turn ON. Short press to switch through and change the modes: BT, OPT, HDMI (H-ARC), USB, AUX - IN function.
- PAUSE/PLAY**: Short press to PAUSE/PLAY in Bluetooth, USB modes.
- Next**: Short Press to turn to next track, long press to adjust volume up
- Previous**: Short Press to turn to previous track, long press to adjust volume down

- USB: Insert your USB disk into the USB socket in the soundbar, it will switch to USB mode directly. You can also press **M** on the panel or "INPUT" in the remote control to switch to USB mode.
- BT: Press **M** on panel or "INPUT" in remote control to enter BT (bBLUE) mode. Turn on your BT device to find Bluetooth name "GoSurround 870" and pair with it.
- OPT: Use the optical cable to connect the soundbar to the OPTICAL port on your device. Press **M** on panel or "INPUT" in the remote control to select OPT mode.

REMOTE BATTERY INSTALLATION

- Open the battery case.
- Insert 2 batteries with the polarity reversed.
- Close the battery case.
- Keep within 5 meter range, 30 degree angle while aiming at the unit.

NOTE:
Please remove the batteries in case you don't use the remote for a long period of time.

DESCRIPTION OF THE REMOTE CONTROL

- Standby**: Standby mode for power ON/OFF.
- MUTE/UNMUTE**
- PAUSE/PLAY**: In Bluetooth/USB mode, Press to pause/play.
- Volume +**: BT, H-ARC, USB, AUX IN mode adjust the volume +
- Volume -**: BT, H-ARC, USB, AUX IN mode adjust the volume -.
- Previous**: In Bluetooth/USB mode, Short press is previous track.
- Next**: In Bluetooth/USB Mode, Short press is next track.
- NEWS**: The news sound effect key. Display DSP3.
- MOVIE**: The movie sound effect key. Display DSP2.
- MUSIC**: The music effect key. Each boot is the default music mode. Display DSP1.
- INPUT**: The input mode switch, BT, HDMI (ARC), USB, AUX-IN input mode cycle switch. (Attention: When connected to the Bluetooth of the iPhone, the volume of the Soundbar will be the same as the phone.)
- 3D**: Key: The 3D sound effect key.
- TREB +**: Increase the treble.
- TREB -**: Decrease the treble.
- BASS +**: Increase the bass.
- BASS -**: Decrease the bass.

SOUNDBAR (BACK)

- USB PORT
- HDMI ARC
- OPTICAL
- DC-IN
- BASS OUT
- AUX-IN