



GOSURROUND 920

2.1 Soundbar
Speaker System

Get ready for MORE, for a LIFE of WOW with your all new GOSURROUND 920. We strongly recommend you go through this manual completely before beginning to use the product as it contains important technical information to ensure you have a seamless audio experience. It can also be referred to in times of difficulty.

PACKAGE CONTENTS

- 1 x Soundbar
- 1 x Wireless Subwoofer
- 1 x AUX Cable
- 1 x Audio Cable
- 1 x User Manual
- 1 x Remote Control
- 1 x Warranty Card

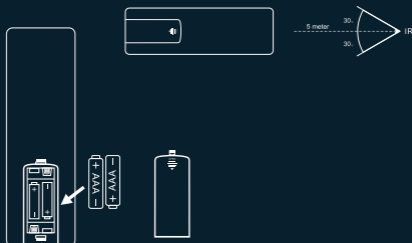 
SPECIFICATIONS

Input	110-240V AC 50/60Hz
Output power	200W
Soundbar Drivers	4 x 2.25"
Subwoofer Driver	1 x 6.5"
Wireless Subwoofer (Dimension)	W190*D310*H370
Soundbar (Dimension)	L900*D90*H79mm
Bluetooth version	5.0





 
As long as the wireless subwoofer and the Soundbar are successfully paired, they will automatically connect in the future without manual pairing; If the wireless subwoofer and Soundbar cannot connect to the audio, you can use the above method to manually pair and connect.

REMOTE BATTERY INSTALLATION

- 1 Open the battery case.
- 2 Insert 2 batteries without the polarity reversed.
- 3 Close the battery case.
- 4 Keep within 5 meter range, 30 degree angle while aiming at the unit.



PRODUCT USE

- 1 Plug the power cable of the soundbar to the external socket, the unit is in standby mode.
- 2 AUX: Use 3.5mm AUX in cable to connect external audio sources (DVD, Mobile, TV). Press  on panel or INPUT key in the remote control to select AUX IN mode.
- 3 HDMI: Use your HDMI cable to connect the soundbar with your HDMI (ARC) device. Press  on panel or INPUT key in the remote control to select HDMI mode.
- 4 OPT: Use your optical cable to connect soundbar with your OPT device. Press  on panel or INPUT key in the remote control to select OPT mode.
- 5 USB: Insert your USB disk into the USB socket in the soundbar, it will switch to USB mode directly. You can also press  on the panel or INPUT key in the remote control to switch USB mode.
- 6 BT: Press  on panel or INPUT key in remote control to enter BT mode. Turn on your BT device to find Bluetooth name 'GOSURROUND 920' to pair with it.
- 7 Wireless subwoofer and Soundbar connection method: The wireless subwoofer needs to be connected to the power supply first, and then long press the "RESET" button on the rear panel of the wireless subwoofer, the LED light next to it will flash quickly, enter and wait for the Soundbar host to pair with it; then connect the Soundbar host to the power and turn on the "BT" Mode status: The Soundbar host will automatically pair with the wireless subwoofer. After successful pairing, the LED on the back panel of the subwoofer will be on.

BUTTON CONTROL



- 1 "⏻" Key: Short press standby ON/OFF. On standby, display brightness of "-----" will be reduced by 30%. (Attention: During operation, display brightness of the digital tube will be grayed out to normal, if there is no operation after 10 seconds, the display brightness will be reduced by 30%.)
- 2 "📶" Key: Short press BT, OPT, HDMI (ARC), USB, AUX IN function to cycle switch.
- 3 "⏮" Key: Press to turn to previous track, hold it to adjust volume down in all modes.
- 4 "▶⏸" Key: Bluetooth mode, Short press to PAUSE/PLAY, long press to DISCONNECT/CONNECT.
"▶⏸" Key: USB mode, Short press to PAUSE/PLAY.
"▶⏸" Key: AUX IN mode, Short press MUTE/PLAY.
- 5 "💡" Key: Short press ON/OFF Light.
- 6 "⏭" Key: Press to turn to next track, hold it to adjust volume up in all modes.

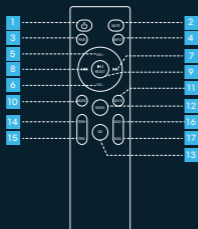 
WALL MOUNTING

- Measure 24.41 inches (620mm) and drill 2 parallel holes (1/4 inch each) in the wall.
- Firmly apply a dowel into each hole in the wall (dowel only required for solid wall).
- Attach the soundbar to the screws on the wall and press and push the soundbar to the right 1/8 inch each to lock.

SAFETY INSTRUCTIONS

- 1 Read these instructions before using the product.
- 2 Read all warnings carefully.
- 3 Follow all instructions carefully.
- 4 Do not use this apparatus near water.
- 5 Clean only with dry cloth.
- 6 Do not block any ventilation openings. .
Do not install the speaker system near any heat sources such as radiators, heat registers, stoves or other apparatus (including amplifiers) that produce heat.
- 7 Protect the power cord from being walked on or pinched particularly at plug points and the point where they exit from the unit.
- 8 Only use attachments/accessories specified by the manufacturer.
- 9 Use only with the cart, stand, tripod, bracket or table specified by the manufacturer or sold with the unit. When cart is used, be cautious while moving the cart unit combination to avoid injury from tip-over.
- 10

DESCRIPTION OF THE REMOTE CONTROL



- 1 "Power" Key: Standby mode for power ON/OFF.
- 2 "MUTE" Key: MUTE ON/OFF.
- 3 "PAIR" Key: Bluetooth disconnect/connect, long press to disconnect Bluetooth, long press again to reconnect to Bluetooth.
- 4 "INPUT" Key: The input mode switch, BT, OPT, HDMI (ARC), USB, AUX-IN input mode cycle switch. (Attention: When connected to the Bluetooth of the iPhone, the volume of the Soundbar will be the same as the phone.)
- 5 Volume + Key: BT, OPT, HDMI (ARC), USB, AUX IN mode adjust the volume +.
- 6 Volume - Key: BT, OPT, HDMI (ARC), USB, AUX IN mode adjust the volume -.
- 7 "Next" Key: Bluetooth mode short press is next, in USB Mode short press the next song, the Long press is Fast Forward.
- 8 "Previous" Key: Bluetooth mode short press is previous, in USB Mode short press the previous song, the Long press is fast backward.
- 9 "PLAY/PAUSE/RESET" Key: Bluetooth and USB mode, short press to pause/play, AUX-IN mode, short press is MUTE / PLAY, long press is reset function, "RESET" key: reset MAS. VOL (default "U 15"), BASS (default "SU 8"), TRE (default "HI 8"), default volume.
- 10 "MUSIC" Key: The music effect key. Each boot is the default music mode. Display E1.
- 11 "MOVIE" Key: The movie sound effect key. Display E2.
- 12 "NEWS" Key: The news sound effect key. Display E3.
- 13 "3D" Key: The 3D sound effect key. Display E4.
- 14 TREB + : Adjust the treble +.
- 15 TREB - : Adjust the treble -.
- 16 BASS + : Adjust the bass +.
- 17 BASS - : Adjust the bass -.

ERP low power consumption mode No signal input for 30 minutes, Soundbar will automatically enter the Standby mode.

SOUNDBAR (BACK)



- 1 AUX IN
- 2 OPTICAL
- 3 HDMI (ARC)

Explanation of the symbols on the device



Warning: To reduce the risk of electric shock, do not remove cover (or back). No user-serviceable parts inside. Refer servicing to qualified service personnel.



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

AC POWER

IMPORTANT NOTES

- Make sure the power supply is correct and never handle the power cord or its plug with wet hands when plugging into, or unplugging from an outlet.
- Ensure that the main power switch is in the "OFF" position before connecting to AC power cord to the power supply to avoid damage to the unit.
- A damaged power cord can easily cause an electric shock or fire hazard, never use a power cord after it has been damaged.

Life's too short for "ok". Too short to have stuff in our lives that's "ok, I guess". "But-I'm-almost-home!" battery life. "But-it-only-fell-off-the-table" build quality. "Has-someone-stolen-the-bass?" sound quality.

We say NO to "ok". In 2021, we set out to make stuff that's better in little ways that make a big difference.

Stuff for people who expect more. Who want the songs to keep playing until they're home. Who are on a mission to stay up all night. Who want to know they'll feel great and look awesome, every day.

For people who want every day to be a 'wow' day.

GO VO