





Explanation of the symbols on the device



CAUTION Warning: To reduce the risk of electric snock, as not remove cover (or back). No user-serviceable Warning: To reduce the risk of electric shock, do parts inside. Refer servicing to qualified service personnel.



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

AC POWER

IMPORTANT NOTES

- Make sure the power supply is correct and never handle the power cord or its plug with wet hands when plugging into, or unplugging from an outlet.
- Ensure that the main power switch is in the "OFF" position before connecting to AC power cord to the power supply to avoid damage to
- A damaged power cord can easily cause an electric shock or fire hazard, never use a power cord after it has been damaged.

WALL MOUNTING

SOUNDBAR

- Measure 20 inches (510mm) and drill 2 parallel holes (1/4 inch each) in the wall.
- Firmly apply a dowel into each hole in the wall (dowel only required for solid wall).
- Attach the soundbar to the screws on the wall and press and push the soundbar to the right 1/8 inch each to lock.

SAFETY INSTRUCTIONS

- Read these instructions before using the product.
- Read all warnings carefully.
- Follow all instructions carefully.
- Do not use this apparatus near water.
- Clean only with dry cloth.
- Do not block any ventilation openings.
- Do not install the speaker system near any heat sources such as radiators, heat registers, stoves or other apparatus (including amplifiers) that produce heat.
- Protect the power cord from being walked on or pinched particularly at plug points and the point where they exit from the unit.
- Only use attachments/accessories specified by the manufacturer.
- Use only with the cart, stand, tripod, bracket or table specified by the manufacturer or sold with the unit. When cart is used, be cautious while moving the cart unit combination to avoid injury from tip-over.

Get ready for MORE, for a LIFE of WOW with your all new GoSurround 990. We strongly recommend you go through this manual completely before beginning to use the product as it contains important technical information to ensure you have a seamless audio experience. It can also be referred to in times of difficulty.

DI DOLBY AUDIO

It is equipped with Dolby Audio technology, providing an enthralling and breathtaking auditory experience. Dolby Audio features greatly improved sound, more channels, less compression, and a more realistic audio experience compared to standard-definition audio formats. At higher bit rates, it is virtually indistinguishable from the source audio.

NOTE:

*Dolby Audio and the double - D symbol are trademark of dolby Laboratories. *Dolby Audio (format supporting dobly digital plus)

USING DOLBY AUDIO

- Ensure that the connected device and content support Dolby Audio.
- 2 Set the audio format on the connected device (for example, Blu-ray player, TV) to either "Bitstream," "Auto," or "Bypass" to skip the encoding process. This allows the soundbar to receive the non-decoded audio signal.

1 N Power Adapter

Note: Dolby Audio is only available in HDMI ARC modes.

PACKAGE CONTENTS

- N Soundbar
- 1N Aux Cable ■ 1N Wireless Subwoofer ■ 1N Power cord
- 2 N Satellite Speakers1 N User Manual
- 1N Remote Control 1N Warranty Card

SPECIFICATIONS

Input voltage (SubWoofer)	100-240V AC 50/60Hz
Input voltage (Soundbar)	100-240V AC 50/60Hz
Output Power	525W
Soundbar & Satilite Drivers	5 x 2.0 "
Subwoofer Driver	1 x 6.5"
Subwoofer (Dimension)	W170 x D238 x H353mm
Soundbar (Dimension)	W840 x D75 x H65mm
Satilite speakers (Dimension)	W63 x D77 x H175mm
Bluetooth version	5.3

PRODUCT USE


- Plug the detachable power cable of the subwoofer into the external socket.
- Please connect the Power Adopter cable of the soundbar to the DC IN ports on the soundbar and 2 Pin Plug into the external socket. The unit is currently in standby mode.
- AUX: Use 3.5mm AUX in cable to connect external audio sources (DVD, Mobile, TV). Press Mon panel or "INPUT" button on the remote control to select AUX IN mode.
- H-ARC: Use your HDMI cable to connect the soundbar to the device using the H-ARC port. Press $\mathbf M$ on panel or "INPUT" in the remote control to select HDMI mode.

WIRELESS SUBWOOFER AND SOUNDBAR CONNECTION

- Connect the Power Cord to the Subwoofer: Ensure the power supply cord is securely connected to the subwoofer.
- Check the Blue Light Behind the Subwoofer: Press the pair button located
- on the back of the subwoofer. The blue light should start blinking rapidly. Power the Soundbar : Plug in the soundbar through the adapter to the
- power supply and change the mode to BT (Bluetooth) mode.
- Wait for the Wireless Connection: Allow 1-2 minutes for the subwoofer and soundbar to establish a wireless connection.
- **Solution** Confirm the Connection: Once connected wirelessly, the blue light on both
- the subwoofer and soundbar should remain stable Connect the Soundbar to TV/Mobile: Search for BT Name
- "GOSURROUND 990" on your TV or mobile device and connect to it. Retry if Necessary: If you are not able to connect, please retry the


above steps as mentioned.

NOTE: Check Bluetooth Connection: Make sure that your soundbar is not connected to another device via Bluetooth, during this process.

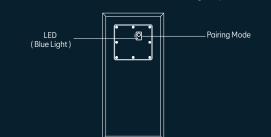


2

 HOW TO CONNECT TO SATELLITE SPEAKERS



BUTTON CONTROL

 

- "M": Press to turn ON. Short press to switch through and change the modes: BT, OPT, HDMI (H-ARC), USB, AUX - IN function.
- ∠ "> " : Short press to PAUSE/PLAY in Bluetooth, USB modes.
- 3 "▷¾/÷": Short Press to turn to next track, long presss to adjust volume up 4 "K≪I--": Short Press to turn to previous track, long press to adjust volume down

- USB: Insert your USB disk into the USB socket in the soundbar, it will switch to USB mode directly. You can also press $\mbox{\it M}$ on the panel or "INPUT" in the remote
- BT: Press M on panel or "INPUT" in remote control to enter BT (bLUE) mode. pair with it.
- OPT: Use the optical cable to connect the soundbar to the OPTICAL port on your device. Press M on panel or "INPUT" in the remote control to select

REMOTE BATTERY INSTALLATION

- Open the battery case.
- Insert 2 batteries with the polarity reversed.
- Close the battery case.

NOTE:


6

Keep within 5 meter range, 30 degree angle while aiming at the unit.



Please remove the batteries in case you don't use the remote for a long period of time.

DESCRIPTION OF THE REMOTE CONTROL

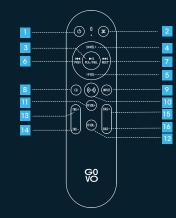

- **I** "பு" : Standby mode for power ON/0FF.
- 2 "_Ж"∶MUTE/UNMUTE

3

- ">II": In Bluetooth/USB mode, Press to pause/play.
- Volume +: BT, H-ARC, USB, AUX IN mode adjust the volume +
- 5 Volume : BT, H-ARC, USB, AUX IN mode adjust the volume -. **I** "I◀" In Bluetooth/USB mode, Short press is previous track.
- "» In Bluetooth/USB Mode, Short press is next track.
 "EQ": Switch through the 3 auto equalizer modes News (dSP1),
- Music (dSP2), Movie (dSP3)

- "INPUT": Switch through Bluetooth (bLUE),H-ARC, AUX, OPT,USB modes. " ((·))": Switch between 2 and 5 channels of sound. The display on the Soundbar shows 'SR - ON' for 5.1 Channel Working and 'SR - OFF' for 2.1 Channel Working. "R VOI +" · Increase the surround volume
- "R.VOL-": Decrease the surround volume
- "TREB +": Increase the treble.
- "TREB -": Decrease the treble.
- "BASS +": Increase the bass. "BASS -": Decrease the bass.

SOUNDBAR (BACK)



1 AUX - IN 3 HDMI-ARC 5 DC - IN

2 USB Port 4 OPTICAL