

ACWO®



EARBUDS

FIRE ULTRA

Manual



Appearance:

- ① ACwO DwOTS Fire Ultra ANC (In-Ear)
- ② ACwO DwOTS Fire Ultra (Half In-Ear)
- ③ Charging Case
- ④ Type-C Charging Interface
- ⑤ Battery Indicator Fire Ultra ANC (In-Ear)
- ⑥ Battery Indicator Fire Ultra (Half In-Ear)
- ⑦ Multi-Function Touch Area
(ACwO DwOTS Fire Ultra ANC)
- ⑧ Multi-Function Touch Area
(ACwO DwOTS Fire Ultra)

What You Will Find In The ACwO Box?

- ① Charging Case
- ② Dual Sharing Earbuds
- ③ Type-C Charging Cable
- ④ Scan Me Card
- ⑤ ACwO X Sunil Chhetri Catalogue
- ⑥ Comfortable Ear Tips

Product Features:

- ① 2 Pairs Of Earbuds In 1 Case
- ② ANC upto 32dB
- ③ 3 Equaliser Modes ACwO DwOTS Fire Ultra ANC (Bass/Theatre/Normal Mode)
- ④ Voice Assistant ("Ok Google" & "Hey Siri")
- ⑤ 13mm BasS Boom X™ Real Drivers
- ⑥ Music Playtime Upto 75 Hours
- ⑦ IPX5 Water & Sweat Resistant
- ⑧ Bluetooth Version 5.3
- ⑨ nFS™ 45ms Low Latency
- ⑩ Type-C Charging Interface
- ⑪ Intuitive Touch Controls

Single Device Connectivity (Using Both Fire Ultra ANC & Fire Ultra on Single Device)

Single device connectivity is available only on limited devices. Some of the mobile phones that include this feature are: The Xiaomi Mi 11, Mi 11 Ultra, Mi 11 Pro, and Mi 11X are some of the confirmed Xiaomi phones with the audio sharing feature. Samsung S8 & newer series, Z-Flip Series, Z-Fold Series, Note Series, Tab S Series, and Book Laptops, with dual audio connectivity feature!

Individual Connectivity (Using Both Fire Ultra ANC & Fire Ultra on Different Device)

You can enjoy individual connectivity on any device.

Safety Guidelines:

- Please refrain from dismantling the product or attempting to remove its battery. Such actions can pose a fire hazard or cause electrical malfunctions. Seek the services of a qualified technician or the manufacturer for any necessary maintenance or repairs.
- When cleaning the earbuds, exercise caution by using a damp, soft cloth. Avoid using any oily or volatile liquids for cleaning purposes. Additionally, ensure that the earphones are kept away from extreme temperature conditions, both hot and cold.
- Please be aware that any damage to the earbuds that is not attributed to a manufacturing defect will render the product's warranty null and void.

- Do not wear them in situations where it is unsafe, such as when operating a vehicle, crossing streets, or engaging in activities requiring full situational awareness.
- To safeguard your hearing, ensure that the volume on your music player is set at an appropriate level when using the earphones. Prolonged exposure to high noise levels can gradually lead to hearing impairment.
- Do not wear the earbuds for a long period of time as it can lead to possible hearing loss or major hearable issues.

ACwO DwOTS Fire Ultra ANC (In-Ear)

Kindly Note:

- Please take off the sticker peels attached below the earbuds before you charge them.
- Charge the charging case and the ACwO DwOTS Fire Ultra ANC Wireless Earbuds at least 70% before the first usage.

Charging:

Charging Case:

- Connect the type-c charging cable to the charging case to charge your ACwO DwOTS Fire Ultra ANC Wireless Earbuds.

Earbuds:

- Before use remove the blue protective film on the earbuds. - Place the earbuds in the charged Charging Case to charge the ACwO DwOTS Fire Ultra ANC Wireless Earbuds.

Bluetooth Pairing Process:

- Take out the ACwO DwOTS Fire Ultra ANC Earbuds from the Charging Case and place them in your ears.
- Go to the Bluetooth settings of your device and switch it on.
- Scan available devices.
- Search For " ACwO DwOTS Fire Ultra ANC" from the list of available devices.
- Pair " ACwO DwOTS Fire Ultra ANC" from the list and your Earbuds will be connected.

Once you've completed the initial pairing process, the ACwO DwOTS Fire Ultra ANC will seamlessly connect to your device every time you open the charging case thereafter.

Kindly Note - If the earbuds are not in use and are left outside the charging case, they will automatically turn off after approximately 5 minutes.

Bluetooth Reset Process: ACwO DwOTS Fire Ultra ANC

- In case your earbuds encounter pairing issues or if only one earbud is functioning, you can easily perform a reset.
- Clear all Bluetooth data named "ACwO DwOTS Fire Ultra ANC" from your device and disable Bluetooth.
- Place the earbuds back into their charging case and then remove them to initiate the Bluetooth pairing process once more.

How To Use Your ACwO DwOTS Fire Ultra ANC?

- Touch Controls: The Multi-Functional Touch Area, often referred to as the "Touch Area," is situated on the upper section of the earbud's handle.

Smart Functions ACwO DwOTS Fire Ultra ANC

Play & Pause:

- Single tap on the Multi-Function Touch Area of either earbud.

Switch Between ANC / Transparency Mode:

- Tap and Hold Right Earbud For 2 Second To On/Off ANC and Transparency Mode.

Switch Between Bass/Theatre/Normal Mode:

- Tap and Hold Left Earbud For 2 Second To Switch Between Bass/Theatre/Normal Mode.

To Increase Volume:

- Triple tap on the Multi-Function Touch Area of the right earbud.

To Decrease Volume:

- Triple tap on the Multi-Function Touch Area of the left earbud.

Next Track:

- Double Tap on the Multi-Function Touch area of the left earbud.

Previous Track:

- Double Tap on the Multi-Function Touch area of the right earbud.

Call Voice Assistant:

- Tap four times on the Multi-Function Touch Area of either earbud.

To Answer Calls:

- Single tap on the Multi-Function Touch Area of either earbud.

To Hang Up Calls:

- Single tap on the Multi-Function Touch Area of either earbud.

To Decline Calls:

- Tap and hold for 2 seconds on the Multi-Function Touch Area of either earbud.

Power Off Left/Right Earbud:

- Tap and hold for 5 seconds on the Multi-Function Touch Area of either earbud.

Power On Right Earbud:

- Tap and hold for 5 seconds on the Multi-Function Touch Area of the right earbud.

Power On Left Earbud:

- Tap and hold for 5 seconds on the Multi-Function Touch Area of the left earbud.

One need not activate Environmental Noise Cancellation as the built-in mic is already equipped with the same and activated by default to make your conversations smoother and clear without any disturbances no matter how noisy your environment is.

ACwO DwOTS Fire Ultra ANC (Half In-Ear)

Kindly Note:

- Please take off the sticker peels attached below the earbuds before you charge them.
- Charge the charging case and the ACwO DwOTS Fire Ultra ANC Wireless Earbuds at least 70% before the first usage.

Charging:

Charging Case:

- Connect the type-c charging cable to the charging case to charge your ACwO DwOTS Fire Ultra Wireless Earbuds.

Earbuds:

- Place the earbuds in the charged Charging Case to charge the ACwO DwOTS Fire Ultra Wireless Earbuds.

Bluetooth Pairing Process:

- Take out the ACwO DwOTS Fire Ultra earbuds from the Charging Case and place them in your ears.
- Go to the Bluetooth settings of your device and switch it on.
- Scan available devices.
- Search For " ACwO DwOTS Fire Ultra " from the list of available devices.
- Pair " ACwO DwOTS Fire Ultra" from the list and your Earbuds will be connected.

Once you've completed the initial pairing process, the ACwO DwOTS Fire Ultra will seamlessly connect to your device every time you open the charging case thereafter.

Kindly Note - If the earbuds are not in use and are left outside the charging case, they will automatically turn off after approximately 5 minutes.

Bluetooth Reset Process: ACwO DwOTS Fire Ultra ANC

- In case your earbuds encounter pairing issues or if only one earbud is functioning, you can easily perform a reset.
- Clear all Bluetooth data named "ACwO DwOTS Fire Ultra" from your device and disable Bluetooth.
- Place the earbuds back into their charging case and then remove them to initiate the Bluetooth pairing process once more.

How To Use Your ACwO Fire Ultra?

- Touch Controls: The Multi-Functional Touch Area, often referred to as the "Touch Area," is situated on the upper section of the earbud's handle.

Smart Functions ACwO DwOTS Fire Ultra

Play & Pause:

- Single tap on the Multi-Function Touch Area of either earbud.

Switch Between Bass/Theatre/Normal Mode:

- Tap and Hold Left Earbud For 2 Second To Switch Between Bass/Theatre/Normal Mode.

To Increase Volume:

- Triple tap on the Multi-Function Touch Area of the right earbud.

To Decrease Volume:

- Triple tap on the Multi-Function Touch Area of the left earbud.

Next Track:

- Double tap on the Multi-Function Touch Area of the left earbud.

Repeat Track:

- Double tap on the Multi-Function Touch Area of the right earbud.

Call Voice Assistant:

- Tap four times on the Multi-Function Touch Area of either earbud.

To Answer Calls:

- Single tap on the Multi-Function Touch Area of either earbud.

To Hang Up Calls:

- Single tap on the Multi-Function Touch Area of either earbud.

- To Decline Calls:

Tap and hold for 2 seconds on the Multi-Function Touch Area of either earbud.

Power Off Left/Right Earbud:

- Tap and hold for 5 seconds on the Multi-Function Touch Area of either earbud.

Power On Right Earbud:

- Tap and hold for 5 seconds on the Multi-Function Touch Area of the right earbud.

Power On Left Earbud:

- Tap and hold for 5 seconds on the Multi-Function Touch Area of the left earbud.

One need not activate Environmental Noise Cancellation as the built-in mic is already equipped with the same and activated by default to make your conversations smoother and clear without any disturbances no matter how noisy your environment is.