

ACWOW®



EARBUDS

DWOTS ZING

Manual



Appearance:

- ❶ Left Earbud
- ❷ Right Earbud
- ❸ Charging Case
- ❹ LED Lights
- ❺ Left Earpiece Charging Socket
- ❻ Right Earpiece Charging Socket
- ❼ Type-C Charging Interface
- ❽ Multi-Function Touch Area

What You Will Find In The ACwO Box?

- ① Charging Case
- ② Pair of TWS Earbuds
- ③ Type-C Charging Cable
- ④ ACwO X Sunil Chhetri Catalogu
- ⑤ Scan Me Card
- ⑥ Comfortable Ear Tips

Product Features:

- ① Breathing LED Lights
- ② Advanced ANC to 32dB
- ③ 65 Hours of Music Playtime
- ④ Quad Mic with AI-ENC
- ⑤ Cinematic Experience
- ⑥ Gaming Mode 40ms Ultra Low Latency
- ⑦ 10mm Real BasS BooM X™ Hi-Fidelity Drivers
- ⑧ IPX5 Sweat Resistant
- ⑨ HYPERBOOST™ Charging – 10 Mins = 120 Mins Playtime

Safety Guidelines:

- Please refrain from dismantling the product or attempting to remove its battery. Such actions can pose a fire hazard or cause electrical malfunctions. Seek the services of a qualified technician or the manufacturer for any necessary maintenance or repairs.
- When cleaning the earbuds, exercise caution by using a damp, soft cloth. Avoid using any oily or volatile liquids for cleaning purposes. Additionally, ensure that the earphones are kept away from extreme temperature conditions, both hot and cold.
- Please be aware that any damage to the earbuds that is not attributed to a manufacturing defect will render the product's warranty null and void.
- Do not wear them in situations where it is unsafe, such as when operating a vehicle, crossing streets, or engaging in activities requiring full situational awareness.
- To safeguard your hearing, ensure that the volume on your music player is set at an appropriate level when using the earphones. Prolonged exposure to high noise levels can gradually lead to hearing impairment.
- Do not wear the earbuds for a long period of time as it can lead to possible hearing loss or major hearable issues.

ACwO DwOTS Zing

Kindly Note -

- Please take off the sticker peels attached below the earbuds before you charge them.
- Charge the charging case and the ACwO DwOTS Zing Wireless Earbuds at least 70% before the first usage.

Charging:

Charging Case:

- Connect the type-c charging cable to the charging case to charge your ACwO DwOTS Zing Wireless Earbuds.

Earbuds:

- Before use remove the blue protective film on the earbuds. Place the earbuds in the charged Charging Case to charge the ACwO DwOTS Zing Wireless Earbuds.

Bluetooth Pairing Process:

1. Take out the ACwO DwOTS Zing Earbuds from the Charging Case and place them in your ears.
2. Go to the Bluetooth settings of your device and switch it on.
3. Scan available devices.
4. Search For " ACwO DwOTS Zing " from the list of available devices.
5. Pair " ACwO DwOTS Zing" from the list and your Earbuds will be connected.

Once you've completed the initial pairing process, the ACwO DwOTS Zing will connect seamlessly to your device every time you open the charging case.

Kindly Note - If the earbuds are not in use and are left outside the charging case, they will automatically turn off after approximately 5 minutes.

Bluetooth Reset Process: ACwO DwOTS Zing

1. In case your earbuds encounter pairing issues or if only one earbud is functioning, you can easily perform a reset.
2. Clear all Bluetooth data named "ACwO DwOTS Zing" from your device and disable bluetooth.
3. Place the earbuds back into their charging case and then remove them to initiate the Bluetooth pairing process once more.

How To Use Your ACwO DwOTS Zing?

DwOTS Zing Controls: The Multi-Functional Touch Area, often referred to as the "Touch Area," is situated on the upper section of the earbud's handle.

Smart Functions ACwO DwOTS Zing

Play/Pause:

- Single Tap on the Multi-Function Touch Area of either earbud.

Next Track:

- Double Tap on the Multi-Function Touch Area of the right earbud.

Repeat/Previous Track:

- Double Tap on the Multi-Function Touch Area of the left earbud.

Switch Between ANC/Transparency Mode:

- Tap & Hold for 2 seconds on the Multi-Function Touch Area of the right earbud.

Switch Between Gaming/Normal Mode:

- Tap & Hold for 2 seconds on the Multi-Function Touch Area of the left earbud.

Increase Volume:

- Triple Tap on the Multi-Function Touch Area of the right earbud.

Decrease Volume:

- Triple Tap on the Multi-Function Touch Area of the left earbud.

Activate Voice Assistant:

- Tap 4 times on the Multi-Function Touch Area of either earbud.

Answer Calls:

- Single Tap on the Multi-Function Touch Area of either earbud.