



AIRDOPES 280 ANC

SMART GUIDE


PACKAGE CONTENTS

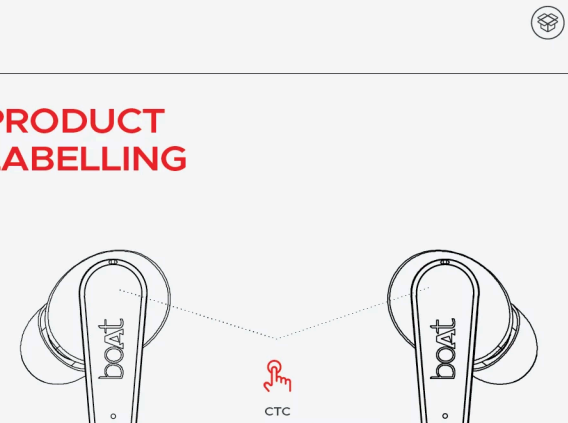

PRODUCT LABELLING

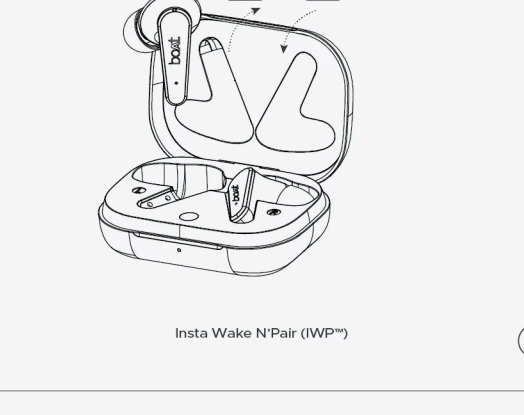


SMART POWER ON/OFF

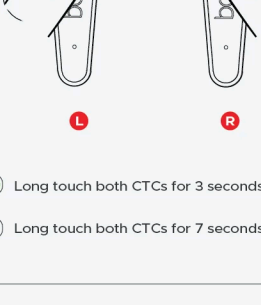

Insta Wake N'Pair (IWP™)


MANUAL POWER ON/OFF

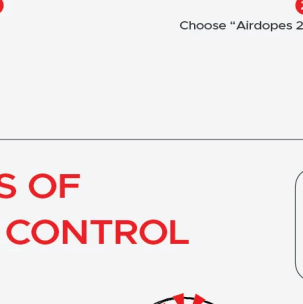


ON Long touch both CTCs for 3 seconds and release

OFF Long touch both CTCs for 7 seconds

BLUETOOTH PAIRING

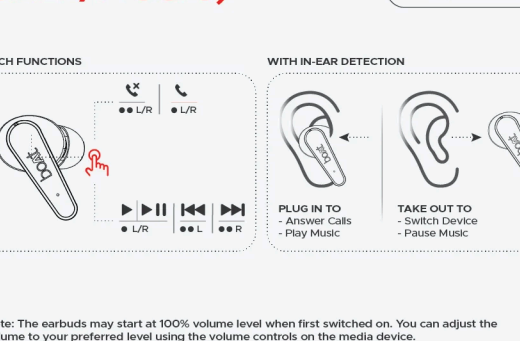

MODES OF NOISE CONTROL

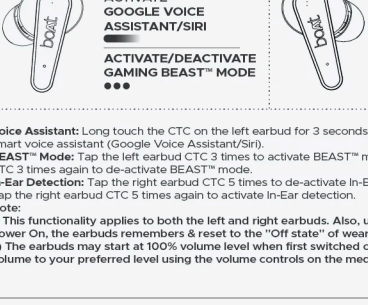


Long Touch (3s)
Ambient Mode
ANC Mode
Normal Mode


Note: 1. By default, the Normal Mode is active.
2. The operational cycle is Normal Mode (ANC OFF) → Ambient Mode → ANC Mode
3. The earbuds will enable Normal mode by default when they are powered on next time.

FUNCTIONS (CALL/MUSIC)

TOUCH FUNCTIONS

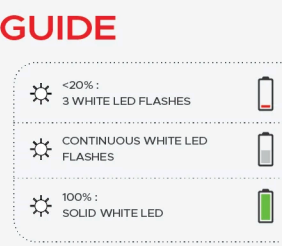


WITH IN-EAR DETECTION

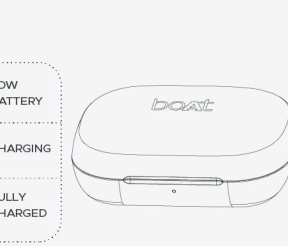

Note: The earbuds may start at 100% volume level when first switched on. You can adjust the volume to your preferred level using the volume controls on the media device.

FUNCTIONS (VOICE ASSISTANT/BEAST™ MODE/IN-EAR DETECTION)

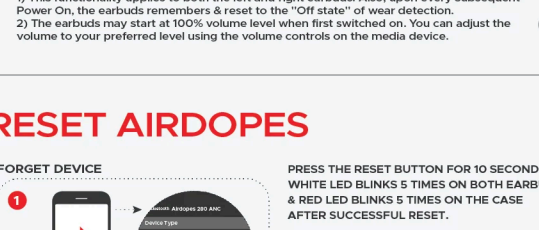


Voice Assistant: Long touch the CTC on the left earbud for 3 seconds to activate the default smart voice assistant (Google Assistant/Siri).
BEAST™ Mode: Tap the left earbud CTC 3 times to activate BEAST™ mode. Tap the left earbud CTC 3 times again to de-activate BEAST™ mode.
In-Ear Detection: Tap the right earbud CTC 5 times to de-activate In-Ear detection. Tap the right earbud CTC 5 times again to activate In-Ear detection.


Note:
1) This functionality applies to both the left and right earbuds. Also, upon every subsequent Power On, the earbuds remembers & reset to the "Off state" of wear detection.
2) The earbuds may start at 100% volume level when first switched on. You can adjust the volume to your preferred level using the volume controls on the media device.

RESET AIRDOPES

FORGET DEVICE

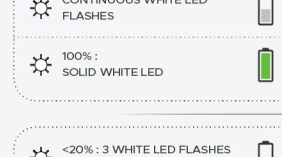


PUT BOTH EARBUDS IN THE CHARGING CASE AND KEEP THE CASE LID OPEN.

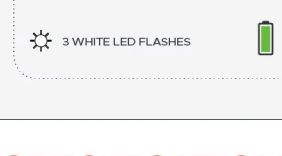

PRESS THE RESET BUTTON FOR 10 SECONDS. WHITE LED BLINKS 5 TIMES ON BOTH EARBUDS & RED LED BLINKS 5 TIMES ON THE CASE AFTER SUCCESSFUL RESET.



CLOSE LID AND WAIT FOR A FEW SECONDS. OPEN CASE & PERFORM A FRESH CONNECTION.

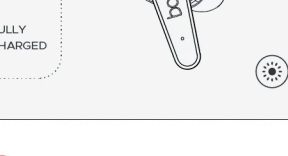

LED STATUS GUIDE

<20% : 3 WHITE LED FLASHES

CONTINUOUS WHITE LED FLASHES

100% : SOLID WHITE LED

LOW BATTERY

CHARGING

FULLY CHARGED

<20% : 3 WHITE LED FLASHES WITH TONE PROMPT EVERY 5 MINUTES

3 WHITE LED FLASHES

LOW BATTERY

FULLY CHARGED

SPECIFICATIONS

Headphone Type	ANC TWS Earbuds
Bluetooth Version	5.3
ANC	Up to 32 dB
Music Playtime	Up to 10 hrs per charge, Up to 50 hrs additional Case playtime (Non-ANC mode); Up to 9 hrs per charge, Up to 45 hrs additional Case playtime (ANC mode) (at 60% volume)
Number of ENx™ Equipped Mics	4
In-Ear Detection	Yes
IWP™ Tech	Yes
BEAST™ Mode	Yes; 65 ms Low Latency
Transmission Range	10 m
Driver Size	13 mm*2
Supported Codec	AAC/SBC
Frequency	20 Hz-20 KHz
Battery	500 mAh (Case); 35 mAh*2 (Earbuds)
ASAP™ Charge	Yes; 10 mins charge = 180 mins playtime
Charging Time	1 hour (Earbuds); 2 hours (Case)
Charging Interface	USB Type-C
Water Resistance	IPX5

CHARGING GUIDELINES

Charging norms & Precautionary Guidelines: -

1) Charger/Brick/Adapter : 5V/2A
2) Cable/Wire : Standard Cable (35 strands @0.10mm diameter/ strand)

Any other accessory can be used to charge the product as long as the above-mentioned norms are followed.



USB-C PORT

Note: (1) Before using the earbuds for the first time, it is recommended to fully charge them.
(2) Please note that the earbuds cannot be used / switched on while charging.

LEARN MORE ABOUT YOUR PRODUCT



Scan this QR Code to Access Your Product's Manual, FAQs, and Warranty Information