





AIRDOPES 155

SMART GUIDE

PACKAGE CONTENTS

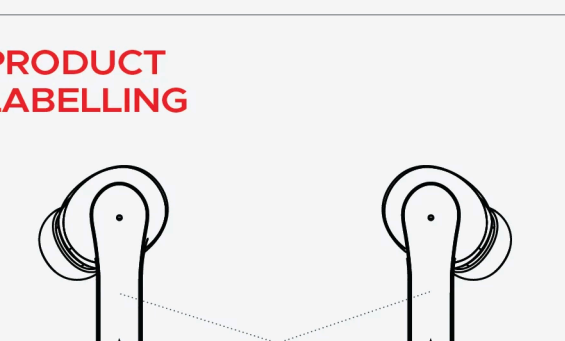


PRODUCT LABELLING

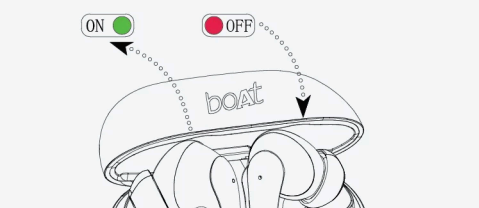


CTC
(CAPACITIVE TOUCH CONTROL)

SMART POWER ON/OFF

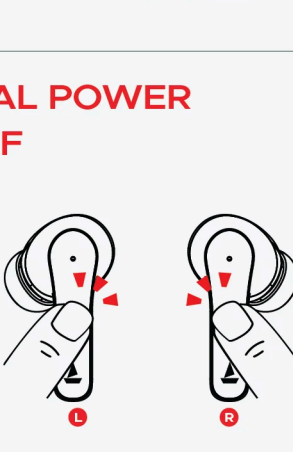

Insta Wake N' Pair (IWP™)


MANUAL POWER ON/OFF

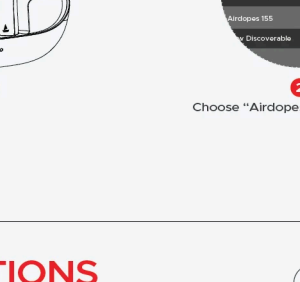

ON Long touch both CTCs for 3 seconds and release

OFF Long touch one CTC at a time for 5 seconds

BLUETOOTH PAIRING

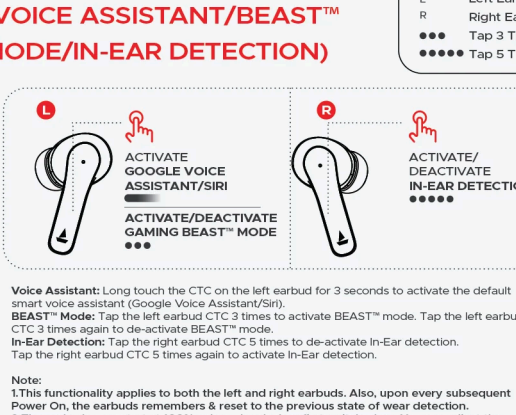


Choose "Airdopes 155" to Connect


FUNCTIONS (CALL/MUSIC)

- Tap Once
- Tap Twice
- L Left Earbud
- R Right Earbud

TOUCH FUNCTIONS

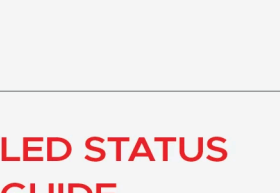


WITH IN-EAR DETECTION

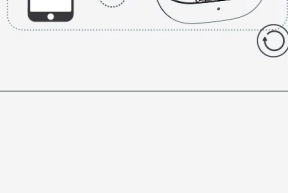

Note: The earbuds may start at 100% volume level when first switched on. You can adjust the volume to your preferred level using the volume controls on the media device.

FUNCTIONS (VOICE ASSISTANT/BEAST™ MODE/IN-EAR DETECTION)

- Long Touch (3s)
- L Left Earbud
- R Right Earbud
- Tap 3 Times
- Tap 5 Times

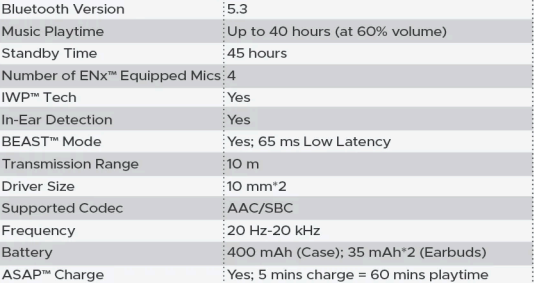


Voice Assistant: Long touch the CTC on the left earbud for 3 seconds to activate the default smart voice assistant (Google Voice Assistant/Siri).
BEAST™ Mode: Tap the left earbud CTC 3 times to activate BEAST™ mode. Tap the left earbud CTC 3 times again to de-activate BEAST™ mode.
In-Ear Detection: Tap the right earbud CTC 5 times to de-activate In-Ear detection. Tap the right earbud CTC 5 times again to activate In-Ear detection.


Note:
1. This functionality applies to both the left and right earbuds. Also, upon every subsequent Power On, the earbuds remembers & reset to the previous state of wear detection.
2. The earbuds may start at 100% volume level when first switched on. You can adjust the volume to your preferred level using the volume controls on the media device.

RESET AIRDOPES

FORGET DEVICE

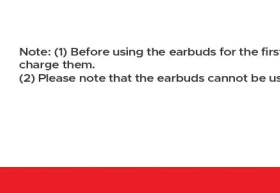

PRESS THE RESET BUTTON FOR 10 SECONDS. THE LEDS ON BOTH EARBUDS AND THE CHARGING CASE BLINK 5 TIMES TO INDICATE SUCCESSFUL RESET.

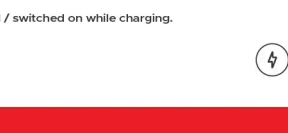

PUT BOTH EARBUDS IN THE CHARGING CASE AND KEEP THE CASE LID OPEN.



CLOSE LID AND WAIT FOR A FEW SECONDS. OPEN CASE & PERFORM A FRESH CONNECTION.



LED STATUS GUIDE

<30% : 3 WHITE LED FLASHES	LOW BATTERY
CONTINUOUS WHITE LED FLASHES	CHARGING
100% : SOLID WHITE LED	FULLY CHARGED



<20% : 3 WHITE LED FLASHES WITH TONE PROMPT EVERY 5 MINUTES	LOW BATTERY
21%-29% 2 WHITE LED FLASHES ON OPENING THE CASE LID	CHARGED
30%-100% 3 WHITE LED FLASHES ON OPENING THE CASE LID	CHARGED



SPECIFICATIONS

Headphone Type	TWS
Bluetooth Version	5.3
Music Playtime	Up to 40 hours (at 60% volume)
Standby Time	45 hours
Number of ENx™ Equipped Mics	4
IWP™ Tech	Yes
In-Ear Detection	Yes
BEAST™ Mode	Yes; 65 ms Low Latency
Transmission Range	10 m
Driver Size	10 mm*2
Supported Codec	AAC/SBC
Frequency	20 Hz-20 kHz
Battery	400 mAh (Case); 35 mAh*2 (Earbuds)
ASAP™ Charge	Yes; 5 mins charge = 60 mins playtime
Charging Time	Up to 2 hours (Case); Up to 1 hour (Earbuds)
Charging Interface	USB Type-C
Water Resistance	IPX4

CHARGING GUIDELINES

Charging norms & Precautionary Guidelines: -
1) Charger/Brick/Adapter : 5V/2A
2) Cable/Wire : Standard Cable (35 strands @0.10mm diameter/ strand)
Any other accessory can be used to charge the product as long as the above-mentioned norms are followed.



Note: (1) Before using the earbuds for the first time, it is recommended to fully charge them.
(2) Please note that the earbuds cannot be used / switched on while charging.

LEARN MORE ABOUT YOUR PRODUCT



Scan this QR Code to Access Your Product's Manual, FAQs, and Warranty Information