

# KLIPSCH NEW YORK

## MUSIC CITY PARTY SPEAKER



### HOT NIGHTS, COOL TUNES

Paul W. Klipsch passed down the gift of horn-loaded tech so party people could get the most powerful and clearest sound possible. The Klipsch New York combines that same proprietary engineering with a highly efficient horn-loaded compression tweeter, dual 8" woofers, and Tractrix flared front ports - for an unforgettable sound that will drive your dance floor.

### VOLTAGE FOR LONG-LASTING VIBES

The Klipsch New York was built for the vitality of the very best bashes. With up to 18 hours of playback time after just 2 1/2 hours charging up, we're a little worried you might run out of music.

### NEXT-LEVEL LUMINOSITY

Big sound comes with a bangin' light show thanks to RGB lighting in a variety of patterns and colors. App-controlled presets dazzle the front and sides of your new Klipsch New York.

### DELIGHTERS FOR DJ'S

The Klipsch New York was built with professional party people in mind. Wheels and a handle take your show on the road with style and ease thanks to thoughtful engineering. Bonus: we've included buttons for DJ sound effects so you can airhorn, scratch, and applaud to pump up the crowd.

### LEVEL UP WITH PARTY LINK

Connect multiple Klipsch Music City Speakers via Party Link by simply pressing the Link Button on your speaker or within the Klipsch Connect Plus app. We like to think of it as *Pissing Off The Neighbors Mode* - debauchery not included. For now!

### BOOSTED BASS FOR YOUR BEST BEATS

Crank up those low frequencies and buckle up because your Klipsch New York comes with built-in Ultra Bass mode. Just hit the button on your speaker or customize EQ settings in-app to deepen those drops and shake the place.

### SING, SHRED, OR SNARE

Thanks to built-in microphone and 1/4" instrument input, your new Klipsch New York is your new go-to for karaoke nights and jam sessions. Further customize your experience with bass, treble, and echo adjustments.

### YOU'RE IN CONTROL

The Klipsch Connect Plus app (available free in the app store) allows you to customize EQ settings, light patterns, DJ buttons, and more with just a few clicks.

### SPECIFICATIONS

|                      |                                                                                                        |
|----------------------|--------------------------------------------------------------------------------------------------------|
| FREQUENCY RESPONSE   | 35Hz-20kHz @ -6dB                                                                                      |
| DRIVERS              | 2 x 8" Woofer, 1 x 1" Horn Loaded Compression Driver, Tractrix Flared Front Ports                      |
| DYNAMIC LIGHT SHOW   | 5 x RGB Shows with Woofer, Horn, and Side Logo Lighting                                                |
| MAX ACOUSTIC OUTPUT  | 110dB at 1m                                                                                            |
| INPUTS/OUTPUTS       | Bluetooth 5.2®, AUX In, USB, 2 x 1/4" for Karaoke and Instrument, AUX Out for Daisy Chain              |
| BATTERY LIFE         | 8 Hours - Lights On, 12 Hours - Lights Off                                                             |
| BATTERY TYPE         | Rechargeable Lithium 14.8v/ 5000mAh                                                                    |
| ACCESSORIES INCLUDED | Wired Microphone, AC Power Cable                                                                       |
| FINISH               | ABS and Perforated Metal                                                                               |
| DIMENSIONS           | 31.9" (810mm) H x 15" (383mm) W x 15.6" (397mm) D                                                      |
| WEIGHT               | Product Only - 56.5lbs (25.7kg)<br>With Box - 62.7lbs (28.5kg)                                         |
| USB INPUT            | (1) USB Type-A Connection<br>For System Updates and playback of MP3 files for test and debug purposes. |



### BUILT LIKE A TANK

With rigorous quality testing from our friends at Onkyo, the Klipsch Music City Party Speakers have been put through the ringer to ensure they keep up with your party needs. Plus, they're all IPX4 rated so a few pool party splashes won't slow you down.

### ECO-CONSCIOUS PACKAGING

We're committed to providing great sound for generations - which is why our packaging is designed to be earth-friendly, with careful consideration to minimize waste and maximize recyclability.

KLIPSCH  
**NEW YORK**

MANUAL



LEGENDARY AMERICAN SOUND



SINCE 1946



# TABLE OF CONTENTS

---

TABLE DES MATIÈRES • TABLA DE CONTENIDO • INHALTSVERZEICHNIS • INDICE • ÍNDICE • 目錄 • 目錄 • 目次 • 클립쉬 커넥트 플러스 앱

- 1. Klipsch Connect Plus App**
- 2. What's in the Box**
- 3. Product Overview**
- 4. Power and Battery**
- 5. Lighting Control**
- 6. Bluetooth Connection**
- 7. Aux Connection**
- 8. USB Connection**
- 9. Microphone/Guitar Input**
- 10. TWS Pairing**
- 11. Broadcast Mode Pairing**
- 12. Factory Reset**
- 13. Care and Cleaning**

 
# KLIPSCH CONNECT PLUS APP

APPLICATION KLIPSCH CONNECT PLUS • APLICACIÓN KLIPSCH CONNECT PLUS • KLIPSCH CONNECT PLUS APP • APP KLIPSCH CONNECT PLUS • APLICATIVO KLIPSCH CONNECT PLUS


KLIPSCH CONNECT PLUS 应用程序 • KLIPSCH CONNECT PLUS 應用程式 • KLIPSCH コネクトプラスアプリ • 클립쉬 커넥트 플러스 앱

## Scan the QR code for enhanced functionality.


Scannez le code QR pour une fonctionnalité améliorée. Escanee el código QR para obtener una funcionalidad mejorada. Scannen Sie den QR-Code für erweiterte Funktionalität. Scansiona il codice QR per funzionalità avanzate. Digitalize o código QR para funcionalidade aprimorada. 扫描二维码以获取增强功能。 掃描二維碼以取得增強功能。 拡張機能については QR コードをスキャンしてください。 향상된 기능을 보려면 QR 코드를 스캔하세요.

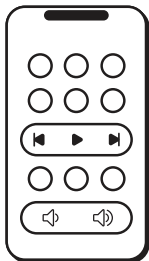

VIRTUAL REMOTE

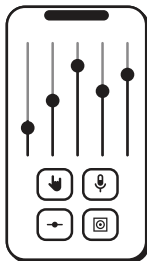 

EQUALIZER

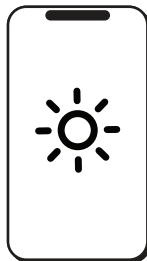 

LIGHT SHOW CONTROL




SUPPORT

|                                                                                                                                                                                     |                                                                                                                       |                                                                                                                                                                                                                                          |                                                                                                       |
|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------|
| <b>Virtual Remote</b><br>Télécommande virtuelle<br>Control remoto virtual<br>Virtuelle Fernbedienung<br>Telecomando virtuale<br>Remoto virtual<br>虚拟遥控器<br>虛擬遙控器<br>仮想リモート<br>가상 원격 | <b>Equalizer</b><br>Égaliseur<br>Igalada<br>Equalizer<br>Equalizzatore<br>Equalizador<br>均衡器<br>均衡器<br>イコライザ<br>평형 장치 | <b>Light Show Control</b><br>Contrôle du spectacle lumineux<br>Control del espectáculo de luces<br>Lichtshow-Steuerung<br>Controllo dello spettacolo di luci<br>Controle de show de luzes<br>灯光秀控制<br>燈光秀控制<br>ライトショーコントロール<br>라이트 쇼 컨트롤 | <b>Support</b><br>Soutien<br>Apoyo<br>Unterstützung<br>Supporto<br>Apoiar<br>支持<br>幫助<br>サポート<br>지원하다 |
|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------|

# INSIDE

 CONTENU • CONTENIDO • INHALT • CONTENUTO • CONTEÚDO • 内 • 含量 • 内部 • 내용물 내부

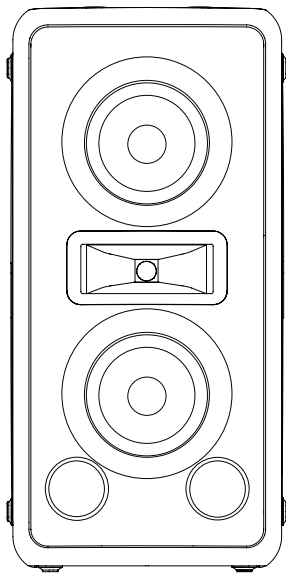


**SAFETY AND  
WARRANTY  
INFORMATION**

**QUICK  
START  
GUIDE**


# CONTROLS

 CONTRÔLES • CONTROLES • STEUERUNG • CONTROLLI • CONTROLES • 控制 • 控制装置 • コントロール • 통제 수단

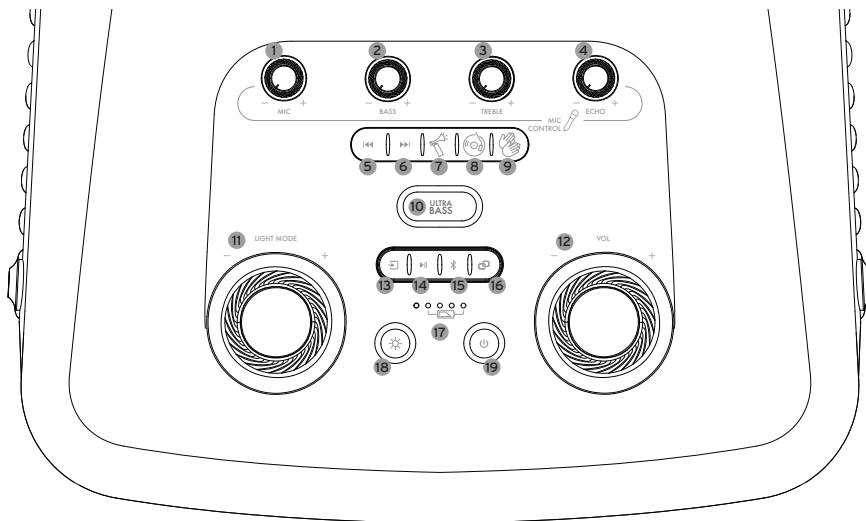

1. Microphone Volume Knob: Controls volume of microphone.
2. Bass Level Knob: Controls bass level of microphone input.
3. Treble Level Knob: Controls treble level of microphone input.
4. Echo Knob: Controls amount of echo in microphone.
5. Previous Button: Plays the previous song from the beginning.
6. Next Button: Plays the next song from the beginning.
7. Airhorn Button: Plays an airhorn sound effect.
8. Record Scratch Button: Plays a record scratch sound effect.
9. Applause Button: Plays an applause sound effect.
10. Ultra Bass Button: Enables ultra bass mode, boosting bass levels.

 11. Light Mode Knob: Controls selection of light modes.
12. Volume Knob: Controls output volume of speaker.
13. Input Button: Controls which input the speaker is connected to. Only live inputs are available.
14. Play/Pause Button: Allows the user to play and pause the music.
15. Bluetooth Button: Used to connect the speaker to other devices. (phones, laptops, etc.)
16. TWS/Broadcast Button: Used to connect the speaker to other Music City Party speakers.
17. Battery Indicator Lights: Shows the current battery level.
18. Light Button: Toggle the light show on and off.
19. Power Button: Turns the speaker on and off.

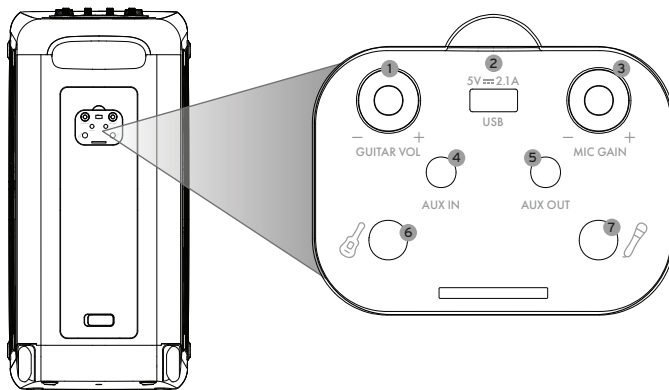


1. Guitar Volume Knob: Controls input level of guitar input.
2. USB Port: Allows reverse-charging of devices via USB connection and for firmware updates.
3. Microphone Gain Knob: Controls input level of microphone.
4. Aux Input: Allows input via Aux connection from compatible devices.
5. Aux Output: Allows output via Aux connection to compatible devices.
6. Guitar Input: Allows input via 1/4" cable connection for instruments.
7. Microphone Input: Allows input via 1/4" cable connection for microphones.

# POWER AND BATTERY

 PUISSANCE ET BATTERIE • POTENCIA Y BATERÍA • STROM UND BATTERIE • ALIMENTAZIONE E BATTERIA • POTÊNCIA E BATERIA • 電源和電池

電源和電池 • 電源とバッテリー • 전원 및 배터리


## ON

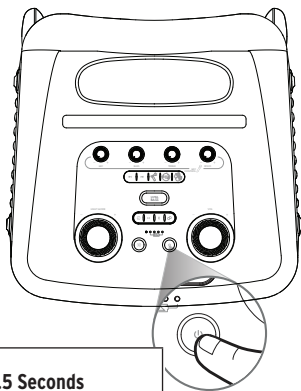

### Hold >0.5 Seconds

Appuyer pendant >0.5 secondes  
Mantenga oprimido durante >0.5 segundos  
>0.5 Sekunden gedrückt halten  
Tenere premuto per >0.5 secondi  
Manter pressionado por >0.5 segundos  
保持 >0.5 秒  
維持 >0.5 秒  
>0.5秒間押し続ける  
>0.5초 동안 유지
 
## OFF

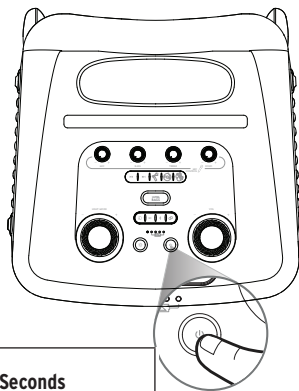


### Hold 2 Seconds

Appuyer pendant 2 secondes  
Mantenga oprimido durante 2 segundos  
2 Sekunden gedrückt halten  
Tenere premuto per 2 secondi  
Manter pressionado por 2 segundos  
保持 2 秒  
維持 2 秒  
2秒間押し続ける  
2초 동안 유지

# POWER AND BATTERY

PUISSANCE ET BATTERIE • POTENCIA Y BATERÍA • STROM UND BATTERIE • ALIMENTAZIONE E BATTERIA • POTÊNCIA E BATERIA • 电源和电池

 電源和電池 • 電源とバッテリー • 전원 및 배터리

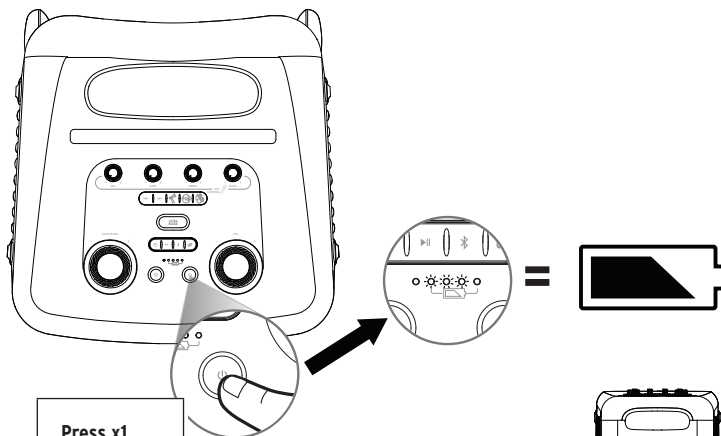

## Press x1

Appuyer 1 fois

Oprima 1 vez

1x drücken

Premere 1 volta


Pressionar uma vez

按 1 次

按x1


X1を押します

 1번 누르기

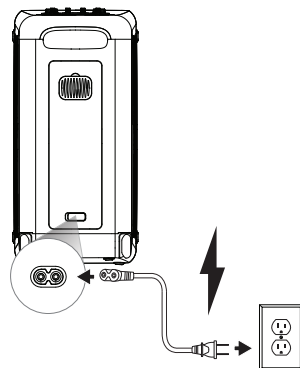



# LIGHT CONTROL

 CONTRÔLE DE LA LUMIÈRE • CONTROL DE LUZ • LICHTSTEUERING • CONTROLLO DELLA LUCE • CONTROLE DE LUZ • 灯光控制 • 光控 • 照明制御  
조명 제어

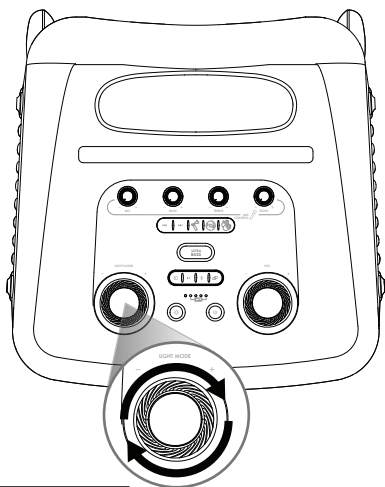

## Turn

  Tourner  
Doblar  
Drehen  
Giro  
Vez  
转动  
轉動  
ターン  
회전하다

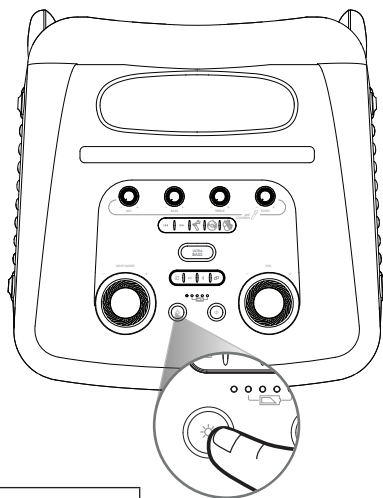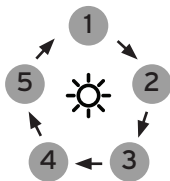


## Press x1

Appuyer 1 fois  
Oprima 1 vez  
Ix drücken  
Premere 1 volta  
Pressionar uma vez  
按 1 次  
按x1  
X1を押します  
1번 누르기

**FRONT + SIDE LIGHTS ON**  
↓  
**LIGHTS OFF**  
↓  
**FRONT LIGHT ON**


# BLUETOOTH® PAIRING MODE

 MODE DE COUPLAGE **BLUETOOTH®** • MODO DE EMPAREJAMIENTO **BLUETOOTH®** • **BLUETOOTH®**-KOPPLUNGSMODUS • MODALITÀ DI ABBINAMENTO **BLUETOOTH®**  
MODO DE EMPARELHAMENTO **BLUETOOTH®** • **BLUETOOTH®** 配对模式 • **BLUETOOTH®** 配对模式 • **BLUETOOTH®**ペアリングモード  
**BLUETOOTH®** 페어링 모드

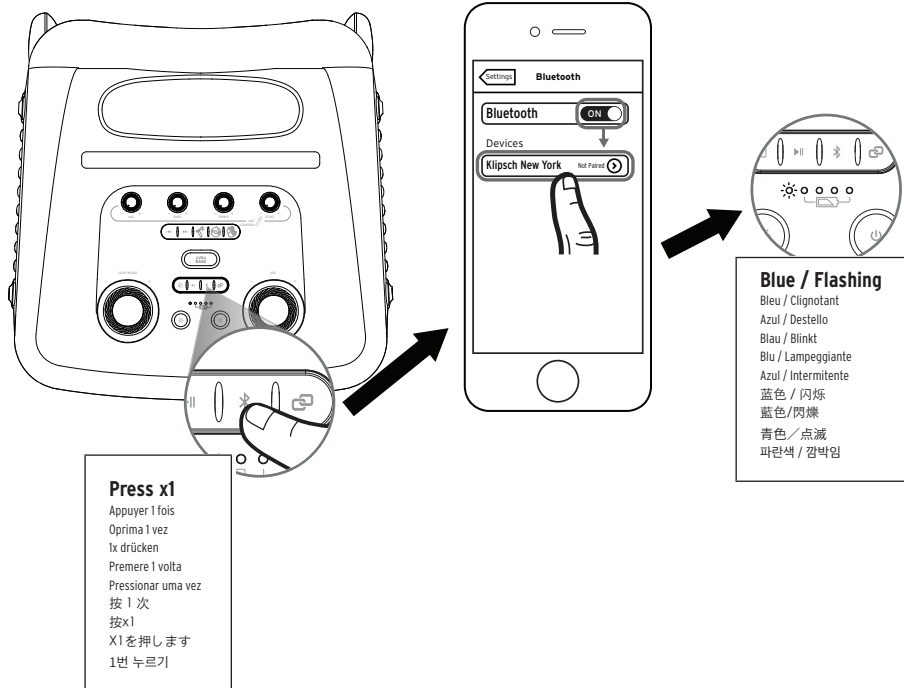


# CONNECTIONS - AUXILIARY

 CONNEXIONS - AUXILIAIRE • CONEXIONES - AUXILIAR • ANSCHLÜSSE - AUX • CONNESSIONI - INGRESSO AUSILIARIO • CONEXÕES - AUXILIAR • 连接 - 辅助 • 接続 - 補助 • 연결 - 보조

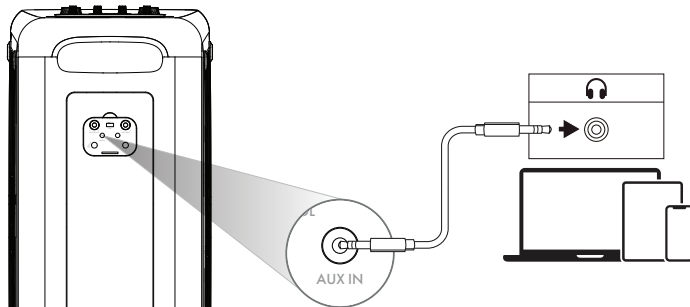


## DAISY-CHAIN

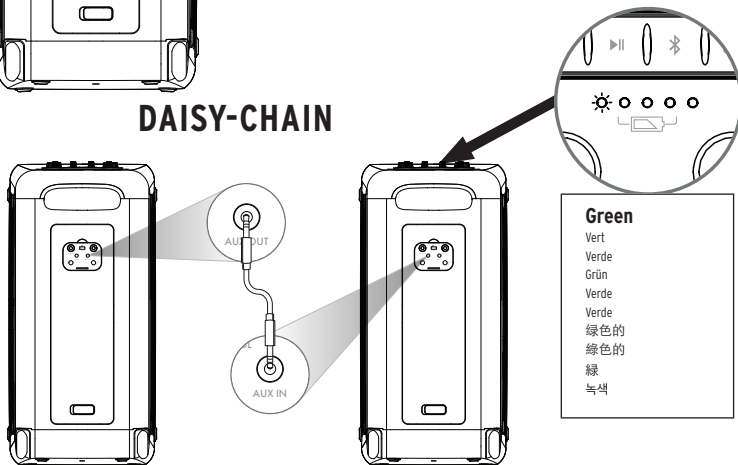 

# CONNECTIONS - USB

 CONNEXIONS - USB • CONEXIONES - USB • ANSCHLÜSSE - USB • CONNESSIONI - USB • CONEXÕES - USB • 连接 - USB • 接続 - USB • 연결 - USB

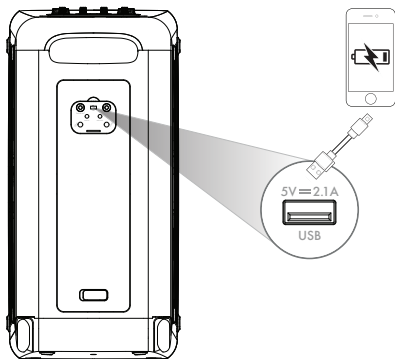

## The Klipsch New York must be powered on to charge your device.

LE KLIPSCH NEW YORK DOIT ÊTRE SOUS TENSION POUR CHARGER VOTRE APPAREIL.

EL KLIPSCH NEW YORK DEBE ESTAR ENCENDIDO PARA CARGAR SU DISPOSITIVO.

DER KLIPSCH NEW YORK MUSS EINGESCHALTET SEIN, UM IHR GERÄT AUFZULADEN.

O KLIPSCH NEW YORK DEVE ESTAR LIGADO PARA CARREGAR SEU DISPOSITIVO.

IL KLIPSCH NEW YORK DEVE ESSERE ACCESSO PER CARICARE IL TUO DISPOSITIVO.

必須打开 KLIPSCH NEW YORK 才能为您的设备充电。

 
KLIPSCH NEW YORK 必須開機為您的裝置充電。

デバイスを充電するには、KLIPSCH NEW YORK の電源が入っている必要があります。

기기를 충전하려면 Klipsch New York의 전원이 켜져 있어야 합니다.

# CONNECTIONS - USB

CONNEXIONS - USB • CONEXIONES - USB • ANSCHLÜSSE - USB • CONNESSIONI - USB • CONEXÕES - USB • 连接 - USB • 接続 - USB • 연결 - USB

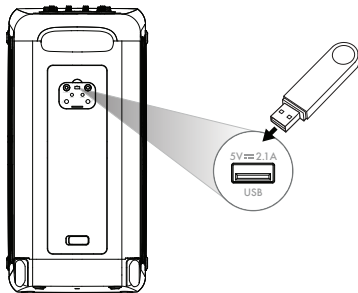

**The USB feature is used for firmware updates, as well as playback of audio files. File formats supported are MP3 and WAV. The thumb drive must be formatted as FAT32.**

La fonction USB permet les mises à jour du firmware et la lecture de fichiers audio. Les formats de fichiers pris en charge sont MP3 et WAV. La clé USB doit être formatée en FAT32.

La función USB se utiliza para actualizaciones de firmware y reproducción de archivos de audio. Los formatos de archivo compatibles son MP3 y WAV. La memoria USB debe estar formateada en FAT32.

Die USB-Funktion dient zum Aktualisieren der Firmware sowie zum Abspielen von Audiodateien. Unterstützte Dateiformate sind MP3 und WAV. Der USB-Stick muss im FAT32-Format formatiert sein.

La funzionalità USB è utilizzata per gli aggiornamenti del firmware e per la riproduzione di file audio. I formati di file supportati sono MP3 e WAV. La chiavetta USB deve essere formattata come FAT32.

O recurso USB é usado para atualizações de firmware, bem como reprodução de arquivos de áudio. Os formatos de arquivo suportados são MP3 e WAV. O pen drive deve ser formatado como FAT32.

USB 功能用于固件更新以及音频文件播放。支持的文件格式为 MP3 和 WAV。拇指驱动器必须格式化为 FAT32。

USB 功能用于軟體更新以及音訊檔案播放。支援的檔案格式是 MP3 和 WAV。此拇指驅動器必須格式化為 FAT32。

 
USB 機能は、ファームウェアのアップデートやオーディオファイルの再生に使用されます。サポートされているファイル形式は MP3 と WAV です。USB ドライブは FAT32 としてフォーマットする必要があります。

USB 기능은 펌웨어 업데이트와 오디오 파일 재생에 사용됩니다. 지원되는 파일 형식은 MP3와 WAV입니다. 썸 드라이브는 FAT32로 포맷해야 합니다.

# CONNECTIONS - USB

CONNEXIONS - USB • CONEXIONES - USB • ANSCHLÜSSE - USB • CONNESSIONI - USB • CONEXÕES - USB • 连接 - USB • 接続 - USB • 연결 - USB

1

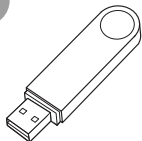

## Ensure your thumb drive is formatted as FAT32 and contains MP3 or WAV files.

ASSUREZ-VOUS QUE VOTRE CLÉ USB EST FORMATÉE EN FAT32 ET CONTIENT DES FICHIERS MP3 OU WAV.

ASEGÚRESE DE QUE SU UNIDAD USB ESTÉ FORMATEADA COMO FAT32 Y CONTENGA ARCHIVOS MP3 O WAV.

STELLEN SIE SICHER, DASS IHR USB-STICK ALS FAT32 FORMATIERT IST UND MP3- ODER WAV-DATEIEN ENTHÄLT.

ASSICURATI CHE LA TUA CHIAVETTA USB SIA FORMATTATA COME FAT32 E CONTENGA FILE MP3 O WAV.

CERTIFIQUE-SE DE QUE SEU PEN DRIVE ESTEJA FORMATADO COMO FAT32 E CONTENHA ARQUIVOS MP3 OU WAV.

 
確保您的拇指驅動器格式化為 FAT32 且包含 MP3 或 WAV 文件。

確保您的拇指驅動器格式化為 FAT32 且包含 MP3 或 WAV 檔案。

サムドライブが FAT32 としてフォーマットされ、MP3 または WAV ファイルが含まれていることを確認します。

썸 드라이브가 FAT32로 포맷되어 있고 MP3 또는 WAV 파일이 저장되어 있는지 확인하세요.

2

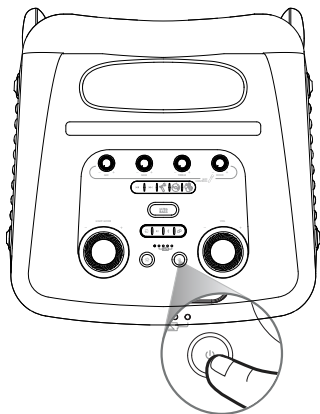

## Power on the product and wait a few seconds for the device to fully come online.

ALLUMEZ LE PRODUIT ET ATTENDEZ QUELQUES SECONDES QUE L'APPAREIL SOIT COMPLÈTEMENT EN LIGNE.

ENCIENDA EL PRODUCTO Y ESPERE UNOS SEGUNDOS HASTA QUE EL DISPOSITIVO ESTÉ COMPLETAMENTE EN LÍNEA.

SCHALTEN SIE DAS PRODUKT EIN UND WARTEN SIE EINIGE SEKUNDEN, BIS DAS GERÄT VOLLSTÄNDIG ONLINE IST.

ACCENDERE IL PRODOTTO E ATTENDERE QUALCHE SECONDO AFFINCHÉ IL DISPOSITIVO SIA COMPLETAMENTE ONLINE.

LIGUE O PRODUTO E AGUARDE ALGUNS SEGUNDOS PARA QUE O DISPOSITIVO FIQUE TOTALMENTE ON-LINE.

打开产品电源并等待几秒钟让设备完全上线。

打開產品電源並等待幾秒鐘讓設備完全上線。

 
製品の電源を入れ、デバイスが完全にオンラインになるまで数秒待ちます。

제품의 전원을 켜고 장치가 완전히 온라인 상태가 될 때까지 몇 초 동안 기다리세요.

# CONNECTIONS - USB

CONNEXIONS - USB • CONEXIONES - USB • ANSCHLÜSSE - USB • CONNESSIONI - USB • CONEXÕES - USB • 连接 - USB • 接続 - USB • 연결 - USB

3

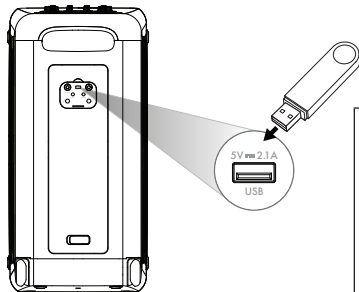

**Insert the thumb drive into the USB port as shown.**

INSÉREZ LA CLÉ USB DANS LE PORT USB COMME INDIQUÉ.

INSERTE LA UNIDAD USB EN EL PUERTO USB COMO SE MUESTRA.

STECKEN SIE DEN USB-STICK WIE GEZEIGT IN DEN USB-ANSCHLUSS.

INSERIRE LA CHIAVETTA USB NELLA PORTA USB COME MOSTRATO.

INSIRA O PEN DRIVE NA PORTA USB, CONFORME MOSTRADO.

 
如图所示，将拇指驱动器插入 USB 端口。

如圖所示，將拇指驅動器插入 USB 連接埠。

図のように、USB ポートにサムドライブを挿入します。

그림과 같이 USB 포트에 썸 드라이브를 삽입합니다.

4

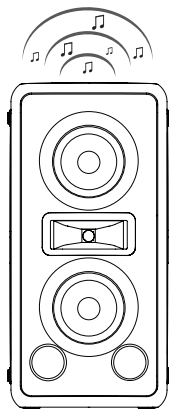

**Audio files from the thumb drive should now be playing.**

LES FICHIERS AUDIO DE LA CLÉ USB DEVRAIENT MAINTENANT ÊTRE LUS.

AHORA DEBERÍAN REPRODUCIRSE LOS ARCHIVOS DE AUDIO DE LA UNIDAD USB.

AUDIODATEIEN VOM USB-STICK SOLLTEN JETZT ABGESPIELT WERDEN.

ORA I FILE AUDIO DALLA CHIAVETTA USB DOVREBBERO ESSERE RIPRODOTTI.

OS ARQUIVOS DE ÁUDIO DO PEN DRIVE AGORA DEVEM ESTAR SENDO REPRODUZIDOS.

现在应该正在播放拇指驱动器中的音频文件。

 
現在應該正在播放拇指碟中的音訊檔案。

これで、サムドライブからのオーディオファイルが再生されるはずです。

이제 썸 드라이브의 오디오 파일이 재생되어야 합니다.


# CONNECTIONS - 1/4" INPUT

CONNEXIONS - ENTRÉE 1/4" • CONEXIONES - ENTRADA 1/4" • ANSCHLÜSSE - 1/4" EINGANG • CONNESSIONI - INGRESSO 1/4" • CONEXÕES - ENTRADA 1/4"  
连接 - 1/4" 输入 • 連接 - 1/4" 輸入 • 接続 - 1/4" 入力 • 연결 - 1/4" 입력

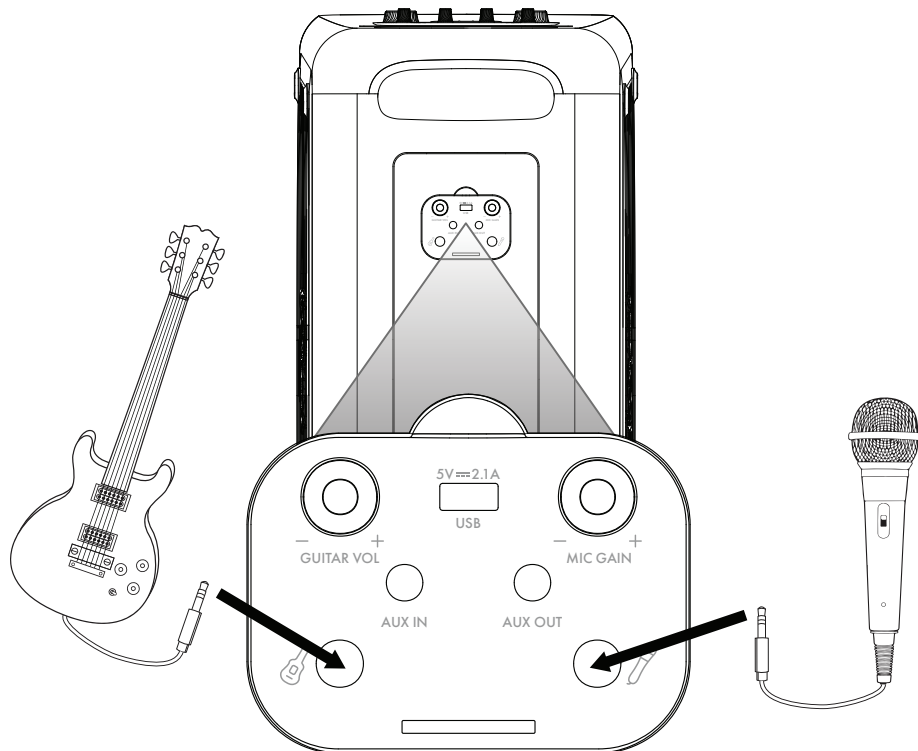

# TRUE WIRELESS STEREO PAIRING

 
VÉRITABLE COUPLAGE STÉRÉO SANS FIL • VERDADERO EMPAREJAMIENTO ESTÉRÉO INALÁMBRICO • ECHTE KABELLOSE STEREO-KOPPLUNG • VERO ACCOPPIAMENTO STEREO WIRELESS • EMPARELHAMENTO ESTÉRÉO SEM FIO VERDADEIRO

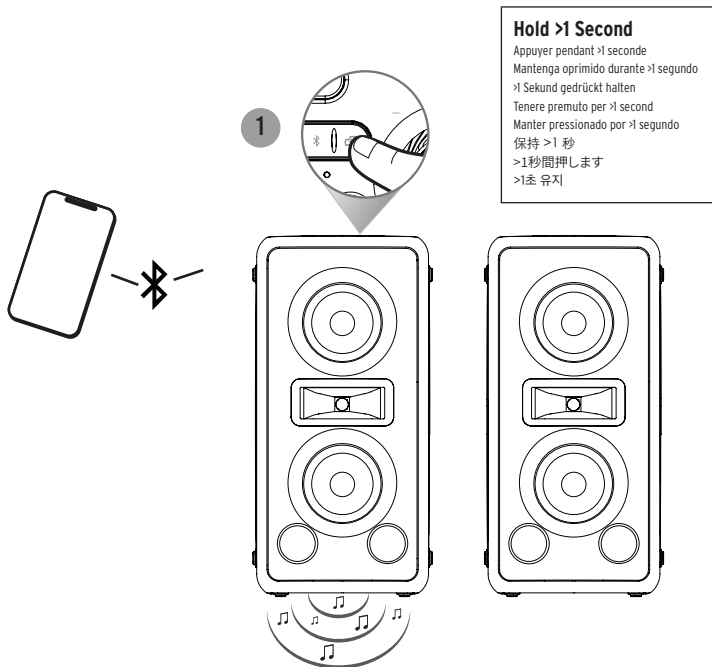

# TRUE WIRELESS STEREO PAIRING

VÉRITABLE COUPLAGE STÉRÉO SANS FIL • VERDADERO EMPAREJAMIENTO ESTÉRÉO INALÁMBRICO • ECHTE KABELLOSE STEREO-KOPPLUNG • VERO ACCOPPIAMENTO STEREO WIRELESS • EMPARELHAMENTO ESTÉRÉO SEM FIO VERDADEIRO

 
2

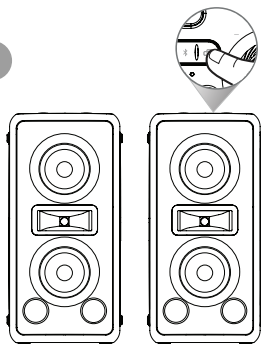

## Press x1


Appuyer 1 fois  
Oprima 1 vez  
1x drücken  
Premere 1 volta  
Pressionar uma vez  
按 1 次  
按x1  
X1を押します  
1번 누르기

 3

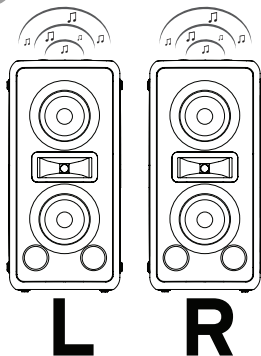

# BROADCAST MODE PAIRING

 
COUPLAGE EN MODE DIFFUSION • EMPAREJAMIENTO DEL MODO DE TRANSMISIÓN • KOPPLUNG IM BROADCAST-MODUS • ACCOPPIAMENTO IN MODALITÀ TRASMISSIONE • EMPARELHAMENTO DO MODO DE TRANSMISSÃO • 广播模式配对 • ブロードキャストモードのペアリング • 브로드캐스트 모드 페어링

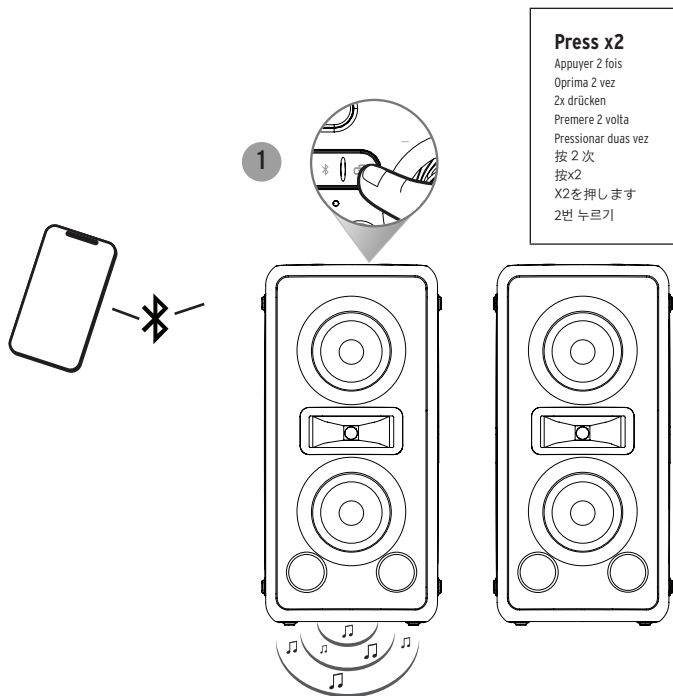

# BROADCAST MODE PAIRING

COUPLAGE EN MODE DIFFUSION • EMPAREJAMIENTO DEL MODO DE TRANSMISIÓN • KOPPLUNG IM BROADCAST-MODUS • ACCOPPIAMENTO IN MODALITÀ TRASMISSIONE • EMPARELHAMENTO DO MODO DE TRANSMISSÃO • 广播模式配对 • ブロードキャストモードのペアリング • 브로드캐스트 모드 페어링


 
2

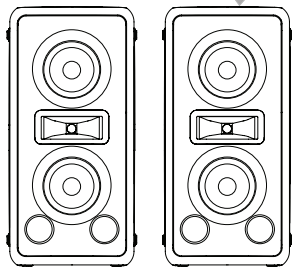

## Press x1


Appuyer 1 fois  
Oprima 1 vez  
1x drücken  
Premere 1 volta  
Pressionar uma vez  
按 1 次  
按x1  
X1を押します  
1번 누르기

  3

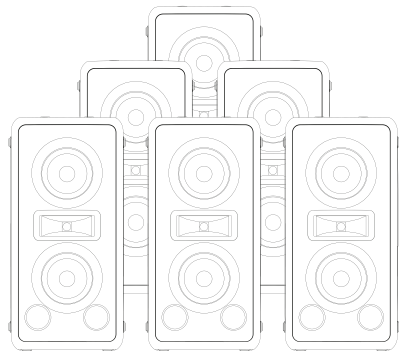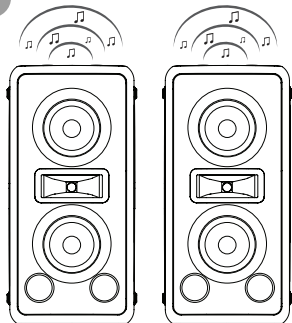


# FACTORY RESET

 RÉINITIALISATION • RESTABLECIMIENTO DE FÁBRICA • RÜCKSETZUNG AUF WERKSEINSTELLUNG • RIPRISTINO IMPOSTAZIONI DI FABBRICA  
RESTABELECIMENTO DAS CONFIGURAÇÕES DE FÁBRICA • 恢复出厂设置 • 恢復出廠設定 • ファクトリーリセット • 공장 초기화

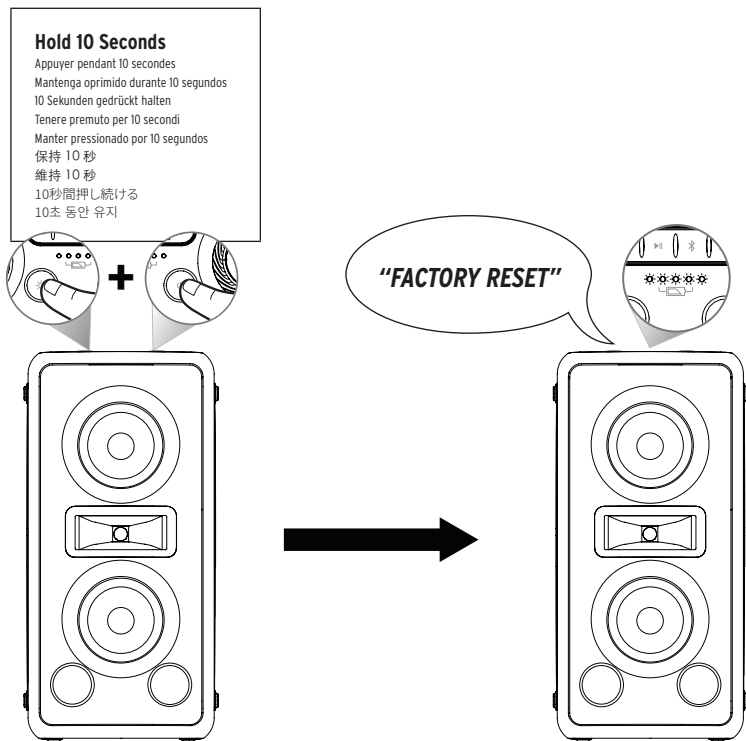

## CARE AND CLEANING

 ENTRETIEN ET NETTOYAGE • CUIDADO Y LIMPIEZA • PFLEGE UND REINIGUNG • CURA E PULIZIA • CUIDADOS E LIMPEZA • 保养与清洁 • お手入れ • 護理  
和清潔 • 관리 및 청소

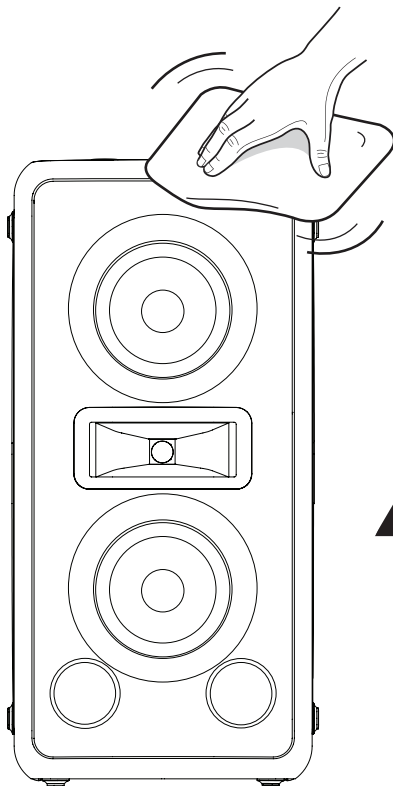



**3502 WOODVIEW TRACE, INDIANAPOLIS, IN, USA**

**KLIPSCH.COM**

©2025 Premium Audio Company, LLC, a wholly owned subsidiary of Gentex Corporation (NASDAQ: GNTX). Klipsch and Keepers of the Sound are trademarks of Klipsch Group, Inc., registered in the United States and other countries. The *Bluetooth*® word mark is a registered trademark owned by Bluetooth SIG, Inc. and any use of such mark by Klipsch Group, Inc. is under license.

V06 - 260226