



## Bassbuds Rush TWS Earbuds - Product Manual



**Important:** pTron Bassbuds Rush is set at 50% default volume, and the earbuds does not support volume adjustment. Please control the volume via the connected phone.



Touch Sensitive Area  
(TSA)

### **Smart Power On & Pairing**

1. Open the charging case cap & take out both the earbuds outside from the charging case, buds will switch ON automatically.
2. Wait for 2-3 seconds until L & R earbuds pair with each other.
3. Turn on the Bluetooth on your phone & search "pTron TWS" to connect with your device.

**Note:** TSA stands for Touch Sensitive Area.

### **Smart Power Off**

Touch TSA on both the earbuds for 5 seconds Or Keep both the earbuds into the charging case and close the charging case cap properly.

**Note:** TSA stands for Touch Sensitive Area.

### **Mode Change**

Touch TSA on either 3 times consequently to change the mode - Game mode and music mode.

### **Connectivity Bluetooth - Automatic**

Open the charging case cap & take out both the earbuds outside from the charging case, buds will switch ON automatically. They will automatically connect to the last connected device (Instant wake & pair technology).

**Note:** The last connected device must be in 10 meters wireless range and Bluetooth function must be On.

### **Calling or Music through Mono & Dual Buds**

**Mono Bud Use** - Just place the right or left earbud back into the charging case and close the cap properly.

**Dual Buds Use** - Use left & right earbuds together.

### **Awaking Voice Assistant - Siri/Google Assistant**

Touch TSA on either earbud for 2-3 seconds until a beep sound comes.

### **Call & Music Functions**

**Answer/Hangup a Phone Call** - Touch TSA on either earbud once.

**Reject a Phone Call** - Touch TSA on either earbud for 2-3 seconds.

**Music Play/Pause** - Touch TSA on either earbud once.

**Next Song** - Touch TSA twice on Right earbud.

**Previous Song** - Touch TSA twice on Left earbud.

**Note:** TSA stands for Touch Sensitive Area.

### **Charging the Earbuds**

1. Place both earbuds into the charging case properly and close the cap. Earbuds will power off automatically and start charging.
2. While charging the earbuds the Green LED will flash constantly.

### **Charging the Case**

1. Connect the Type-C USB cable to the charging case and the USB end to a 5V power source.
2. While charging the case the Green LED light on the side of the case will flash/blink.
3. When the case is fully charged the Green LED light will get steady and you will also see 100% on the display panel.

### **Troubleshooting Scenario 1: One Earbud is Not Working**

1. Place both the earbuds in the charging case and close the charging case cap.
2. Take out both the earbuds together from the charging case.
3. Wait until L & R earbud pair to each other. After successful matching, only 1 earbud will flash Green & Red light.
4. Turn ON the Bluetooth on your phone, search for "pTron TWS" & connect.

### **Troubleshooting Scenario 2: Earbuds Not Connecting/Scanning**

1. Place both the earbuds in the charging case and close the charging case cap.
2. Take out both the earbuds together from the charging case.
3. Restart your Bluetooth device or phone.
4. Now, search for " pTron TWS" on your Bluetooth device & connect.

### **Troubleshooting Scenario 3: Earbuds Disconnecting During a Phone Call**

1. Charge earbuds 100% before use.
2. Restart the earbuds and reconnect with your device.

### **Safety Precautions**

1. Please keep this device away from extreme heat, liquids, humidity or corrosive environment.
2. Please don't over-charge the product as it will decrease the service life of battery.
3. Using incompatible USB cable or high voltage chargers can damage the product & void the product warranty. We strongly recommend using a good quality DC5V-1A chargers & the USB cable included in the package.
4. This product or the Bluetooth function should not be used during charging.
5. Don't jam the ports such as charger port, LED port, etc.
6. It is recommended to utilize the product below the maximum volume in order to protect your hearing.
7. Please don't open/temper the product or product's battery.
8. Please keep the product out of children's reach.
9. Dispose the product responsibly and adhere to your local authority guidelines.

### **Disclaimer**

The colors and specifications shown or mentioned in the user manual may differ from the actual product. Images shown are for representation purpose only. Other product logos and company names mentioned herein may be trademarks or on trade names of their respective owners.

**Customer Care Details:** support@ptron.in and 040-040 - 67138888

**Product Registration/Warranty Registration:** <https://ptron.in/apps/product-registration>

**Service Centers List:** <https://ptron.in/pages/ptron-service-centers>