



The Creative Life

115C7K

115" Premium QD-Mini LED Google TV



BASIC INFORMATION

Operating System	Google TV
Storage	64GB
Languages	English, Vietnamese, Thai, Chinese, Russian, Arabic, Traditional Chinese, Indonesian, French, Spanish (Latin America), Farsi, Mongol, Uzbek, Hebrew.
TV System	ATV: Auto/PAL/NTSC DTV: DVB-T MPEG2/MPEG4 DVB-T Compatible
AV System	PAL, NTSC
HDMI & HDCP Version	4 x HDMI2.1 & HDCP2.2
HDR	HDR10+ & Dolby Vision IQ
Power Supply	AC 100V-240V 50/60Hz
Power Consumption (Standby)	<0.5W
Star Rating	6 Star
CEC	1100Kwh
ECO Energy Efficiency	Yes

BASIC FUNCTION

Google Assistant/Voice Search	Voice input via voice remote control (RC833A). Hands-free voice input via built-in MIC.
Instant Power On	Special mode for quick boot up
CEC	Yes
Teletext	Yes
EPG	Yes (Only for DTV Programme)
Subtitle	Yes (Only for DTV Programme)
Parental Control	Yes (for DTV programme only)
USB PVR/Pause Live TV	Yes/Yes

PICTURE

Picture Modes	Vivid, Standard, Sport, Filmmaker Mode, Movie, Game, PC, Intelligent
Aspect Ratio	16:9/4:3/Cineraama/14:9 Zoom/16:9 Zoom/16:9 Zoom Up/ Auto Detect
Dynamic Brightness	Off/ECO/Brightness+
Full Array	Yes (2880 Zones)
Overscan	On/Off
AiPQ Pro Processor	Yes
Auto Low Latency Mode (ALLM)	Yes
Wide Colour Gamut	Yes
Quantum Dot Technology	Yes
IMAX Enhanced	Yes
Variable Refresh Rate	288Hz* / 144Hz
Freesync Premium Pro	Yes

* Up to 2K for gaming

TCL Electronics Australia Pty Ltd | www.tcl.com/au

Product specifications subject to change. Wall bracket not included. Dimensions in millimetres (mm).
Please note that some listed features may require a software update to be fully available.



The Creative Life

115C7K

115" Premium QD-Mini LED Google TV

CONNECTIVITY

Internet Connectivity	2.4GHz + 5GHz dual-band WiFi 802.11 a/b/g/n/ac
	Ethernet Network
Bluetooth	Yes. Bluetooth 5.4
HDMI Inputs	4 x HDMI Inputs (2.1) & HDCP2.2
USB Inputs	1 x USB 2.0, 1 x USB 3.0
Optical SPDIF Output/HDMI eARC	Yes
eARC	Yes

USB DEVICE MEDIA FORMAT

Music	MP3/MKV/WMA/AVI
Picture	JPEG/PNG/BMP/HEIF Codec
Multimedia Video/Audio Decoder	H.265, H.264, MPEG1/2/4, VC1, WMV, VP8, VP9, AV1
Video Format up to	Up to 4K@60Hz
USB Mouse/Key Board Support	Yes

SOUND

Audio Power Output	100W
Sound Modes	Standard/Movie/Music/Voice/ Game/Sports/Intelligent
Dolby Atmos	Yes
DTS Virtual: X	Yes
Built-in Subwoofer	Yes
Upfiring Speakers	Yes
Audio Channels	4.2.2 Ch
Onkyo Audio	Yes

PANEL SPECIFICATION

Backlight Unit	Full Array Local Dimming
Aspect Ratio	16:9
Display Resolution	Ultra HD (3840×2160)
Peak Brightness	3000 Nits
Contrast Ratio	7000:1
Response Time (G to G)	6.5ms
Viewing Angle (H/V)	178°/178°
Clear Motion Rate (CMR)	200

SMART TV FEATURES

Google Assistant	Works with Alexa
Hands Free Voice Control	Media Center
Google Play Store	Amazon Prime
YouTube	Freeview
Google Play Movies/TV	Stan
Chromecast Built-in	Netflix
Works with Apple AirPlay	Kayo/Binge/Disney+/ Paramount+/Apple TV+ *
Works with Apple HomeKit	

**Available on Google Play Store.*

ACCESSORIES

Remote Control	RC833A
Remote Control Battery	2 x AAA (included)
Quick Start Guide	Yes
Warranty Card	Yes
User Manual	Yes

DIMENSIONS & WEIGHT

Dimensions With Stand (mm)	2566 (W) x 1508 (H) x 445 (D)
Dimensions Without Stand (mm)	2566 (W) x 1471 (H) x 57 (D)
Carton Dimensions (LxWxH mm)	2821 x 267 x 1659
Net Weight With Stand (Kg)	99.8
Net Weight Without Stand (Kg)	98.3
Gross Weight With Packaging (Kg)	229.3 (with pallet)

WALL MOUNT VESA (PURCHASED SEPARATELY)

VESA Hole Pattern	600 x 500
Screw Size	M8 x 16
Screw Quantity (pcs)	2

TCL

 Google TV

OPERATION MANUAL

C6K/C7K/C8K SERIES



TCL Home App

Your TCL Smart Hub.

Download Now !

To enjoy all smart features and services on your Google TV™ from TCL, a Google Account, a TCL account, and a reliable broadband internet connection are required.

Figures and illustrations in this User Manual are provided for reference only and may differ from actual product appearance. Product design and specifications may be changed without notice.

Table of Contents

Chapter 1: Safety Information

Precautions	3
Warning	3
Product	3
Power and Plug	3
Power Cord and Signal Cable	3
Use Environment	3
Cleaning	3

Chapter 2: Connections and Setup

Sockets	4
Network Connection	5
Remote Control Functions	6
How to Use the Remote Control	6
Installing Batteries	7
Precautions on using batteries	7
TV Buttons	8
Switching On	9
Initial Setup	9
Switching Off	9

Chapter 3: Basic TV Operations

Adjusting Volume	10
Installing Channels	10
Accessing Channels	10
Using Settings Menu	10
Using Subtitles	10
Turning On/Off Subtitles	10
Enabling Subtitle Languages on Digital TV Channels	10
Selecting a Subtitle Type on Digital TV Channels ...	11
Using EPG (Electronic Program Guide)	11
Freeview	11
HbbTV	11
HbbTV Access	11
HbbTV Deactivation	11

Chapter 4: Using More of Your TV

Accessing Google TV Homepage	12
Accessing TCL Channel	12
Watching Connected Devices	12
External devices control (CEC)	12
Enabling or Disabling CEC	12
Using Power on the TV in sync	12
Using Device standby in sync	12
Password in Parental Controls	13
Bluetooth Function	13

Blue Light Filter	13
Reset Shop	13
Multi Visual	13
Works with Alexa	14
Apple AirPlay and HomeKit	14

Chapter 5: Google TV

Using the Hands-free TV Voice Control	15
Accessing Google Play	15
Network Wake Up	15

Chapter 6: Other Functions

Variable Refresh Rate	16
Live TV Pause	16
PVR (Personal Video Recorder)	16
MagiConnect	17

Chapter 7: Other Information

Problems & Solutions	18
Troubleshooting	19
Legal Statement	20

Precautions

Read all of the instructions before operating the set. Keep these instructions well for future use.

Warning

A television set may fall, causing serious personal injury or death. Many injuries, particularly to children, can be avoided by taking simple precautions such as:

- ALWAYS use cabinets or stands or mounting methods recommended by the manufacturer of the television set.
- ALWAYS use furniture that can safely support the television set.
- ALWAYS ensure the television set is not overhanging the edge of the supporting furniture.
- ALWAYS educate children about the dangers of climbing on furniture to reach the television set or its controls.
- ALWAYS route cords and cables connected to your television so they cannot be tripped over, pulled or grabbed.
- NEVER place a television set in an unstable location.
- NEVER place the television set on tall furniture (for example, cupboards or bookcases) without anchoring both the furniture and the television set to a suitable support.
- NEVER place the television set on cloth or other materials that may be located between the television set and supporting furniture.
- NEVER place items that might tempt children to climb, such as toys and remote controls, on the top of the television or furniture on which the television is placed.

If the existing television set is being retained and relocated, the same considerations as above should be applied.



This symbol indicates that high voltage is present inside. It is dangerous to make any kind of contact with any internal part of this product.



This symbol indicates that the fuse may be in the neutral, and that the mains shall be disconnected to deenergize the phase conductors.

If an outside antenna or cable system is connected to the product, be sure the antenna or cable system is grounded by a skilled person so as to provide some protection against voltage surges and built-up static charges.

Product

- Do not block or cover the ventilation openings on the back cover.
- Do not push objects of any kind into this unit through the cabinet slots as they could touch the current carrying parts or short-circuit parts, resulting in fire, electric shock, or damage to the unit.
- Do not attempt to open the cabinet as this may cause damage. There are no parts inside you can service by yourself. Refer all servicing to qualified personnel.

- Do not touch the screen surface with fingers as this may scratch or mar the TV screen.
- Do not impact the TV screen with hard pressure as this may damage the TV screen severely.
- This appliance is not intended for use by young children or infirm persons without supervision. Young children should be supervised to ensure that they do not play with the appliance.

Power and Plug

- Unplug the set under the following conditions:
 - If the set will not be used for a long period of time.
 - If the power cord or the power outlet/plug is damaged.
 - Follow the instructions to install and adjust the product. Adjust those controls that are covered in these operating instructions as improper adjustment of other controls may result in damage. If this happens, unplug the set and refer to the service personnel.
 - If the set is subject to impact or has been dropped and the cabinet has been damaged.
- Where the mains plug or an appliance coupler is used as disconnect device, the disconnect device shall remain readily operable.

Power Cord and Signal Cable

- Do not allow anything to rest on or roll over the power cord and the signal cable.
- Protect the power cord and the signal cable from being trampled.
- Do not overload the power cord or the power outlet.
- Do not expose the power cord and the signal cable to moisture.

Use Environment

- Do not place the set on an unstable cart, stand, or table.
- Place the set on a place that allows good ventilation.
- Do not use the set near damp, and cold areas.
- Do not expose the set to excessive heat such as direct sunlight, fire, or the like and no naked flame sources, such as lighted candles, should be placed on the apparatus.
- Do not expose the set to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on the apparatus.
- Do not use the set in dusty environments.
- Operating Temperature: 5°C to 35°C (41°F to 95°F)
Operating Humidity: 20% to 80%, non-condensing
Storage Temperature: -15°C to 45°C (5°F to 113°F)
Storage Humidity: 10% to 90%, non-condensing

Cleaning

 
- Dust the set by wiping the screen and the cabinet with a soft, clean cloth or some special liquid cleaner.
- Do not apply excessive force to the screen when cleaning.
- Do not use water or other chemical cleaner to clean the screen as this may damage the surface of the TV screen.

All other safety instructions about our TV sets are also applicable here. Wall mount bracket not included.

(Note: Certain TV models are not designed to be mounted to the wall.)


Sockets

Note: The location and names of the sockets on the TV may vary according to TV model, and not all sockets are available on all models.

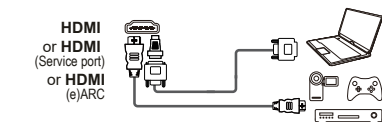

HDMI, HDMI(SERVICE) or HDMI(eARC/ARC) socket (input)

 The HDMI (High-Definition Multimedia Interface) socket can be used to connect a Blu-ray player, Games Console, PC with a compatible video card installed, certain DVD players or a high-definition compatible digital satellite decoder. This socket provides an uncompressed digital connection that carries both video and audio data by way of an integrated mini-plug cable.



AV IN adapter socket(* not available for some models)

The AV IN adapter socket can be used to connect the attached AV adapter cable with VIDEO and AUDIO L & R IN sockets. The AV IN sockets can be used to connect a range of equipment, including video recorders, camcorders, decoders, satellite receivers, DVD players, or games consoles. The VIDEO IN socket provides composite video connection.

 


ANTENNA/CABLE IN socket (input)

(* not available for some models)

This socket can be used to connect the outside aerial or cable network.

Note: Cable not available in all regions.



LAN

RJ45 plug for connecting to external router/modem or network access equipment.



AUDIO OUT (OPTICAL) socket

 
This socket can be used to connect a compatible digital audio receiver.



Headphone socket (output) (* not available for some models)

This socket can be used to connect headphones or stereo earphones.

Warning: Excessive sound pressure from earphones and headphones can cause hearing loss.



USB2.0 or USB 3.0 socket (input)

The USB socket(s) can be used to connect a USB 2.0 or USB 3.0 device.

Note: The number of USB sockets on the TV may vary according to TV model.

Network Connection



Your TV will require an Internet connection to operate all functions. Data usage charges may apply. Please refer to your Internet Service Provider (ISP) for additional information.

To access the Internet, you must subscribe to high speed broadband Internet service from your Internet service provider.

Your TV can be connected to your home network in two ways:

 
- Wired, using the RJ45 (LAN) connector on the back panel.
- Wireless, using the internal wireless or external wireless USB adapter and your home wireless network.

Note: The following instructions are just the usual ways to connect your TV to the wired or wireless network. The connection method may be different depending on your actual network configuration. If you have any questions about your home network, please refer to your ISP (Internet Service Provider).

Connecting to a wired Network

To connect to a wired network:


1. Ensure you have:
 - An Ethernet cable long enough to reach your TV
 - A router or modem with an available **LAN port**
 - A high-speed Internet connection
 - A **LAN port** on the back of the TV
2. Connect your Ethernet cable to the router and to the **LAN port** on the back of the TV.
3. Use the **Network and internet** menu to configure the TV.

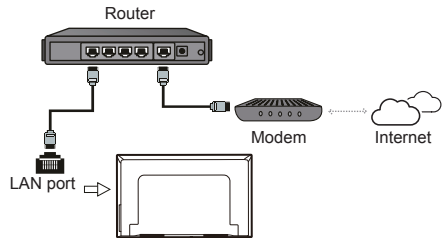

Connecting to a Wireless Network

To connect to a wireless network

 1. Ensure you have:
 - A router broadcasting a high-speed wireless signal
 - A high-speed Internet connection
2. Use the **Network and internet** menu to configure the TV.

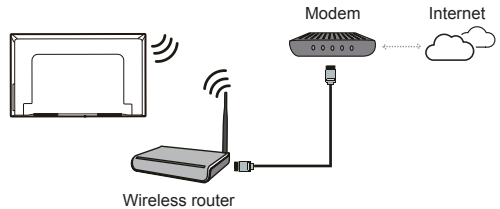

Note: Please follow below steps to enter the **Network and internet** menu.

 
1. Press **⚙** on the remote control to display the dashboard menu.
2. Select **⚙ (All settings)** and press **OK** to enter the settings menu.
3. Press **Up/Down** to select **Network and internet**, then press **OK** to enter the submenu and follow the on-screen guidance to set up your network.

Remote Control Functions

Most of your television's functions are available via the menus that appear on the screen. The remote control(s) supplied with your set can be used to navigate through the menus and to configure all the general settings.

Notes:

1. Figures and illustrations in this operation manual are provided for reference only and may differ from actual product appearance. 2. The remote control type may be changed without notice, please refer to the remote control attached with your TV. 3. Certain function may not be available for some models.

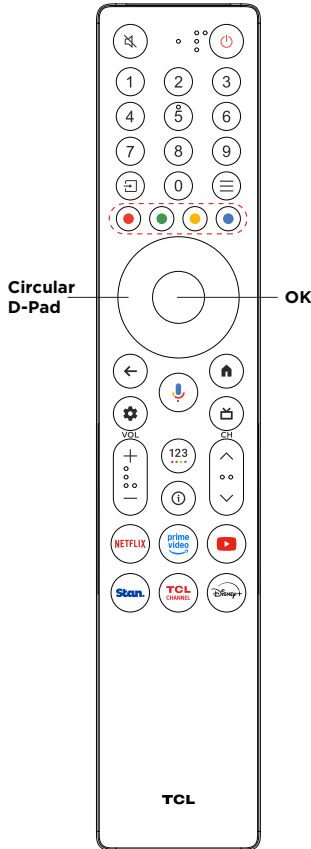

- To switch the sound off and back on.
- Standby / quit standby.
- Numeric buttons**
 - To enter channel numbers or a digit.
 - To select input source. Or to display the quick panel.
 - To display and edit the quick settings panel.
- Colour buttons**
 - To select tasks or Teletext pages; to be used for HbbTV function.
- Circular D-Pad**
 - Navigation direction buttons (Up/Down/Left/Right).
 - OK** To confirm an entry or selection.
 - To return to the previous menu or quit an app.
 - To display the dashboard menu.
 - Press the Assistant button on your remote to talk to the Google Assistant. (Available only in Google TV mode and when the network connection works normally.)
 - To access the Google TV homepage.
 - To access Electronic Program Guide. (only available for digital channels.)
- VOL** To control the volume.
- To pop up the virtual remote control keyboard when available.
- To display programme information, if available.
- CH** To change channels.
- To access Netflix.
- To access Prime video.
- To access YouTube.
- To access Stan.
- To access TCL Channel.
- To access Disney.

Notes:

- The App buttons may differ depending on the model. The App button is used for accessing the corresponding App.
- The Google Assistant is not available in certain languages and countries.

 
Google and Google TV are trademarks of Google LLC.

- How to Use the Remote Control

- a. Before using the Google Assistant button, you must finish pairing the remote with the TV first.
- b. This Google Assistant function is only available for content search from certain apps.
- c. Set languages in the (All settings) > **System** > **Language** to your local language or official language to enhance voice search successfully.

- Installing Batteries

1. Push to open the back cover as illustrated.
2. Insert two AAA batteries according to the polarities marked on the battery case.
3. Replace the back cover as illustrated.

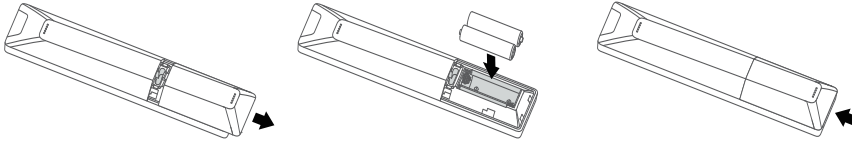

CAUTION: Risk of fire or explosion if the battery is replaced by an incorrect type.

Precautions on using batteries

- Only use the battery types specified.
- Make sure you use the correct polarity.
- Do not mix new and used batteries.
- Do not use rechargeable batteries.
- Disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery, may result in an explosion.
- Leaving a battery in an extremely high temperature surrounding environment, such as sunshine, fire, or hot surface may result in an explosion or the leakage of flammable liquid or gas.
- A battery subjected to extremely low air pressure may result in an explosion or the leakage of flammable liquid or gas.
- Remove the batteries from the remote control if you are not using it for a long period of time.
- Attention should be drawn to the environmental aspects of battery disposal.

TV Buttons

 
- Power button

If the batteries in your remote control are run down, you can use the button on your TV set.

The model has only one  button. It may work just as Standby/Quit standby button, or as a multi-function controller.

You can turn on the TV by pressing the  button on the TV set.

While the TV is on, press the  button to display the multi-function menu. For more information about how to use the multi-function menu, please refer to the figure below.




- Press to move the highlight to the next function selection
- Press and hold the button for more than 2 seconds to confirm your selection.

Note:

You can follow the on-screen guide to operate. Figures and illustrations are provided for reference only and may vary depending on the model.

 
- MIC switch



The MIC button is located next to the power button. If you want to use the feature of hands-free TV voice control, turn on this switch.


Connections and Setup

 Switching On

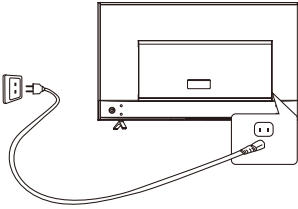

1. Connect the power cable FIRST to the television, THEN to a mains socket. (**Note:** For some models, the power lead may be fixed to the television.)

 WARNING: Your TV set should only be connected to an AC supply. The TV's standby light should be turned on. It must not be connected to a DC supply. If the plug is detached from the cable, do not, under any circumstances, connect it to a mains socket, as there is a risk of electric shock.

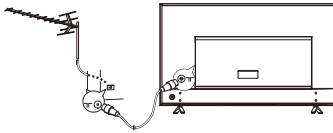

2. Connect an outside aerial to the **ANTENNA/CABLE IN** socket at the back of the TV set.
The aerial socket (75 OHM - VHF / UHF / cable) can be used for connecting an external aerial or other equipment fitted.

3. When powered on, the TV will be turned on directly or be in standby mode.

If the power indicator lights up, the TV set is in standby mode. Press the  button on the remote control or on the TV set to turn on the TV.

Note: The figures are for representation only, the location of power socket of the television might differ depending on the model.

Initial Setup

The first time you switch the set on, the **Welcome** wizard appears, which guides you through the initial setup process. Follow the on-screen instructions to finish the initial setup process such as selecting the language, pairing your remote, connecting to the network, and more. During each step, either make a choice or skip the step. If you skip a step, you can perform the setup later from the Settings menu.

Notes:

- It's recommended to select **Set up Google TV** and finish its setup to enjoy more features during the initial setup process. If you have finished basic TV's setup, you can reaccess Google TV by pressing  on the remote control, selecting  (**All settings**) > **Set up Google TV** and pressing **OK** to confirm.
- When you pair your remote, keep the remote control and TV within 1 meter, and follow the on-screen guide for pairing. After finishing pairing the remote, you can use the Google Assistant button. If you skip remote pairing, you will be prompted to pair the remote with the TV again when you use the Google Assistant button for the first time.

Switching Off

- To put the TV set into standby mode, press the  button on the remote control. The TV set remains powered up, but with low energy consumption.
- To switch off the TV set, unplug the mains socket from the mains outlet.

Note: In order to save energy and protect environment, certain models are designed with a relay switch. It is a normal phenomenon if you hear the sound of the relay when you turn on or off the TV set.

Adjusting Volume

Volume control: press the **VOL+** / **—** buttons on the remote control or the corresponding buttons on the TV set to increase or decrease the volume.

Sound mute: press the **M** button to temporarily mute the sound. Press this button again or the **VOL+** button to restore the sound.

Installing Channels

This section describes how to search and store channels automatically. This may be done in either of the cases below:

- you are prompted that there are no channels in TV mode;
 - you want to update your channels.
1. Press **⚙** on the remote control and select **⚙(All settings) > Channels and Inputs > Channels > Channel Scan**. Press **OK / >** to enter.
 2. The TV installs and arranges channels according to your country or region. Press **^ / v** to select **Country / Region**, and press **OK** to enter. Enter the password you have set in the **⚙(All settings) > System > Parental Controls** menu. Press **^ / v** to select your country or region and press **OK** to confirm.
 3. Press **^ / v** to select **Scan Automatically** and press **OK** to enter.
 4. Press **^ / v** to select **Channel Type** and press **< / >** to select **Digital, Analog or Digital & Analog**.
 5. After configuration is completed, press **v** to select **Search** and press **OK** to start scanning channels.
 6. The channel search may take a few minutes. After the automatic search, channels are arranged in a preset order. If you wish to hide or move channels, press **⚙** on the remote control, select **⚙(All settings) > Channels and Inputs > Channels > Edit Channels** and press **OK** to enter.

Note: If the channel search retrieved only the analogue channels it could be caused by poor broadcasting and therefore is not covered by manufacturer warranty. Manufacturers cannot be held responsible for lack of or poor broadcasting in some areas.

Accessing Channels

Using the **^ / v buttons:** press the **^ / v** buttons on the remote control to scroll through the channels.

Using the **OK button:** press the **OK** button to display the preview bar and press **^ / v / < / >** and **OK** to enter.

 
Using the **CH **^ / v** buttons:** press the **CH** **^ / v** buttons on the remote control to scroll through the channels.

Using the **LIST button:** press **LIST** to display the virtual remote control keyboard, then you can select the desired button to operate accordingly.

Using Settings Menu

Allows you to not only adjust settings, such as picture, Network and internet, Accounts and Sign-In and Apps, etc., but also set preferences.

1. Press **⚙** on the remote control to display the dashboard menu.
2. Select **⚙(All settings)** and press **OK** to enter the settings menu.
3. Press **^ / v** to select the desired item and press **OK** to enter the corresponding submenu.
4. In submenus, press **^ / v** to select menu options, then press **OK** to enter the option list or the corresponding submenu, or press **OK** to toggle on or off, or press **< / >** to adjust the setting.
5. Press **←** to return to the previous menu.

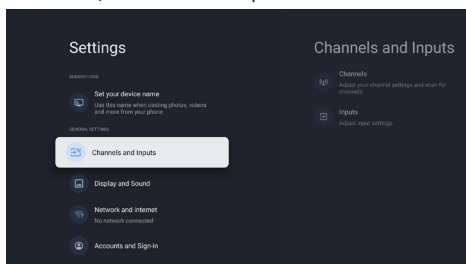

Using Subtitles

You can enable subtitles for each TV channel. Subtitles are broadcast via Teletext or DVB-T digital broadcasts. With digital broadcasts, you have the additional option of selecting a preferred subtitle language.

Notes:

- **Subtitle** can also be accessed by pressing the **Info** button **i**. This will display the program information, and from here you can toggle subtitles off and on.
- Some options are available only when **Subtitle** is set to on.

Turning On/Off Subtitles

1. Press **⚙** on the remote control, select **⚙(All settings) > Channels and Inputs > Channels > Subtitle** and press **OK / >** to enter.
2. Select the **Subtitle** option and press **OK** to toggle between on and off.
3. Press **←** to return to the previous menu.

Enabling Subtitle Languages on Digital TV Channels

1. Press **⚙** on the remote control, select **⚙(All settings) > Channels and Inputs > Channels > Subtitle > Digital Subtitle Language 1st** and press **OK / >** to enter.
2. Press **^ / v** to select a subtitle language as your preferred language and press **OK** to confirm.

3. Press $\wedge / \vee$ to select **Digital Subtitle Language 2nd** and press **OK** $/ \rangle$ to enter.
4. Press $\wedge / \vee$ to select a secondary subtitle language and press **OK** to confirm.
5. Press $\leftarrow$ to return to the previous menu.

Selecting a Subtitle Type on Digital TV Channels

1. Press $\odot$ on the remote control, select $\odot$ (All settings) > **Channels and Inputs** > **Channels** > **Subtitle** > **Subtitle Type** and press **OK** $/ \rangle$ to enter.
2. Press $\wedge / \vee$ to select a subtitle type and press **OK** to confirm. You can select **Hearing Impaired** to display the hearing impaired subtitles with your selected language.
3. Press $\leftarrow$ to return to the previous menu.

Using EPG (Electronic Program Guide)

EPG is an on-screen guide that displays scheduled digital TV programmes. You can navigate, select and view programs.

1. Press $\odot$ on the remote control, select $\odot$ (All settings) > **Channels and Inputs** > **Channels** > **EPG** and press **OK** to enter, or press $\square$ directly (if available) on the remote control, the **Program Guide** menu will appear, which allows you to get information about the current or next program playing on each channel. Navigate through the different programs using the $\wedge / \vee / \leftarrow / \rightarrow$ buttons on the remote control.
2. Use the related buttons shown at the left of the screen to view EPG.
 - **Filter:** Program guide filter for digital TV programs.
 - Navigate through the different types using the $\wedge / \vee$ buttons on the remote control.
 - Select one or more types, which you want to highlight from the type list, press **OK** to select or deselect. A checkmark will appear to the left of the type when selected.
 - **Reminders:** Press the **OK** button to enter, then select **Schedule Reminder** or **Schedule Recording** (if available) to set Channel, Date, Reminder Time and so on.
3. Press $\leftarrow$ to return to the previous menu.
 - If HbbTV is set to on, the $\square$ button will launch the Freeview EPG.

Freeview

Never miss a thing with freeview!

Find out what's on now, next or over the next 7 days with the easy to use TV guide.

Looking for your favourite show? Use Search for quick access to all your favourite on demand from ABC iview,

SBS On Demand, 7+, 9Now and 10 Play.

All in one place, all for free.

HbbTV

HbbTV (Hybrid broadcast broadband TV) is a service offered by certain broadcasters and available only on some digital TV channels. HbbTV delivers interactive television over broadband Internet. These interactive features are added to and enrich the normal digital programs, and include services such as digital teletext, electronic program guide, games, voting, specific information related to the current program, interactive advertising, information magazines, catch-up TV, etc. To use HbbTV, please ensure your TV is connected to Internet and HbbTV is switched on.

Notes:

- HbbTV services are broadcast- or country-dependent and may be unavailable in your area.
- You cannot download files to your TV with HbbTV function.
- Application provider or broadcasting related conditions may cause an HbbTV application to be unavailable momentarily.
- To access HbbTV applications, you must connect your TV to the Internet via a broadband link. HbbTV applications may not work correctly in case of network related issues.

HbbTV Access

1. Press $\odot$ on the remote control, select $\odot$ (All settings) > **System** > **HbbTV Settings** > **HbbTV** and press **OK** to enter.
2. Press **OK** to activate it.
3. When you tune to a digital TV channel that offers HbbTV, this will be signaled to you by an on-screen indication (generally a red button, but other colour buttons may also be used). Press the indicated colour button to open the interactive pages.
4. Use $\wedge / \vee / \leftarrow / \rightarrow$ and the colour buttons to navigate through the HbbTV pages and press **OK** to confirm.

HbbTV Deactivation

To avoid disturbances that may be caused by HbbTV broadcasting tests, you can turn off the HbbTV function:

1. Press $\odot$ on the remote control, select $\odot$ (All settings) > **System** > **HbbTV Settings** > **HbbTV** and press **OK** to enter.
2. Press **OK** to deactivate it.


Chapter 4

Using More of Your TV

Accessing Google TV Homepage

Allows you to enjoy the entertainment you love with a little help from Google. Google TV brings together movies, shows and more from across your apps and subscriptions and organizes them just for you.

 Note: If you intend to use (online) video communication applications, an appropriate webcam will be needed. Webcams need to be purchased separately. For details, please consult TCL Customer Service or your place of purchase.

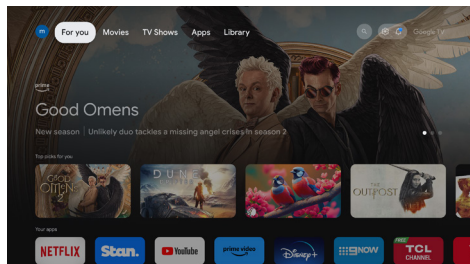


WARNING:

- Configure the network settings before using Google TV applications.
 - Slow responses and/or interruptions may occur, depending on your network conditions.
 - If you experience a problem using an application, please contact the content provider.
 - According to circumstances of the content provider, an application's updates or the application itself may be discontinued.
 - Depending on your country's regulations, some applications may have limited service or not be supported.
 - Changes in application content may be made without prior notice by the service provider.
1. Press **Home** on the remote control to display the Google TV homepage.
 2. Press **Up/Down/Left/Right** and **OK** to enter the desired apps, functions or settings.
 3. Press **Left** to return to the homepage.
 4. To exit the homepage, press **Source** on the remote control to display, then press **Left/Right** and **OK** to select your desired input source.

Note: Since the connection with Internet takes time, it's recommended that you wait a few minutes to use the Google TV feature after activation of TV from standby.

Accessing TCL Channel

 Allows you to enjoy more VOD(Video on Demand) contents or featured applications.

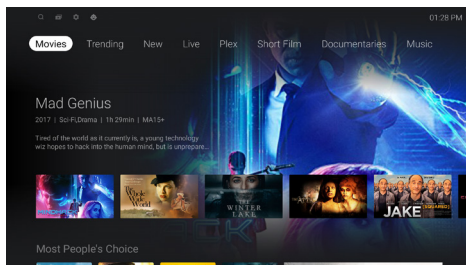

1. Press **TCL CHANNEL** on the remote control to enter TCL Channel, or access through the **TCL Channel** icon on homepage.
2. Press **Left** to return to the previous menu.

Note: UI layout of TCL Channel will vary according to models or countries.

Watching Connected Devices

Press **Source** on the remote control to display the source list. Press **Left/Right** to select TV or other input sources and press **OK** to confirm.

You can also press **Settings** on the remote control to display the dashboard menu, press **Up/Down/Left/Right** to move the cursor to the **Inputs** area on the right top of the screen, and press **OK** to enter. Then press **Left/Right** and **OK** to select the input source.

Note: Input sources like HDMI1 may not appear on the source list, you can press **Source** button and press **Right** button till the end of the source list, select **Edit** and press **OK** to turn the inputs sources to ON, OFF or AUTO.

External devices control (CEC)

Use this function to search for CEC devices connected to the HDMI sockets in your TV and enable auto power on and auto standby between the TV and CEC devices. Also, enable CEC to connect a soundbar using ARC/eARC.

Enabling or Disabling CEC

1. Press **Settings** on the remote control, select **All settings** > **Channels and Inputs** > **External Inputs** > **External devices control (CEC)** and press **OK/Right** to enter.
2. Select the **HDMI control** option, and press **OK** to toggle between on or off.
3. Press **Left** to return to the previous menu.

Using Power on the TV in sync

Enables the TV to automatically power on when you power on a CEC device (e.g. DVD) with the device's remote. Press **OK** to turn it on to enable this function.

Using Device standby in sync

Using More of Your TV

Enables all CEC devices to automatically go to the standby mode when you turn off the TV with the TV remote. Press **OK** to turn it on to enable this function.

Note: The CEC functions depend on the devices connected and it is possible that some devices may not interoperate correctly when connected to this TV. The user manual or the manufacturer of the problematic devices should be consulted for further information.

Password in Parental Controls

- Set the password in the **⚙️(All settings) > System > Parental Controls** menu.
- The super password is 0423. If you forget your code, enter the super password to override any existing codes.

Bluetooth Function

(* not available for some models)

Bluetooth® is a wireless technology standard for exchanging data over short distance between Bluetooth devices. You can connect Bluetooth audio device, mouse or keyboard via the TV.

1. Press **⚙️** on the remote control, select **⚙️(All settings) > Remotes and Accessories** and press **OK** to enter.
2. Select **Pair accessory** and press **OK** to enter. The TV will search nearby Bluetooth devices automatically.
3. Select an available device, press **OK** and follow the guides on the screen to connect it.

Note: Bluetooth technology (if available in your TV) uses 2.4GHz frequency thus close proximity to Wi-Fi access points, routers or microwave ovens might interfere with Bluetooth audio streaming. If you face interruptions in audio reception, you should restart your Bluetooth device to find frequency with less interferences and if you continue to face issues you should move closer to TV or increase space between TV and source of interferences.

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by TTE Corporation is under license. Other trademarks and trade names are those of their respective owners.

Blue Light Filter

It reduces the amount of blue light emitted by the screen, which can reduce the visual fatigue associated with screen viewing.

1. Press **⚙️** on the remote control to display the dashboard, select **Picture > Eye Health Protection** and press **OK / >** to enter.

2. Select the **Blue Light Filter** option, and press **OK** to toggle between on or off.

Notes:

- After watching TV for half an hour, please move away from the TV and rest your eyes.
- When resting, please look far away to adjust the ciliary muscles of the eye to avoid eye strain.
- Please form a good habit of doing eye exercises to protect eyesight and prevent myopia.

Reset Shop

Allows you to reset the TV to factory default settings.

1. Press **⚙️** on the remote control, select **⚙️(All settings) > System > About > Reset > Factory reset** and press **OK** to enter.
2. Select the **Factory reset** option and press **OK** to enter. Then select **Erase everything** and press **OK** to confirm.
3. Enter the password you have set or the PIN according to the on-screen prompt.
4. Select **OK** and press **OK** to confirm.
5. The **Initial setup** wizard appears. Follow the instructions in the section **Initial setup**.

Multi Visual

Allows you to enjoy different programs with your family on one TV at the same time.

The multi visual function is enabled by default. To use the function, make sure your phone is Android OS and the WiFi on the phone is turned on. Then follow the steps below to operate.

1. Press **⚙️** on the remote control, select **⚙️(All settings) > Network and internet > Wi-Fi**, and press **OK** to turn it on.
2. To enter the feature, press **⏏** on the remote control, select **Multi Visual**, then select your desired display mode and press **OK** to connect.
3. Activate the cast screen function on your phone and choose the TV's name you want to connect in the searching list.
4. For the first time, depending on different types of phones, there are two situations: 1) an invitation prompt appears, select **"Accept"** and press **OK** to connect. 2) enter a correct PIN code to connect as per the PIN message on the phone.
5. To exit the multi visual function, press **⬅** to display a dialog box, then select **OK** and press **OK** to confirm.

Notes:

- This feature is not available in any of the cases below:
 - a) when TV is in HbbTV, Netflix or Media Player.
 - b) if the video from phone/DTV is scrambled.
 - c) when the capacity of required video decoding exceeds 4K 60Hz.

Using More of Your TV

- When in full screen mode, due to the compatibility of the third party's Apps, there might occur failure to return to the dual views.
- Multiple phones can be used. When in dual view mode, use <I> to move the focus to TV view and then cast another phone to the TV.
- To check all available history list, select (All settings) > System > Multi Visual Settings > Connection List and press OK to enter.

AirPlay and HomeKit > AirPlay and press OK to turn it off.

- Apple, AirPlay, HomeKit and Siri are trademarks of Apple Inc., registered in the U.S. and other countries and regions.
- To use AirPlay and HomeKit with this Smart TV Pro, the latest version of iOS, iPadOS, or macOS is recommended.

Works with Alexa

To use the Works with Alexa function, you will need a device like an Amazon Echo or Amazon Echo Dot (Sold Separately). Set up your Amazon device. Then, on your TV go to the Homepage Menu, select **Your apps**, and add "works with alexa". Then follow the on screen prompts. Please note that within the Alexa app on your phone, you will need to enable the TCL Assistant Skill, through the Alexa Skills Menu.

Apple AirPlay and HomeKit

Wirelessly share content with your TV using AirPlay and control your TV using the Home app on your iPhone, iPad, or Mac. You can set up AirPlay and HomeKit at any time in Settings menu.

The function is enabled by default. To use the function, make sure your iPhone, iPad, or Mac is iOS or iPadOS device and the WiFi on the iOS or iPadOS device is turned on. Then follow the steps below to operate.

1. Press on the remote control, select (All settings) > System > AirPlay and HomeKit Settings > Apple AirPlay and HomeKit and press OK to enter, or press (if available) on the remote control, then select **AirPlay > AirPlay and HomeKit Settings** and press OK to enter.
2. Press / to select the desired item and press OK to enter the corresponding submenu.
3. Press to return to the previous menu.
4. For the first time, activate the screen mirroring function on your iPhone, iPad, or Mac and choose the TV's name you want to connect in the searching list.
5. If an AirPlay passcode appears on your TV screen, enter the passcode on your iOS or iPadOS device.
6. To stop mirroring your iOS or iPadOS device, open Control Center, tap screen mirroring, then tap stop mirroring.

Notes:

- If your WiFi is turned off, press on the remote control, select (All settings) > Network and internet > Wi-Fi, and press OK to turn it on.
- To disable the feature, select (All settings) > System > AirPlay and HomeKit Settings > Apple

Using the Hands-free TV Voice Control

(* not available for some models)

Note: This feature is only available in Google TV mode. Before using the hands-free TV voice control, connect the TV to the network and make sure it can access the Google website first. Then follow the steps below to access.

1. Turn the built-in MIC switch (next to the power button) to on before using this function.
2. In Google TV mode, press the Google Assistant button on your remote.
3. Select "Yes, I'm in".
4. Say "Hey Google" to activate it.

Notes:

- The availability of hands-free TV voice control depends on your region/country/language and your model. For details, please refer to your local dealer.
- A quiet surrounding is required for better function when using it. The recommended using distance is within 2 meters in front of TV set.
- Turn the built-in MIC switch to off if you are not going to use it.
- Standby power consumption will increase because the built-in MIC is always listening when the Google Assistant or voice control with the built-in MIC is enabled.

Accessing Google Play

Google Play is your entertainment unbound. It brings together all of the entertainment you love and helps you explore it in new ways, anytime, anywhere. We've brought the magic of Google to music, movies, TV, books, magazines, apps and games, so you get more from your content every day.

1. Press  on the remote control to display the Google TV homepage.
2. Press     to select the  **Search**, and press **OK** to enter, say "Google play store" to search it. Then follow the on-screen instructions to enter the desired apps.
3. Press  to return to the previous menu.

Network Wake Up

Note: This feature is only available in Google TV mode.

This function allows you to turn on your TV from standby mode via a network. To use this function, please make sure:

1. Your TV is connected to an effective wireless home network.
2. The desired controller, such as a smartphone, is connected to the same network as your TV.
3. An app which supports network waking up function, such as YouTube, has been installed into the controller.

4. **Network Standby** is set to on in the **Network and internet** menu. In Google TV mode, press  on the remote control, select  **(All settings) > System > Power & Energy > Standby Mode > Network Standby**, and press **OK** to turn it on.

When the TV is in networked standby mode, you can use the app to wake up the TV remotely.

Notes:

- This feature is disabled if you press and hold the  button on the remote control and confirm to shut the TV down.

Variable Refresh Rate

Variable Refresh Rate is a feature that will allow smooth gaming and eliminate screen tearing. The refresh rate can dynamically change to up to 144Hz. (**Note:** To use this function, **Game Master** needs to be set to **Auto** or **On**.)

This feature is only available under source of HDMI1, HDMI2, HDMI3 or HDMI4 (the number of HDMI socket on the TV will vary according to TV model).

Notes:

- 4K@144Hz is only available on HDMI 1 or HDMI 2. PC Graphics card must be able to output 144Hz, please check your graphics card specifications.
- 4K@120Hz is only available on HDMI 1 or HDMI 2.
- You need to make sure your Games Console or PC support Variable Refresh Rate, and you may need to check your games console settings to activate the function.
- The game/content also will need to support Variable Refresh Rate, and you may also need to check the settings within the game.

Live TV Pause

(* Available according to the software version)

Allows you to pause, fast forward and rewind live TV, so you don't have to miss any part of your favourite programs. Before you use the function, connect a USB drive to the TV first. For the first time, you should complete the disk setup for the USB drive.

Press  on the remote control, select  (All settings) > Channels and Inputs > Channels > Live TV Pause, then press **OK** to turn it on. Then exit to TV mode, press  to display **Quick Settings** panel, use  to select **Live TV Pause**, and press **OK** to enter.

1. Follow the directions on the screen to do the disk setup if you use Live TV Pause for the first time.
2. After the disk setup is done, Live TV Pause will start, and the Live TV Pause menu displays on the screen.
3. When the Live TV Pause menu disappears and only the timing of the Live TV Pause remains on the screen, you can press **OK** to call out the Live TV Pause menu and operate according to the on-screen prompt.
4. Select  on the screen to stop the Live TV Pause and exit.

Notes:

- This feature is available only for digital channels.
- Before you plug the USB drive to TV, make sure you have backed up the data on the drive to avoid unforeseen malfunction and data loss.
- We recommend that you use a USB drive with at least 1GB free space and a disk speed faster than 5.0MB/sec.

- The bigger the USB drive free space for Live TV Pause, the bigger the recording length.

PVR (Personal Video Recorder)

(* Available according to the software version)

Allows you to record your favourite TV programs. Before you use the function, connect a USB drive to the TV first.

Note: The feature is available only in selected products and, due to specific TV network limitations and country technical requirements, might not be available in product or place of installation. Feature might also be blocked by TV network due to copyright protection (HD content, recording protection).

1. Press  on the remote control, select  (All settings) > Channels and Inputs > Channels > PVR.
2. Press **OK**  to enter and select **Record**. It starts to record automatically.
3. Press **blue** button on the screen to access **Settings** and use     to adjust the recording duration.
4. Select  on the screen to stop recording manually, the recorded file will be saved. In normal operation, the recording will stop automatically when the recording duration expires.
5. In recording, the PVR mini panel will also show on the screen to indicate the recording progress.
6. To watch the recorded program, exit PVR mode first. Press  on the remote control, select  (All settings) > Channels and Inputs > Channels > PVR > PVR List, then select the related record file. Press **OK** to play. (It is the same if you record a digital radio program.)

Notes:

- This feature is available only for digital non encrypted channels.
- Before you connect the USB drive to the TV, make sure you have backed up the data in the drive to avoid the loss of your important data due to unforeseen malfunction.
- The bigger the USB drive free memory for the PVR function, the bigger the recording length.
- If you want to change channel or signal source during recording, store the recording data before changing the channel or source.
- The TV cannot play files normally if the parameters of the file exceed the limitations of the system, the file format is not supported, the file is damaged, or the file cannot be decoded.
- Do not disconnect the USB drive when the system is reading a file or transmitting data, otherwise the system or the drive may be damaged.

MagiConnect

MagiConnect, formerly named T-Cast, lets you enjoy plenty of videos, rich of applications, and share great contents on large screen. It also allows you to turn a smart device into a sophisticated remote control, providing more features than your normal TV remote control. You can then control your TV through your smart device.

Follow the on-screen instructions to scan the QR code on the TV screen and download MagiConnect.

Note: *Make sure the smart device and your TV are in the same home LAN (local area network) or network segment to use TV remote function.*

Problems & Solutions

Note: Problems & solutions 1 to 2 are for the TV models which have network functions, so users of non-connected TV models can disregard them.

1. Fail to link to the network.

- Check if your TV is connected with the network;
- Reboot your TV;
- Consult your Internet service provider, to confirm if access of your router is supported. Refer to the operation manual of your router, and activate its DHCP function after linking the network to your TV.
- Make sure your TV is connected to a router, and make sure your router is powered on. Check that your router/modem has an Internet connection, and that your Ethernet cables/wireless connection is OK. Test your connection with a computer to make sure it is OK. Should the problem persist, contact customer service.
- Check if TV system time is correct or not. Sometimes TV system time is synchronized to the wrong time from abnormal broadcast signal. In this case, please set system time manually.

2. The video could not be played smoothly.

- Videos from your USB flash drive --- It may be caused by abnormal data transmission, or its code rate is far beyond the supported formats of this TV set.
- Videos downloaded from Internet, or online videos.
 - a. It may be caused by the lower bandwidth of your network. A high network speed is required to handle online videos.
 - b. Peak Internet usage times may affect the bandwidth.
 - c. Check if any other computers on the same network are also operating, as they may be using up bandwidth. Especially if they are downloading or playing online videos.
 - d. The video may not be smooth itself, it is not the problem of your TV or network.

3. When two portable hard drives are connected with the TV at the same time, they will not be recognized sometimes.

- All portable hard drives consume a lot of power, which may result in power supply problems. We recommend inserting only one hard drive, or a low power consumption portable hard drive.

4. The video from a portable hard drive (USB) is playing with no sound.

- The audio format of the video in your portable hard drive is not supported by the TV player.

5. Some videos fail to play.

- The formats of the videos may not be supported by the TV, especially videos shot by certain kinds of cameras, generally with their private protocol of

formats, which are not compatible with your TV.

6. Video stops playing midway.

- Mistakes may occur when videos are copied or compressed, so they may automatically stop playing during playback.

7. What should I pay attention to, when I do software updating?

- No power cuts when software updating;
- Avoid any operations with your remote control when software updating;
- Depending on your Internet connection speed, the software updating process may take some time.

8. There are no distinct changes of TV interface after software updating.

- Under certain conditions, software updating may not only update or add new functions but also improve the performance of the TV set, without distinct changes of interface. Also, there may be no changes to the user interface at all.

9. What should I do when software updating process stops due to a sudden power-off?

- If you do software updating by USB, do not pluck the USB drive from your TV, and restart your TV to continue software updating; If you do software updating by Network, also restart your TV and check if it is functioning correctly.

10. With a USB device being inserted into the TV in advance, I am prompted that no USB devices are detected after I access Media, why?

- There may be something wrong with your portable hard drive(s), damaged or with low voltage. It's recommended to provide an additional power supply to the hard drive(s).

11. External device cannot be recognized.

- Some external devices (e.g. webcam, smart phone, tablet, game handle, and external wireless adapter) may not be compatible with the TV and cannot be supported for certain functions (wireless display, gesture control, face recognition, if any). Please try a similar device. If it does not work, contact your local dealer.

12. Voice search does not work.

- Check if your remote control has been successfully paired with your TV.
- Check if the language setting is correct.
- Check if Google server is available and stable.

Troubleshooting

Most problems you encounter with your TV can be corrected by consulting the following troubleshooting list.

No picture, no sound

1. Check if the fuse or circuit breaker is working.
2. Plug another electrical device into the outlet to make sure it is working or turned on.
3. Power plug is in a bad contact with the outlet.
4. Check the signal source.

No colour

1. Change the colour system.
2. Adjust the saturation.
3. Try another channel. Black-white program may be received.

Remote control does not work

1. Change the batteries.
2. Batteries are not installed correctly.
3. Main power is not connected.

No picture, normal sound

1. Adjust the brightness and contrast.
2. Broadcasting failure may happen.

Normal picture, no sound

1. Press the **VOL+** button to increase volume.
2. Volume is set to mute, press the **VOL+** button to restore sound.
3. Change the sound system.
4. Broadcasting failure may happen.

Unorderly ripples on the picture

It is usually caused by local interference, such as cars, daylight lamps and hair driers. Adjust the antenna to minimize the interference.

Snowy dots and interference

If the antenna is located in the fringe area of a television signal where the signal is weak, the picture may be marred by dots. When the signal is extremely weak, it may be necessary to install a special antenna to improve

the reception.

1. Adjust the position and orientation of the indoor/outdoor antenna.
2. Check the connection of antenna.
3. Fine tune the channel.
4. Try another channel. Broadcasting failure may happen.

Ignition

Black spots or horizontal streaks appear, or the picture flutters or drifts. This is usually caused by interference from car ignition system, neon lamps, electric drills, or other electrical appliance.

Ghost

Ghosts are caused by the television signal following two paths. One is the direct path, the other is reflected from tall buildings, hills, or other objects. Changing the direction or position of the antenna may improve the reception.

Radio frequency interference

This interference produces moving ripples or diagonal streaks, and in some case, loss of contrast in the picture. Find out and remove the radio interference source.

**To bring you better visual experience, please remove all labels, if any, from TV front panel and screen before use.*

**Figures and illustrations in this User Manual are provided for reference only and may differ from actual product appearance. Product design and specifications may be changed without notice.*

Legal Statement

[Legal Statement] of TCL - manufacturer of this TV set

The use of products featuring the SmartTV – Services may be limited as to available content, certain features, applications, and services may not be available on all devices or in all territories. Some services, such as subscription-based applications, may also require additional peripheral devices or membership fees to be accessed. Please visit our website for more information on specific device information and content availability. The services and availability of content through SmartTV are subject to change from time to time without prior notice.

All content and services accessible through this device belong to third parties and are protected by copyright, patent, trademark and/or other intellectual property laws. Such content and services are provided by such third party solely for your personal non-commercial use. You may not use any content or services in a manner that has not been authorized by the content owner or service provider. Without limiting the foregoing, unless expressly authorized by the applicable content owner or service provider, you may not modify, copy, republish, upload, post, transmit, translate, sell, create derivative works, exploit, or distribute in any manner or medium any content or services displayed through this device.

Subject to applicable legislation that cannot be excluded, you expressly acknowledge and agree that use of the device is at your sole risk and that the entire risk as to satisfactory quality, performance and accuracy is with you. Any third-party content and services are not provided "by us and we do not provide any warranties in relation to such content or services. TCL expressly disclaims all warranties and conditions with respect to the content and services, either express or, implied, including but not limited to, warranties of merchantability, of satisfactory quality, fitness for a particular purpose, of accuracy, of quiet enjoyment, and non-infringement of third-party rights. TCL does not guarantee the accuracy, validity, timeliness, legality, or completeness of any content or service made available through this device and does not warrant that the content or services will meet your requirements, or that operation of the device or services will be uninterrupted or error-free. Subject to applicable legislation, under no circumstances shall TCL be liable, whether in contract or tort, for any direct, indirect, incidental, special or consequential damages, attorney fees, expenses, or any other damages arising out of, or in connection with, any information contained in, or as a result of the use of the device, or any content or service accessed by you or any third party, even if advised of the possibility of such damages.

Third party services may be changed, suspended, removed, terminated or interrupted, or access may be disabled at any time, without notice, and TCL makes no representation or warranty that any content or service will remain available for any period of time. Content and services are transmitted by third parties by means of networks and transmission facilities over which TCL has no control. Without limiting the generality of this disclaimer, TCL expressly disclaims any responsibility or liability for any change, interruption, disabling, removal of or suspension of any content or service made available through this device. TCL may impose limits on the use of or access to certain services or content, in any case and without notice or liability. TCL is neither responsible nor liable for customer service related to the content and services. Any question or request for service relating to the content or services should be made directly to the respective content and service providers.

Nothing in this statement excludes any rights you may have as a consumer under Australian Consumer Law.



The terms HDMI, HDMI High-Definition Multimedia Interface, HDMI trade dress and the HDMI Logos are trademarks or registered trademarks of HDMI Licensing Administrator, Inc.



The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by TTE Corporation is under license. Other trademarks and trade names are those of their respective owners.



Freeview uses HbbTV technology which combines broadcast and broadband. Internet connection is required. Data usage charges and conditions apply.



Dolby, Dolby Vision, Dolby Vision IQ, Dolby Atmos, Dolby Audio and the double-D symbol are trademarks of Dolby Laboratories Licensing Corporation. Manufactured under license from Dolby Laboratories. Confidential unpublished works. Copyright © 1992–2024 Dolby Laboratories. All rights reserved.



For DTS patents, see <http://xperi.com/dts-patents/>. Manufactured under license from DTS, Inc. and its affiliates. DTS, DTS:X, the DTS:X logo, Virtual:X, and the DTS Virtual:X logo are registered trademarks or trademarks of DTS, Inc. and its affiliates in the United States and/or other countries. © DTS, Inc. and its affiliates. ALL RIGHTS RESERVED.
(* Available for C6K/50C7K/50Q7C/115C7K series)



For DTS patents, see <http://xperi.com/dts-patents/>. Manufactured under license from DTS, Inc. and its affiliates. DTS, DTS:X, and the DTS:X logo are registered trademarks or trademarks of DTS, Inc. and its affiliates in the United States and/or other countries. © DTS, Inc. and its affiliates. ALL RIGHTS RESERVED. (* Available for C8K/55-85C7K/55-85Q7C series)



Manufactured under license from IMAX Corporation. IMAX® is a registered trademark of IMAX Corporation in the United States and/or other countries. For DTS patents, see <http://patents.dts.com>. Manufactured under license from DTS Licensing Limited. DTS and the DTS logo are registered trademarks or trademarks of DTS, Inc. in the United States and other countries. © 2020 DTS, Inc. ALL RIGHTS RESERVED. (* Available for some models)



Covered by one or more claims of the HEVC patents listed at patentlist.accessadvance.com.

* Your product will include one or more listed DTS technologies. Please refer to the rating label to determine which technology is applicable to your product.



Like us on Facebook

TCL Electronics Australia Pty Ltd.

ABN 83 111 032 896

Telephone: 1300 738 149

service.au@tcl.com

www.tcl.com/au



J0101-001589