

Illustration in this guide are provided for reference only and may differ from actual product appearance. Product design and specification may be changed without notice.

LED Television

TABLE OF CONTENTS

IMPORTANT SAFETY INSTRUCTIONS	1
PRECAUTIONS AND REMINDERS	2
PREPARATION	3
PERIPHERAL CONNECTION AND CONTROLS	4
MAKING CONNECTIONS	5
OPERATING INSTRUCTIONS	6
TROUBLESHOOTING	18
PRODUCT SPECIFICATION	19

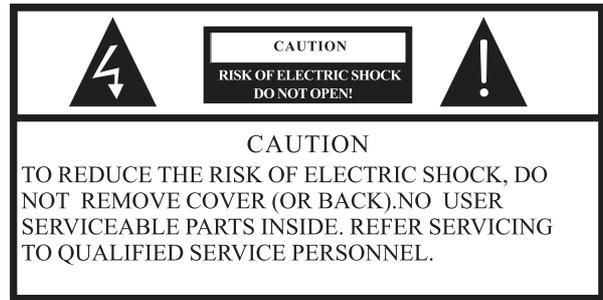


Illustration in this guide are provided for reference only and may differ from actual product appearance. Product design and specification may be changed without notice.

IMPORTANT SAFETY INSTRUCTIONS

- 1) Read these instructions.
- 2) Keep these instructions.
- 3) Heed all warnings.
- 4) Follow all instructions.
- 5) Do not use this apparatus near water.
- 6) Clean only with dry cloth.
- 7) Do not block any ventilation openings, install in accordance with the instructions.
- 8) Do not install near any heat sources such as radiations, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 9) Do not defeat the safety purpose of the polarized plug. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- 10) Protected the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- 11) Only use attachments/accessories specified by the manufacturer.
- 12) Unplug this apparatus during lighting storms or when unused for long periods of time.
- 13) Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- 14) Mains plug is used as the disconnect device, the disconnect device shall remain readily operable.
- 15) The ventilation should not be impeded by covering the ventilation openings with items, such as newspapers, table-cloth, curtains, etc.
- 16) No naked flame sources, such as lighted candles, should be placed on the apparatus.
- 17) Attention should be drawn to the environmental aspects of battery disposal.
- 18) The use of apparatus in moderate climate.
- 19) The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the apparatus.
- 20) warning: To avoid any injury caused by lean of the product, please always ensure the whole product was placed within the table surface in horizontal.

Actual product may vary in appearance from above image



 The symbol indicates that dangerous voltages constituting a risk of electric shock are present within this unit.

 The symbol indicates that there are important operating and maintenance instructions in the literature accompanying this unit.

WARNING:
To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.

WARNING:
The batteries shall not be exposed to excessive heat such as sunshine, fire or the like.




This symbol indicates that this product incorporates double insulation between hazardous mains voltage and user accessible parts. When servicing use only identical replacement parts.




This marking indicates that this product should not be disposed with other household wastes. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.


PRECAUTIONS AND REMINDERS

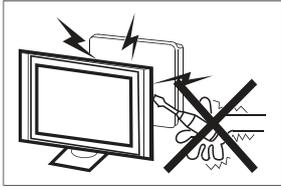


High voltages are used in the operation of this television receiver. Do not remove the cabinet back from your set. Refer servicing to qualified service personnel.

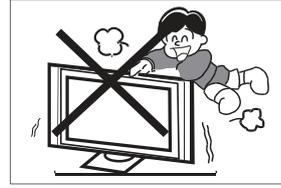

Never stand on, lean on, or suddenly push the television or its stand. You should pay special attention to children. Serious injury may result if it falls.

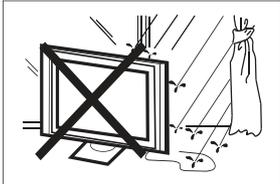


To prevent fire or electrical shock hazard, do not expose the television receiver to rain or moisture.

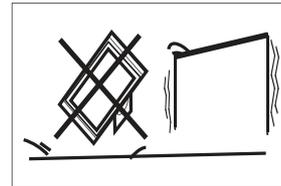


Do not place your television on an unstable cart, stand, shelf or table. Serious injury to an individual, and damage to the television, may result if it falls.




Do not drop or push objects into the television cabinet slots or openings. Never spill any kind of liquid on the television receiver.

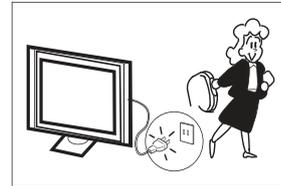

When the television receiver is not used for an extended period of time, it is advisable to disconnect the AC power cord from the AC outlet.

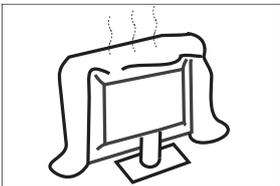


Do not block the ventilation holes in the back cover. Adequate ventilation is essential to prevent failure of electrical components.

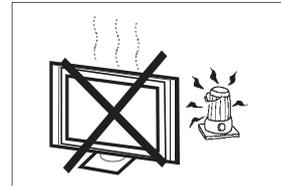

Avoid exposing the television receiver to direct sunlight and other sources of heat. Do not stand the television receiver directly on other products which give off heat, e.g. video cassette players and audio amplifiers. Do not place naked flame sources, such as lighted candles on the television.



Do not trap the power supply cord under the television receiver.

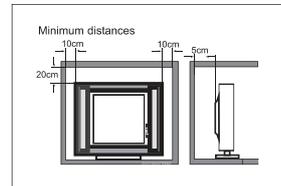

If the television is to be built into a compartment or similar enclosure, the minimum distances must be maintained. Heat build-up can reduce the service life of your television, and can also be dangerous.



If you are going to clean the product, Unplug the TV, use soft fabric, no water, never chemicals.

Note: the use of apparatus in moderate climates.

Note: This product uses a panel consisting of sub pixels which require sophisticated technology to produce. However, there may be a few bright or dark pixels on the screen. These pixels will have no impact on the performance of the product.


PREPARATION

IMPORTANT: Do not apply pressure to the screen display area which may compromise the integrity of the display. The manufacturer's warranty does not cover user abuse or improper installations.

ATTACHING THE STAND

IMPORTANT: The stand of the TV must be assembled prior to usage.

1. Place TV unit face down on a soft and flat surface (blanket, foam, cloth, etc.) to Prevent any damage to the TV.
2. Fix the stand to the bottom of the TV with the 12 screws.

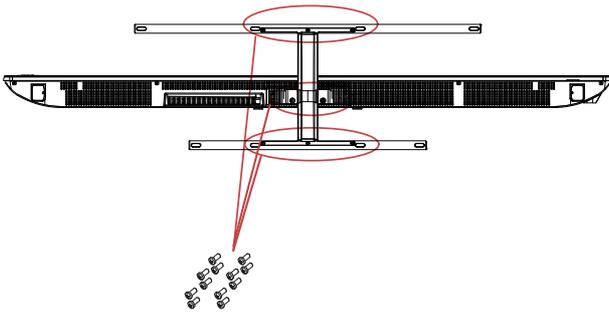

NOTE
The appearance of the product shall be in kind.


PREPARING YOUR LED TV FOR WALL MOUNTING

We suggest that you keep your TV at least 2.36 inches (60 mm) from the wall to prevent cable interference. Before mounting your TV on the wall, you need to remove the stand.

For your safety, please use only with a UL listed wall mount bracket with minimum weight of the TV without stand.

To attach a wall mount bracket to your TV:

1. Remove the screws holding your TV to the stand.
2. Remove the stand from your TV.
3. Secure the wall mount bracket to the back of your TV using four screws. Follow the instructions of the user manual that came with the wall mount bracket to install.

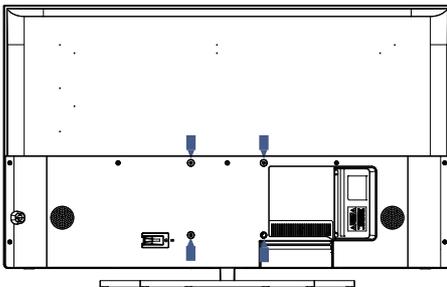


NOTE
The wall mount bracket are not included.

4. Fix the wall mount screws (BM6x10mm/4pcs) into the rear side of the LEDTV ,using the torque of 8kgf,cm.


TURNING ON THE TV

1. Install the stand and place the TV on a solid surface.

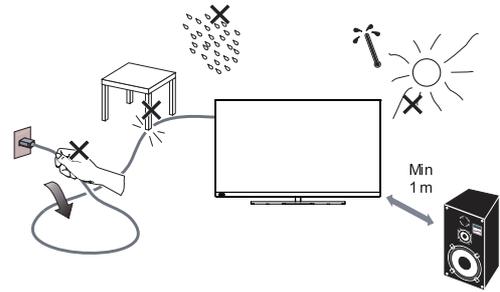


NOTE

- Ensure that the TV is placed in a position to allow free flow of air. Do not cover the ventilation openings on the back cover.
 - To prevent any unsafe situations, no naked flame sources, such as lighted candles, should be placed on or in the vicinity.
 - Avoid heat, direct sunlight and exposure to rain or water. The equipment shall not be exposed to dripping or splashing.
2. Connect the antenna cable or cable TV cable to the **ANT IN** aerial socket on the back of the TV set.
 3. Remote control:
Remove the cover of the battery compartment. Insert 2 batteries (Type AAA 1.5V).

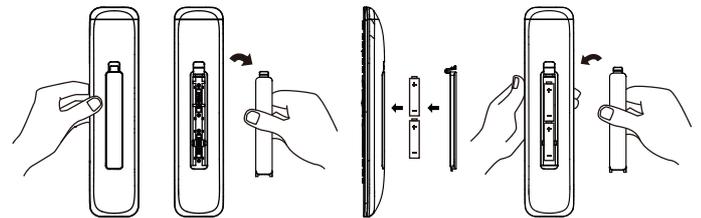


4. Power:
Plug the cord into a working power outlet.

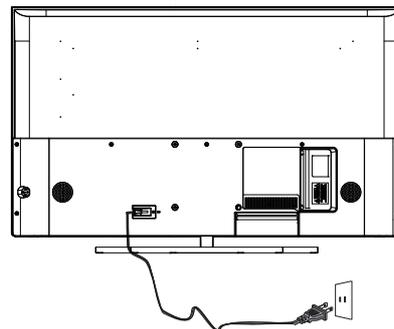

5. Turn the TV on:
Press  on the remote control or **POWER** button on the side control panel of the TV.

PERIPHERAL CONNECTION AND CONTROLS

BUTTON CONTROL

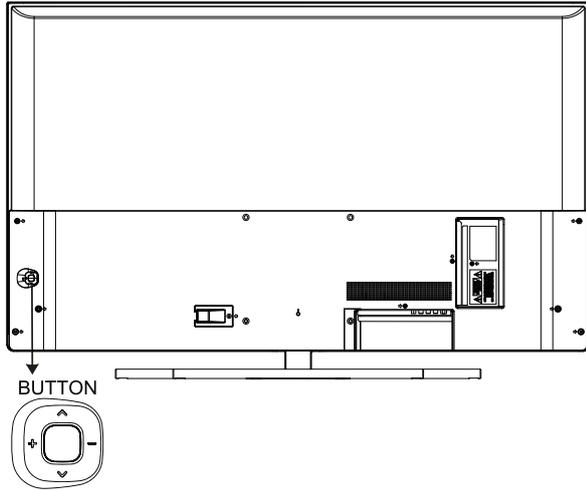

Middle key

In the standby mode, press the middle button to turn on the TV.
In the boot state, long press the middle button to shut down.
Under the menu page, function equivalent to the OK key.

Left and right keys

In the non-menu page, press the left and right keys to adjust the volume addition and subtraction.

Up and down keys

In the non-menu page, you can adjust the TV channel under the program addition and subtraction;
Under the menu page, you can move the cursor up and down.

ACCESSORIES

- TV 55"/65"
- Remote Control - 1pcs
- AAA Battery - 2pcs
- User's Manual - 1pcs
- Screws - 12 pcs

PERIPHERAL CONNECTION




All the terminals are(from left to right):
RJ45, OPTICAL, VIDEO, L, R, HDMI4, HDMI3, HDMI2,



All the terminals are(from left to right):
HDMI1 (ARC), LNB IN(SATELLITE), ANT IN(ANTENNA/CABLE), USB1, USB2
CI, EARPHONE.

MAKING CONNECTIONS


You can use the input terminals on TV set rear as follows.

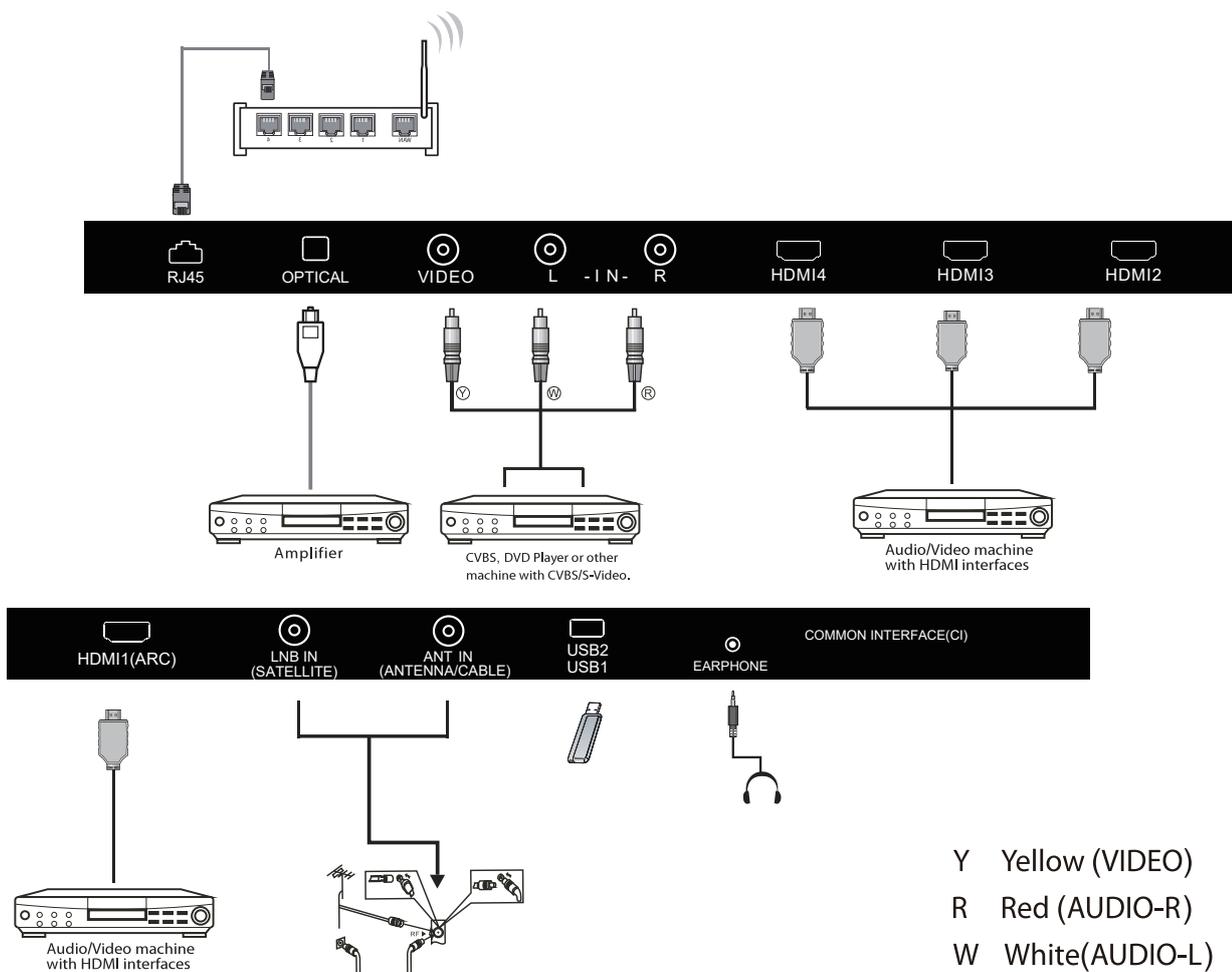

1. RF: Antennal/close circuit TV
2. EARPHONE: Earphone output.
3. USB: Connect USB device.
4. HDMI: Connect to High-definition multimedia signal resource.
5. AV INPUT: Video input/Audio input.

OPERATING INSTRUCTIONS

USING THE REMOTE CONTROL

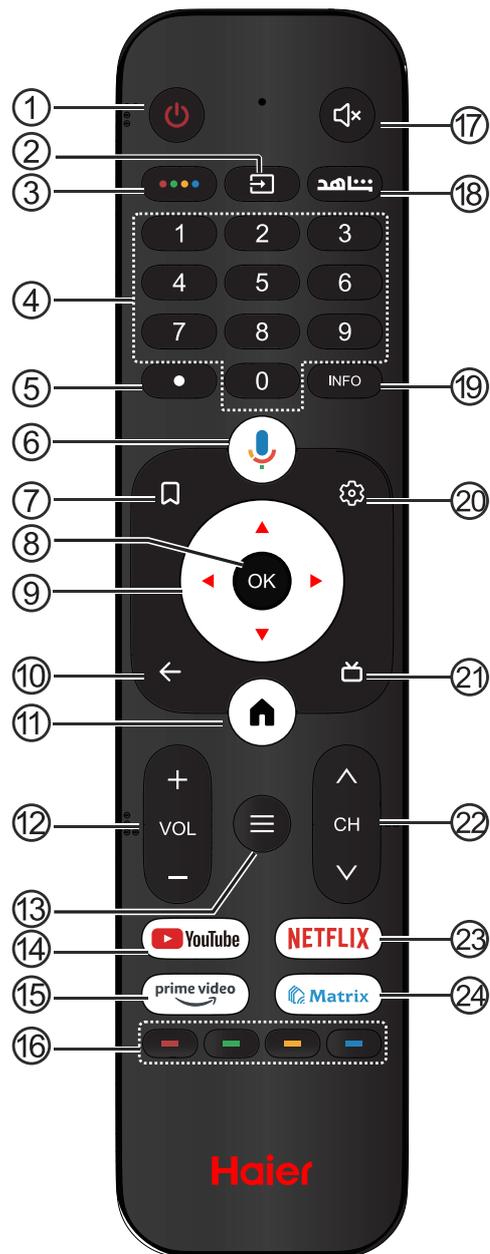

#	Item	Descriptions
1	Power	Press to turn the TV on or off. When your TV is off, power still flows through it. To completely disconnect power, unplug the power cord.
2		Press to open the input source list.
3		Press to open Soft Keyboard.
4	0~9 number	Press to enter a TV channel number.
5	(dot)	Input the character "dot".
6		Press to enter start a voice search.
7		Press to open channel list/watchlist.
8	OK	Enter the selected option or perform the selected operation.
9		Press to navigate the on-screen menu.
10	BACK	Return to the previous menu.
11		Press to open the Home Page.
12	VOL+/VOL-	Press VOL+ or VOL- to adjust volume level.
13	MENU	Press to open or close the on-screen menu.
14	YouTube	Press to open the YouTube.
15	prime video	Press to prime vido for viewing online TV shows and flms(internet connection required).
16	Coloured buttons	Implement the relevent operations according to the prompt at the botton of the menu in the text.
17		Press to open the mute.
18		Press to open the Shahid.
19	INFO	Press to display the channel information.
20		Press to open the settings menu.
21		Press to display electronic programme guide in TV mode.
22	CH^/CHv	Press CH^ or CHv to change TV channels.
23	NETFLIX	Press to open the NETFLIX.
24	Matrix	Press to open the Matrix.


OPERATING INSTRUCTIONS

INITIAL SETUP

The first time you turn on your TV, the setup wizard will guide you through setting up basic settings. Please according to the Text Tip to First Time Setup.




This function is used for the remote control pair code. After the code is successful, you can use the Bluetooth remote control to operate the TV.

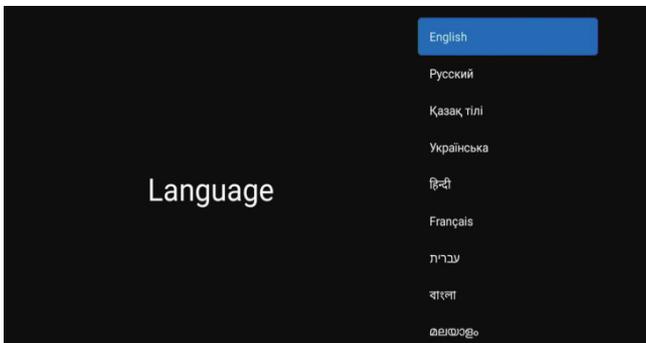


Press ▲/▼ to select the system language and press OK to confirm the language.




Connect your Android phone to your TV, select "Continue" to continue the connection, and choose "Skip" to skip this step.

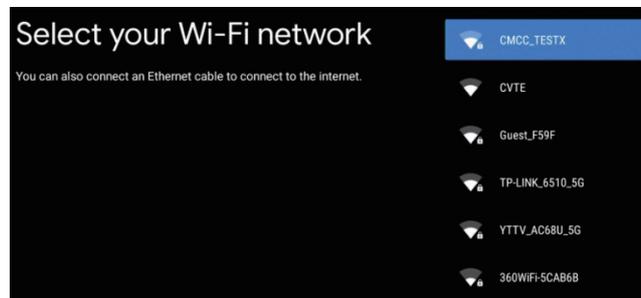


Press ▲/▼ to select the wifi to connect, press OK and enter the password to confirm the Connection is successful.

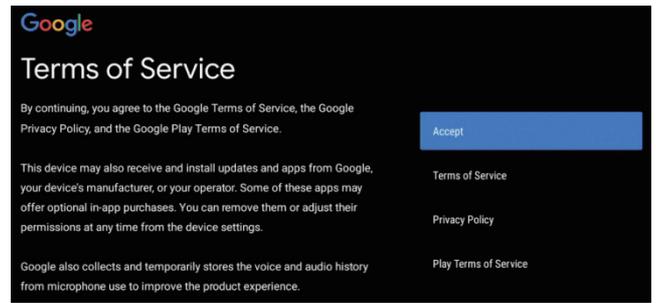


By accepting the Google Terms of Service to improve the product experience, select "Accept" to accept this condition.

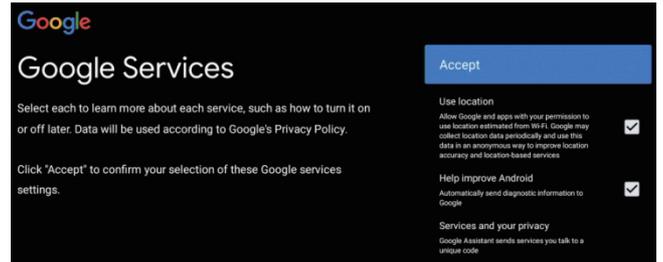

By accepting the Google Services to improve the product experience, select "Accept" to accept this condition.

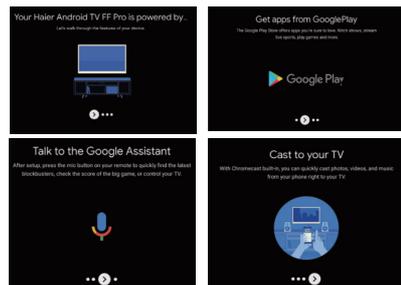

1. Your device is powered by Android TV and press the ► button to select the browsing feature.
2. You can get more apps from Google Play and press the ► button to go to the next screen.
3. Transfer photos and other content to the TV via the built-in chromecast, press OK to complete the browsing

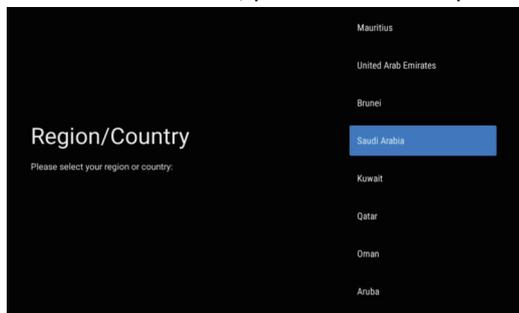


Press ▲/▼ to select the region/country of your device and press OK to confirm.




Used to set your device's password to ensure security and privacy.


OPERATING INSTRUCTIONS

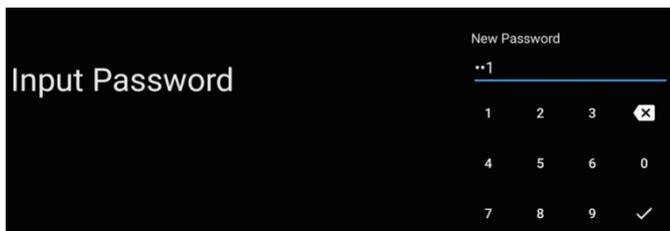


Press **OK** to pop up the soft keyboard, and use the remote control to enter the 4-digit password automatically jump to the next interface.

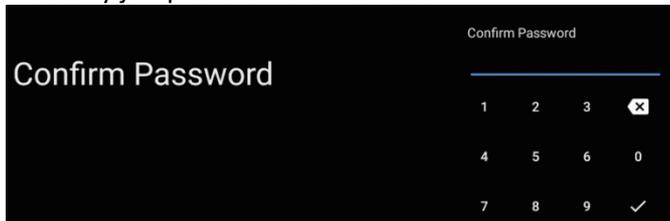

Confirm the password again and keep it consistent Use the remote control to enter the password and complete the password.

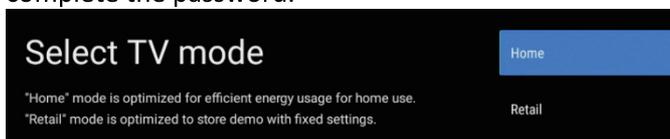


For selecting the mode, press **▲/▼** key to select Home mode and press "Yes".

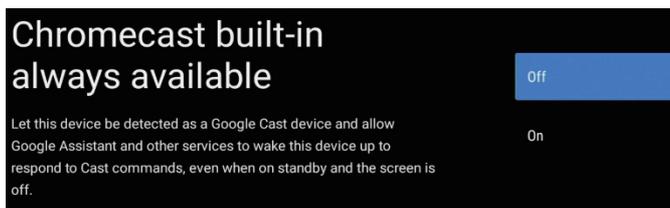


Select "On" to respond to cast commands,select "Off" to exit.



To select the Tuner mode for searching, press to select and press **OK** to confirm.

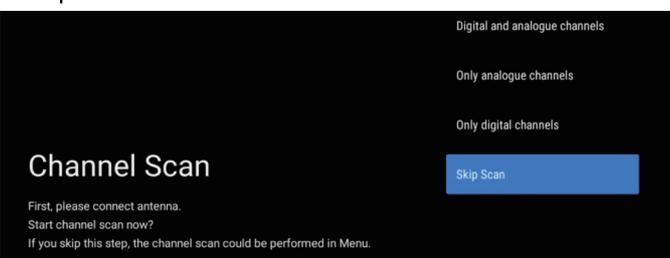

Press **▲/▼** to select whether to search, select "Scan" to search, select "Skip scan" to skip the search.

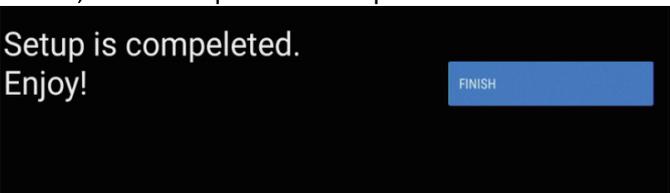


Press **OK** to complete the setup.

NOTE

The IOT system is working support towards a more connected IOT based home appliances ,The simplicity of voice control will allow the smart television to act as the central access point of the modern smart home under the standard language & words.

HOME SCREEN

After completing the wizard Settings, you can watch TV and go to the home screen.

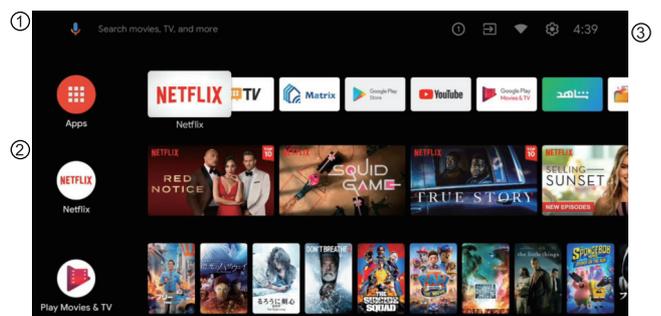

- ① Open the google assistant or start a voice search.
- ② Among the applications installed on the TV, the icons for the favourite applications are shown inside here. (Favourite applications can be added / deleted / changed its order by users.)

③ **Apps:** Click to jump to Apps screen where all the installed applications are listed.

④ **Notification:** Display the notifications.


⑤ **Inputs:** Icon to select an input source.

⑥ **Network&Internet:**Icon to set up Network,such as WIFI.

⑦ **Settings:**Various settings can be configured here. For details on the settings,see the next explanation.

INPUT SOURCE

In the HOME interface, press **▲/▼◀/▶** to select the "Inputs" icon, press **OK** to open the input source list, then press up to highlight an input and press **OK** to switch.


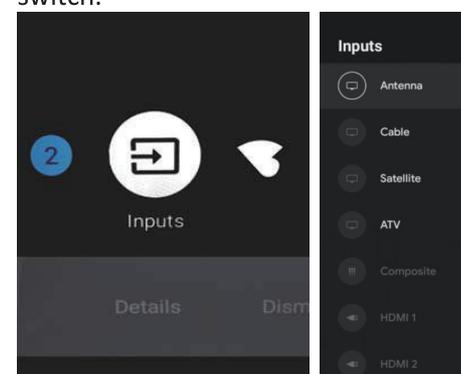


Under live TV, press the SOURCE button to display the list of input sources. You can select the desired source.


OPERATING INSTRUCTIONS

NAVIGATING THE ON-SCREEN MENU

There are two ways to enter. First, in live TV, press the menu button to display TV options, press ▲/▼ ◀/▶ to select the settings menu and press **OK** to confirm. Second, in the HOME interface, press the ▶ key to select the icon of the circular settings menu, press **OK** to confirm.

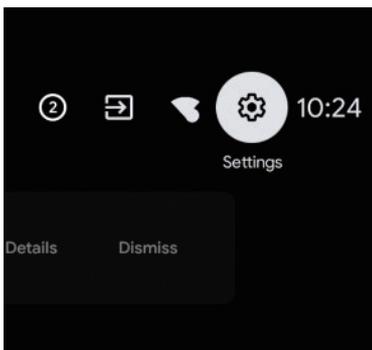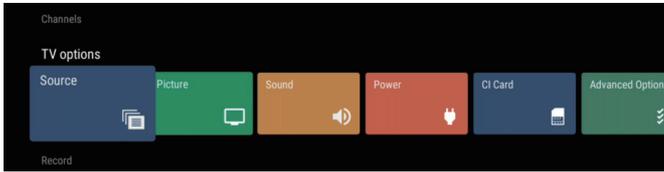


Press ▲/▼ button to select what you want set.
Press **OK** to enter setting.

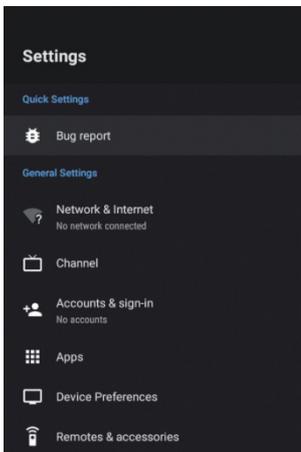

Press **BACK** to return to the previous menu. If the main menu is displayed, pressing **BACK** will close the onscreen menu.


Network

1. Press ▲/▼ button to select what you want set .
2. Press **OK** button to adjust.
3. After finishing your adjustment, Press **OK** button to save and return to the pervious menu.

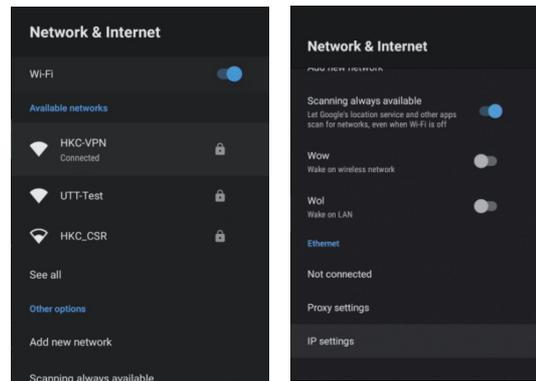


CHANNEL (Antenna)

1. In the HOME interface, select the “Inputs” icon, press **OK** to open the input source list, select the “Antenna”.

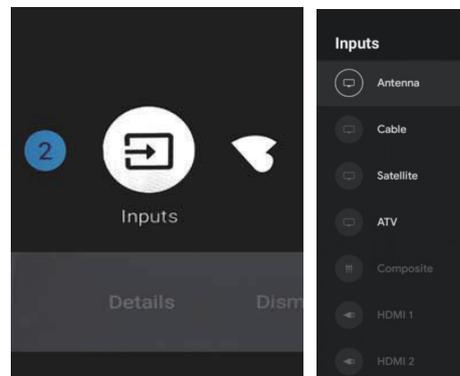

2. Menu->Settings->Channel->Channels.

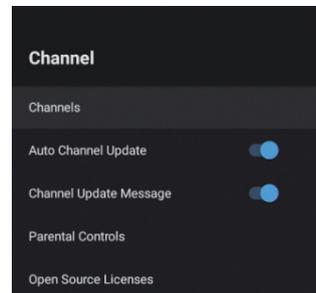

Channels – Display the scan **sub-menu** based on different Channel installation modes.

Auto Channel Update – Press **OK** button to choose ON/OFF. When selecting ON, the system will automatically scan and update channels after 5 minutes of standby.





Channel Update Message– Press **OK** button to choose ON/OFF. When selecting ON, the system will show you the update message.

Parental controls– Press ▲/▼ button to select the option then press **OK** button to enter the sub-menu.

Open source licenses – Press ▲/▼ button to select the option then press **OK** button to enter the sub-menu.

3. Select the sub-menu , you can Channel Scan, Update Scan, Single RF Scan, etc.

OPERATING INSTRUCTIONS

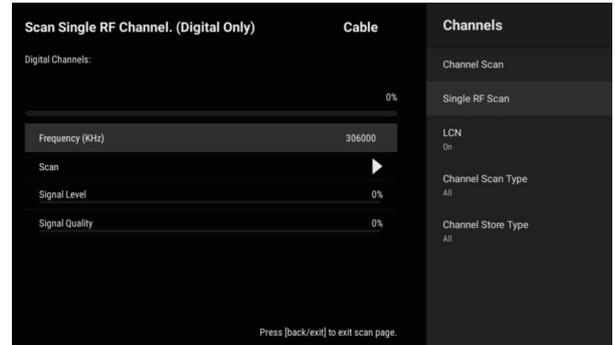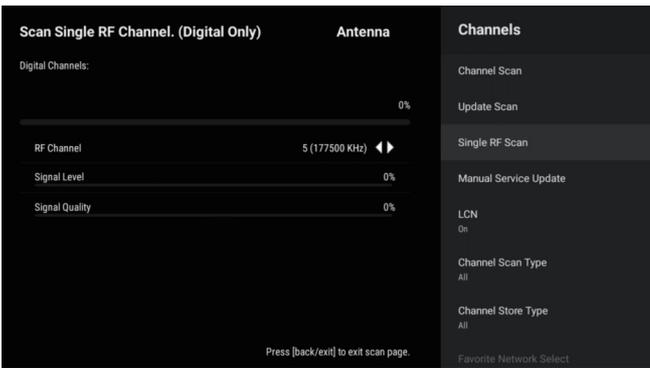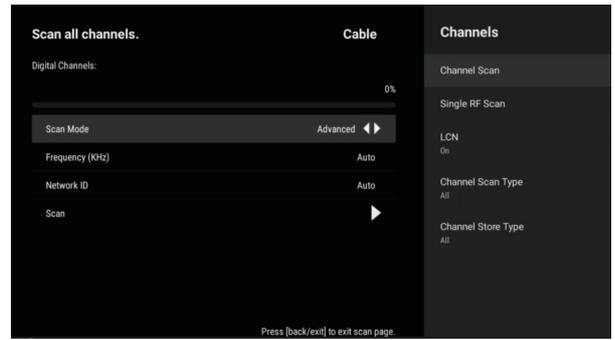
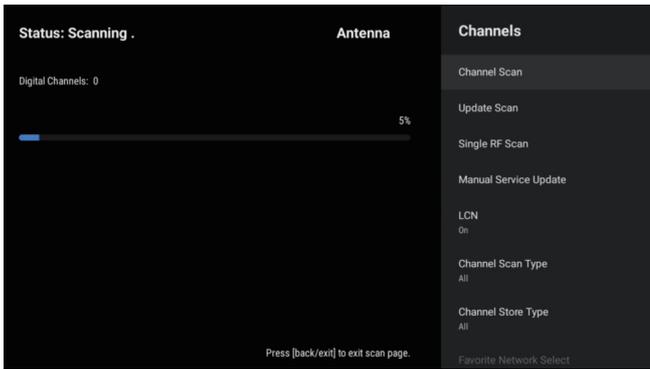


CHANNEL (Cable)

1. In the HOME interface, select the “Inputs” icon, press OK to open the input source list, select the “Cable”.



CHANNEL (Satellite)

1. In the HOME interface, select the “Inputs” icon, press OK to open the input source list, select the “Satellite”.

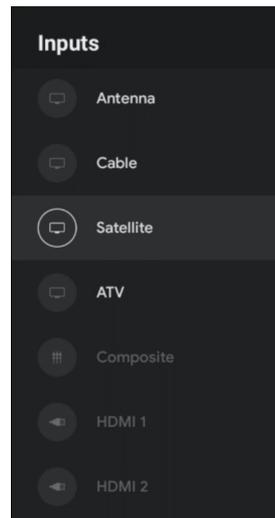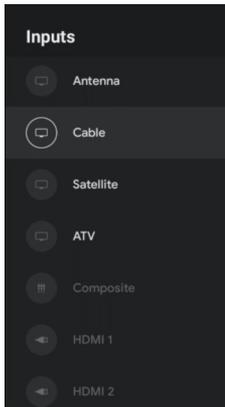

2. Menu->Settings->Channel->Channels.






2. Menu->Settings->Channel->Channels.

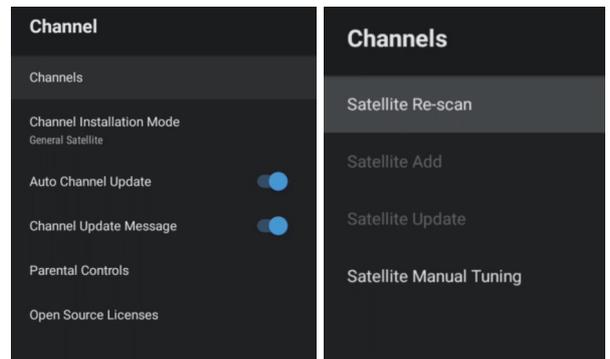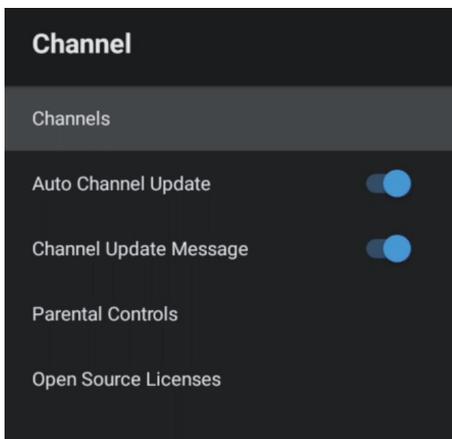

3. Select the sub-menu, you can Channel Scan, Single RF Scan, etc.


3. Select the sub-menu, you can Satellite Re-scan, Satellite Manual Tuning, etc.

OPERATING INSTRUCTIONS

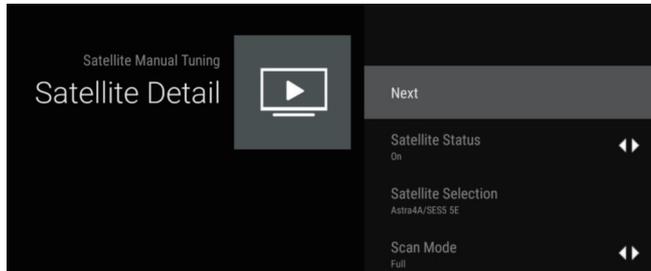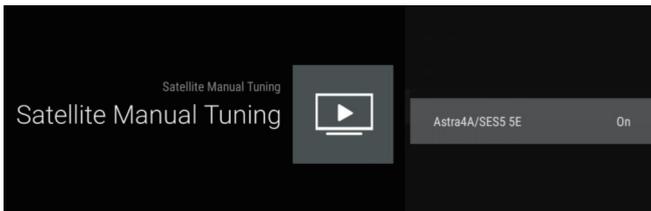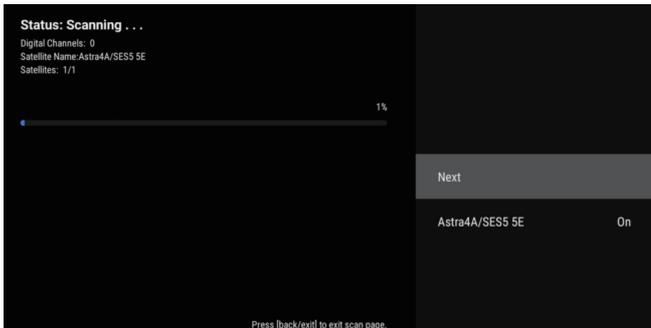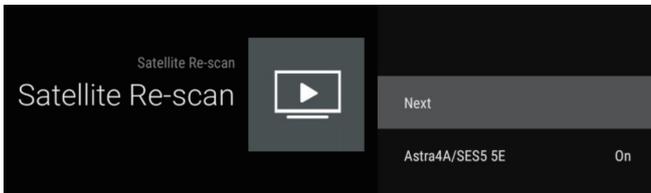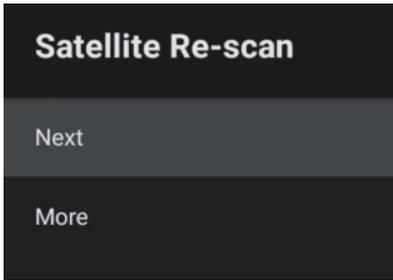


CHANNEL (ATV)

1. In the HOME interface, select the "Inputs" icon, press OK to open the input source list, select the "ATV".

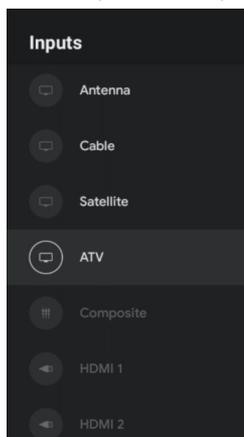

2. Menu->Settings->Channel->Channels.


3. Select the sub-menu, you can Channel Scan, Update Scan, Analog Manual Scan, etc.

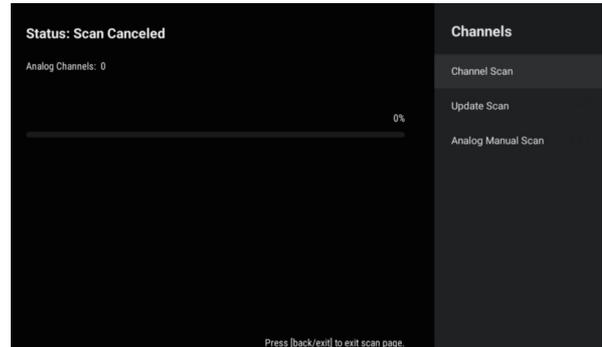


Channel Scan: directly enter the automatic search platform interface.

Update Scan: Re-automatically search for frequency points outside the station.

Analog Manual Scan: Manual ATV search station. After input the frequency point, you can select up or down search station.

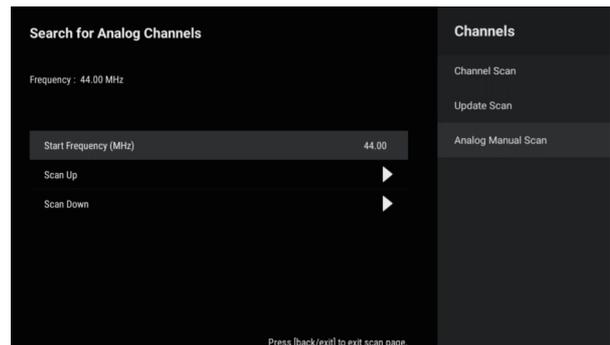


Channel Skip/Channel Swap/Channel Move/Channel Edit/Channel Delete: Press ▲/▼ button to select the option then press OK button to enter the sub-menu.

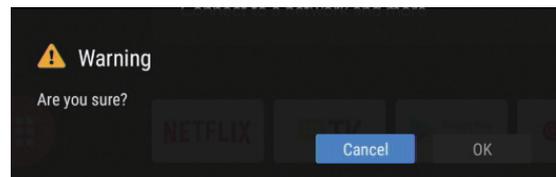


Clear Channel List: Press ▲/▼ button to select the option then press OK button to choose clear or not

ACCOUNTS & SIGN IN

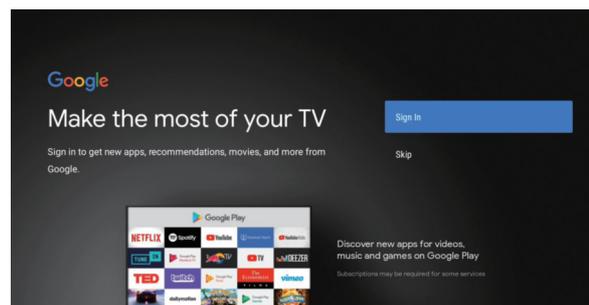

OPERATING INSTRUCTIONS


APPS

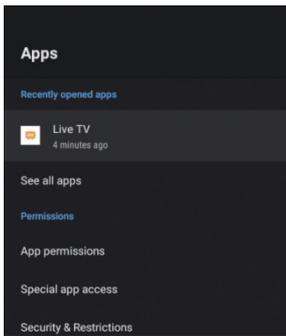

In this menu, you can set the APP permissions, and read the app lists

1. Press ▲/▼ button to select what you want set .
2. Press OK button to adjust.
3. After finishing your adjustment, press BACK button to return to the previous menu.


DEVICE PREFERENCES

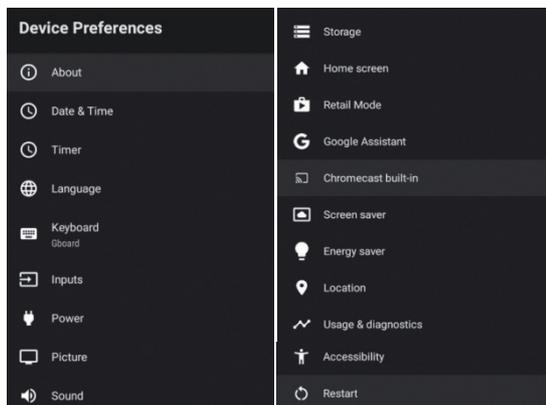

In this menu, you can read the information and settings of TV.


1. Press ▲/▼ button to select what you want set .
2. Press OK button to adjust.
3. After finishing your adjustment, Press BACK button to return to the previous menu.

ABOUT

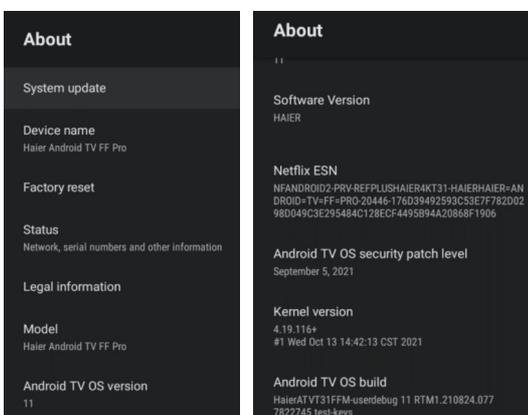

In this menu, you can System update, Factory reset and read the information of TV.

DATE&TIME

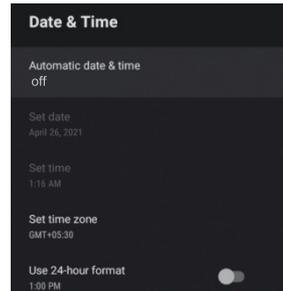

Automatic date & time – Press ▲/▼ button to select the option then press OK button to enter the sub-menu. (Optional: Use network-provided time, Off)

NOTE

- Manually adjusting date & time settings will automatically change the **Automatic date & time** to OFF .


Set date – Press ▲/▼ button to select the option then press OK button to enter the sub-menu.

Set time – Press ▲/▼ button to select the option then press OK button to enter the sub-menu.

Set time zone – Press ▲/▼ button to select the option then press OK button to enter the sub-menu.

Use 24-hour format – Press ▲/▼ button to select the option then press OK button to choose ON/OFF.

TIMER

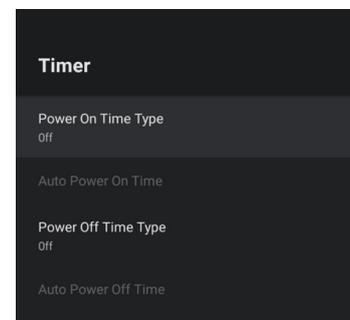

Power On Time Type – Press ▲/▼ button to select the option then press OK button to choose ON/OFF/ONCE.


Auto Power On Time – Press ▲/▼ button to select the option then press OK button to enter the sub-menu.

Power Off Time Type – Press ▲/▼ button to select the option then press OK button to choose ON/OFF/ONCE.

Auto Power Off Time – Press ▲/▼ button to select the option then press OK button to enter the sub-menu.


OPERATING INSTRUCTIONS

LANGUAGE

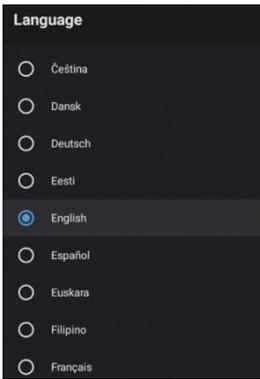

Language – Press ▲/▼ button to select the option then press **OK** button to enter the select language.

KEYBOARD

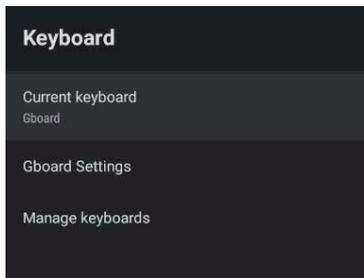


Current keyboard – Press ▲/▼ button to select the option then press **OK** button to enter the sub-menu.

Gboard Settings – Press ▲/▼ button to select the option then press **OK** button to enter the sub-menu.

Manage keyboards – Press ▲/▼ button to select the option then press **OK** button to enter the sub-menu.

INPUTS

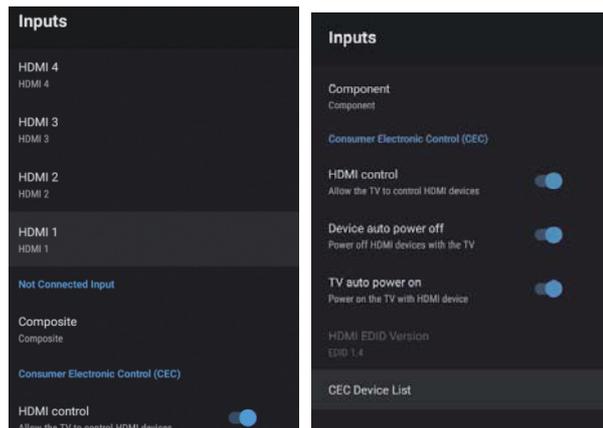

Inputs – Press ▲/▼ button to select the option then press **OK** button to enter the sub-menu.

HDMI control – Press ▲/▼ button to select the option then press **OK** button to choose ON/OFF.


Device auto power off – Press ▲/▼ button to select the option then press **OK** button to choose ON/OFF.

TV auto power on – Press ▲/▼ button to select the option then press **OK** button to choose ON/OFF.

HDMI EDID Version – show EDID version.

CEC Device List – Press ▲/▼ button to select the option then press **OK** button to enter the sub-menu.

POWER

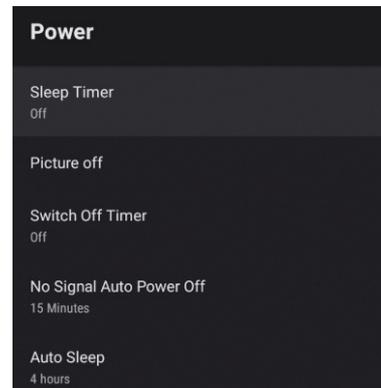

Sleep Timer – Press ▲/▼ button to select the option then press **OK** button to enter the sub-menu.

(Optional: off, 10 minutes, 20 minutes, 30 minutes, 40 minutes, 50 minutes, 60 minutes, 90 minutes, 120 minutes)

Picture off – Press ▲/▼ button to select the option then press **OK** button to choose ON/OFF.

Switch off timer – Press button to select the option then press **OK** button to enter the sub-menu.


(Optional: off, 30 minutes, 60 minutes, 90 minutes, 120 minutes, 150 minutes, 180 minutes, 210 minutes, 240 minutes)

No Signal Auto Power Off – Press ▲/▼ button to select the option then press **OK** button to enter the sub-menu.

(Optional: off, 5 minutes, 10 minutes, 15 minutes, 30 minutes, 60 minutes).

Auto Sleep – Press ▲/▼ button to select the option then press **OK** button to enter the sub-menu. (Optional: Never, 4 hours, 6 hours, 8 hours).

PICTURE

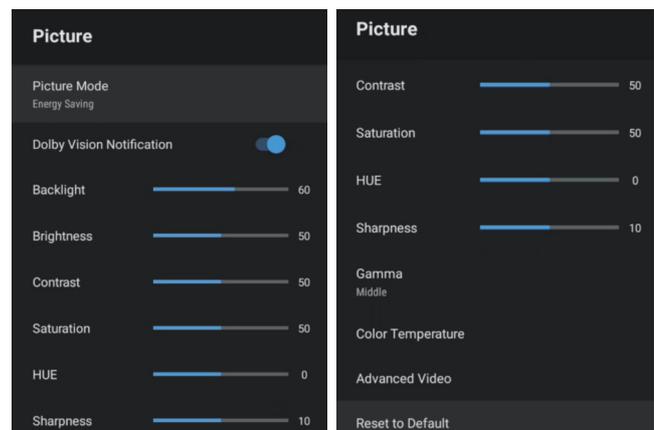

Picture Mode – Press ▲/▼ button to select the option then press **OK** button to enter the sub-menu. (Optional: user, Standard, Vivid, Sport, Movie, Game, Energy saving).

OPERATING INSTRUCTIONS

Dolby Vision Notification – Press ▲ /▼ button to select the option then press **OK** button to choose ON/OFF.

Backlight/Brightness/Contrast/Saturation/HUE/Sharpness – Press ▲ /▼ button to select the option. Press ◀ to decrease the parameter. Press ▶ to increase the parameter.


Gamma – Press ▲ /▼ button to select the option then press **OK** button to enter the sub-menu. (Optional: Dark, middle, Bright).

Color Temperature – Press ▲ /▼ button to select the option then press **OK** button to enter the sub-menu.

Advanced Video – Press ▲ /▼ button to select the option then press **OK** button to enter the sub-menu.

Reset to Default – Reset all settings to the factory defaults.

SOUND

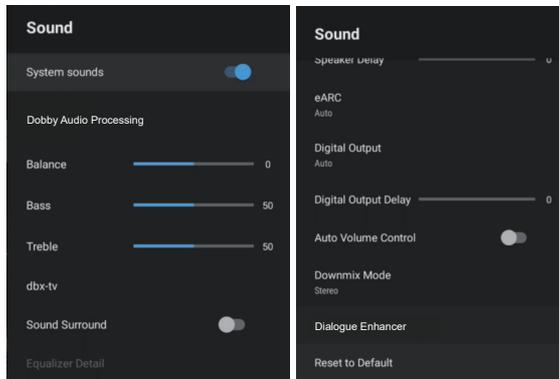

System sounds– Press ▲ /▼ button to select the option then press **OK** button to choose On/Off.

Dolby Audio processing – Press ▲ /▼ button to select the option then press **OK** button to choose ON/OFF.

Balance/ Bass/ Treble – Press ▲ /▼ button to select the option. Press ◀ to decrease the parameter. Press ▶ to increase the parameter.

dbx - tv – Press ▲ /▼ button to select the option then press **OK** button to enter the sub-menu.

Sound Surround – Press ▲ /▼ button to select the option then press **OK** button to choose ON/OFF.

Equalizer Detail – Press ▲ /▼ button to select the option then press **OK** button to enter the sub-menu.

Speaker Delay – Press ▲ /▼ button to select the option. Press ◀ to decrease the parameter. Press ▶ to increase the parameter.

eARC – Press ▲ /▼ button to select the option, then press **OK** button to choose Auto/OFF.

Digital Output – Press ▲ /▼ button to select the option then press **OK** button to enter the sub-menu. (Optional: Auto, Bypass, PCM, Dolby Digital Plus, Dolby Digital).

Digital Output Delay – Press ▲ /▼ button to select the option. Press ◀ to decrease the parameter.

Press ▶ to increase the parameter.


Auto Volume Control – Press ▲ /▼ button to select the option then press **OK** button to choose ON/OFF.

Downmix Mode– Press ▲ /▼ button to select the option then press **OK** button to enter the sub-menu. (Optional: Stereo, Surround).

Dialogue Enhancer – Press ▲ /▼ button to select the option then press **OK** button to choose Off/Low/ Medium/High.

Reset to Default – Reset all settings to the factory defaults.


STORAGE

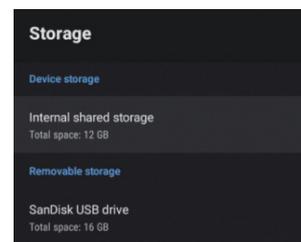

Internal shared storage – Press ▲ /▼ button to select the option then press **OK** button to enter the sub-menu.

Removable Storage – Press ▲ /▼ button to select the option then press **OK** button to enter the sub-menu. (Note: Show external devices if available)

HOME SCREEN

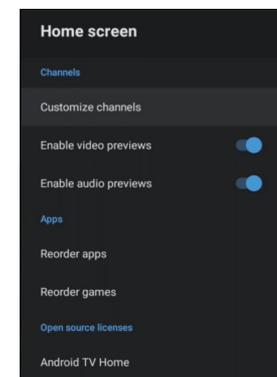


In this menu, you can set channels, discover, apps, open source licenses.

1. Press button to select what you want set.
2. Press **OK** button to adjust.
3. After finishing your adjustment, Press **BACK** button return to the previous menu.

OPERATING INSTRUCTIONS


RETAIL MODE

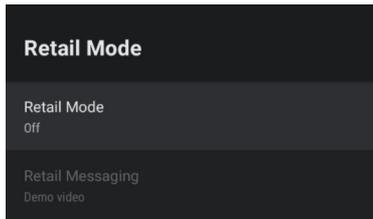

Retail mode – Press ▲/▼ button to select the option then press **OK** button to choose ON/OFF.

Retail messaging – Press▲/▼ button to select the option then press **OK** button to enter the sub-menu.(Note: Demo video,e-POP left,e-POP bottom)


GOOGLE ASSISTANT

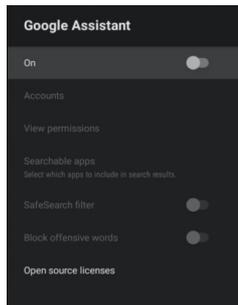

In this menu, you can set searchable apps, safe Search filter,block offensive words,open source licenses.

1. Press ▲/▼ button to select what you want set.
2. Press **OK** button to adjust.
3. After finishing your adjustment,press BACK button return to the previous menu.


CHROMECAST BUILT-IN

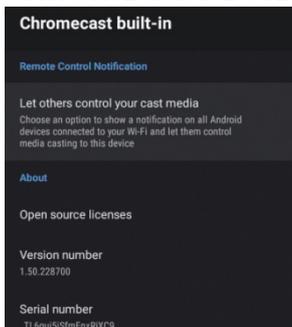

In this menu,you can read the information and settings of Chromecast

1. Press ▲/▼ button to select what you want set.
2. Press **OK** button to adjust.
3. After finishing your adjustment,Press BACK button return to the previous menu.

SCREEN SAVER

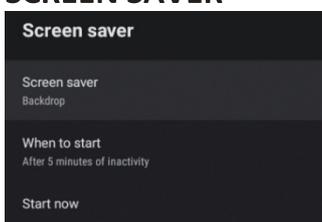


Screen saver – Press ▲/▼ button to select the option then press **OK** button to enter the sub-menu. (Optional:Turn screen off,Backdrop,Colors)

When to Start – Press ▲/▼ button to select the option then press **OK** button to enter the sub-menu. (Optional:5 minutes, 15 minutes, 30 minutes, 1 hour, 2 hours).


Start now – Press ▲/▼ button to select the option then press **OK** button to enter screen saver.

Energy SAVER

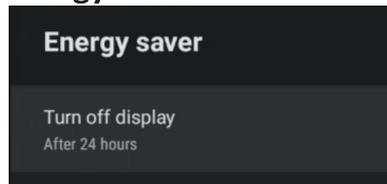


Start now – Press ▲/▼ button to select the option then press **OK** button to enter the sub-menu. (Optional:15 minutes, 30 minutes, 1 hour, 4 hours, 8 hours, 12 hours , 24 hours , Never).

LOCATION

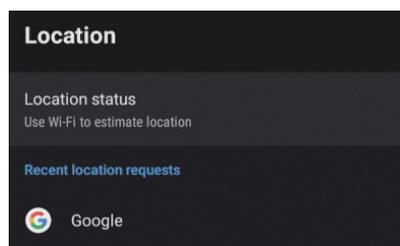


Location status – Press ▲/▼ button to select the option then press **OK** button to enter the sub-menu. (Optional:Use WIFI to estimate location,off)

USAGE & DIAGNOSTICS

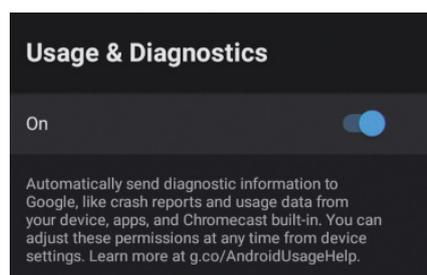

Usage & diagnostics – Press ▲/▼ button to select the option then press **OK** button to choose ON/OFF.

ACCESSIBILITY

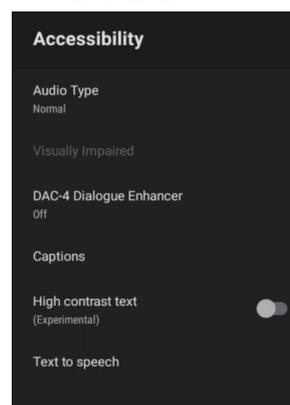

OPERATING INSTRUCTIONS

Audio Type – Press▲/▼ button to select the option then press **OK** button to enter the sub-menu.

(Optional:Normal,Audio Description,Spoken Subtitle, Hearing Impaired,Audio Description and Spoken Subtitle)

Visually Impaired – Press▲/▼ button to select the option then press **OK** button to enter the sub-menu.

DAC- 4 Dialogue Enhancement – Press▲/▼ button to select the option then press **OK** button to enter the sub-menu. (Optional:Off,Low,Medium,High)


Captions – Press ▲/▼ button to select the option then press **OK** button to enter the sub-menu.

High contrast text – Press▲/▼button to select the option then press **OK** button to choose ON/OFF.



Text to speech – Press▲/▼button to select the option then press **OK** button to enter sub-menu.

RESET

Press **OK** button to enter the sub-menu.
Reset-Erase everything.

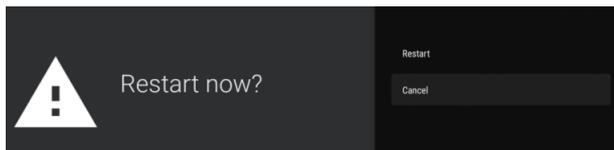



REMOTE & ACCESSORIES

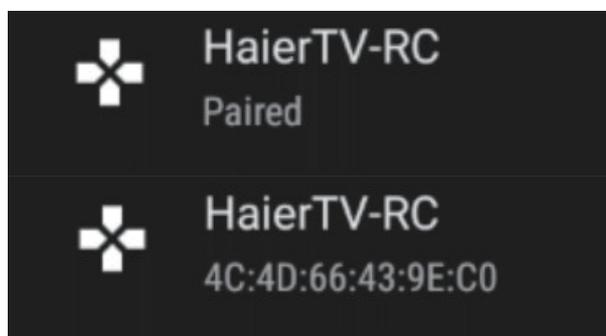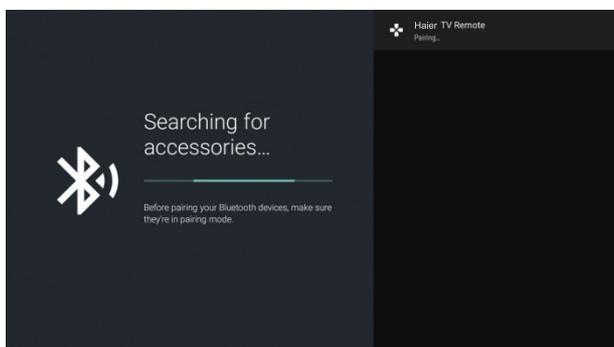

In this menu,you can pair Bluetooth devices.

- 1.Press the " ← " and " " buttons at the bottom of the remote control for 5 seconds.
- 2.When the LED starts to flash, release it. The remote controller will send the pairing signal to the TV and display the information of the remote control on the right side of the screen.
- 3.Press the **OK** button to display the pairing. If the paired is displayed, the connection is successful.
- 4.If the couldn't pair appears, the connection fails. Wait 30 seconds and then press the " ← " and " " buttons at the bottom of the remote control for 5 seconds to repeat the previous steps.
- 5.Press " ← " button return to the previous menu.

ADD AND USE OF MULTI MEDIA PLAYER

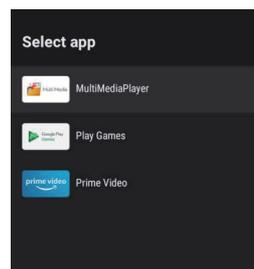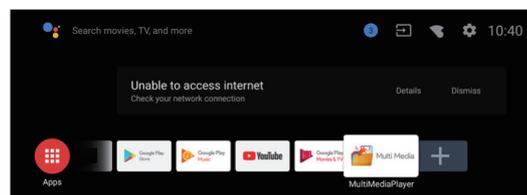

1. In the HOME interface, select the + icon in the APP column to add the application, and click OK. Press up and down to select the MultiMediaPlayer application, and click OK to add it to the HOME interface.




2. Select OK key to enter Multi Media Player and display Video, Photo, Audio. After inserting the usb flash drive, you can view the corresponding files in the usb flash drive (FAT32 Format).


NOTE

The menu may be different depending on when you purchased the TV.



HANDS FREE VOICE CONTROL

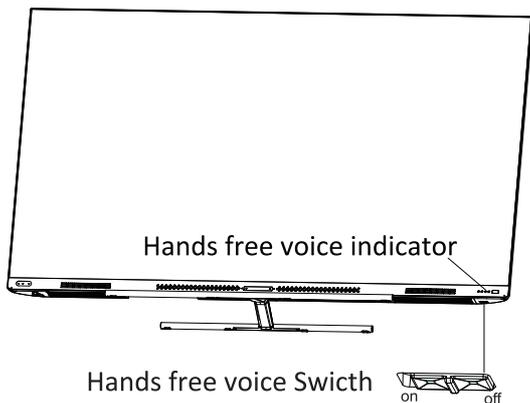



Switch to the left to open the Hands free Voice Control, and to the right to close.

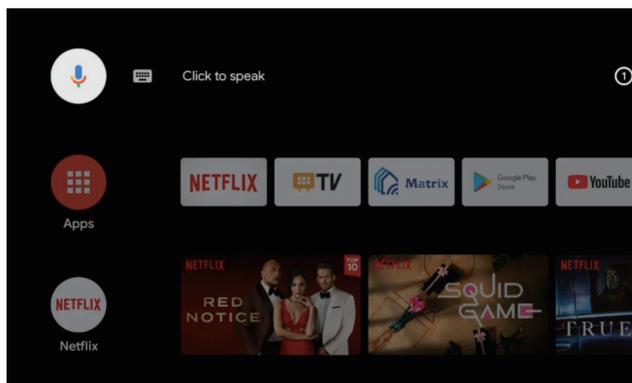



1. Move the switch toward the center of the screen. (Open by default)

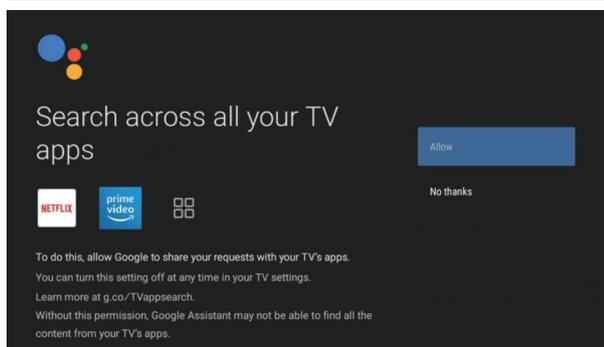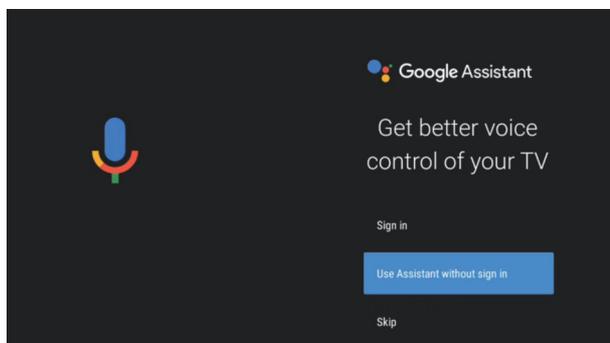

2. Operate the remote control and click the microphone icon. Select settings Google assistant, and select sign in or use assistant without sign in—Allow

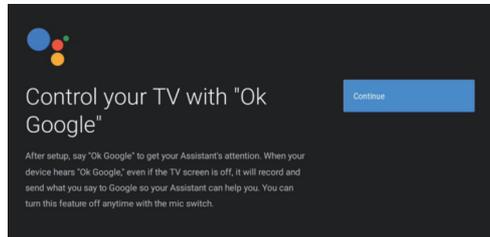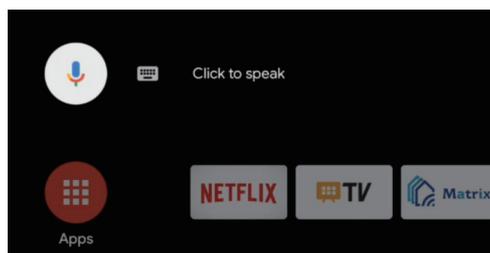

3. Continue to click the microphone icon to conduct voice interaction through the wake-up word "Ok Google".

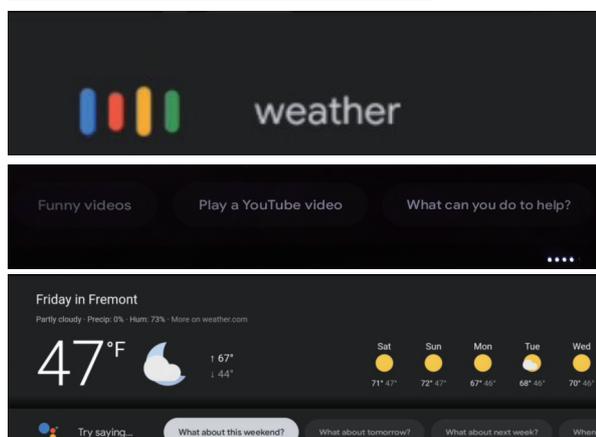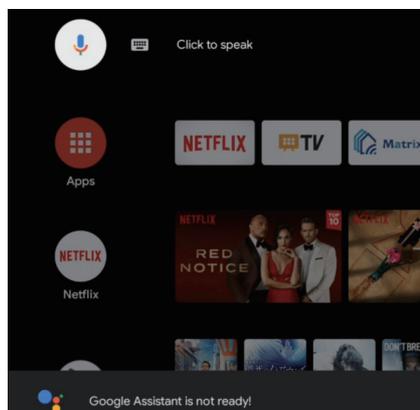

4. Click the microphone icon again. When the prompt "Google assistant is not ready!" is prompted, the system starts the voice module. After the prompt disappears, it can be used. For example, when we say "Ok Google, weather", Hands free voice indicator will light up and feed back the weather conditions.

NOTE

- This feature requires network support. When the network fails or is restricted, try manually setting the current network date and time.

5. Supported Far Field Assistant locales
 en-US/es-US, fr-FR, es-ES, ja-JP, ko-KR, de-DE, it-IT, en-GB, en-AU, en-IN/hi-IN, en-CA/fr-CA, es-MX, pt-BR, id-ID, sv-SE, vi-VN

TROUBLESHOOTING

Please make these simple checks before calling service. These tips may save you time and money since charges for receiver installation and adjustments of customer controls are not covered under your warranty.

Symptoms	Items to Check and Actions to Follow
"Ghost" or double image	<ul style="list-style-type: none"> This may be caused by obstruction to the antenna due to high rise buildings or hills. Using a highly directional antenna may improve the picture.
No power	<ul style="list-style-type: none"> Check if the TV's AC power cord is plugged into the outlet. Unplug the TV, wait for 60 seconds. Then reinsert plug into the outlet and turn on the TV again.
No picture	<ul style="list-style-type: none"> Check antenna connections at the rear of the TV to see if it is properly connected to the TV. Possible broadcast station trouble. Try another channel. Adjust the contrast and brightness settings. Check the Closed Captions control. Some TEXT modes could block the screen.
Good picture but no sound	<ul style="list-style-type: none"> Increase the volume level by pressing the VOL+ button on the remote control or on the TV side control panel. Press the MUTE button on the remote control to ensure mute is off.
Good sound but poor color	<ul style="list-style-type: none"> Adjust the contrast, color and brightness settings.
Poor picture	<ul style="list-style-type: none"> Poor picture quality may occur when an activated S-VHS camera or camcorder is connected to your TV and other peripherals at the same time. Switch off one of the peripherals.
Snowy picture and noise	<ul style="list-style-type: none"> Check the antenna connection.
Horizontal dotted line	<ul style="list-style-type: none"> This may be caused by electrical interference (e.g. hair dryer, nearby neon lights, etc.) Turn off the equipment.
Television not responding to remote control	<ul style="list-style-type: none"> Check whether the batteries are working. Replace if necessary. Clean the remote control sensor lens on the TV. You can still use the buttons on the side of your TV.
Pixels (dots) that are always dark or always lit	<ul style="list-style-type: none"> Your TV is precision-manufactured using an extremely high level of technology. However, sometimes pixels may not display correctly. These types of occurrences are inherent to this type of product and do not constitute a defective product.

 **NOTE**

• This product uses a panel consisting of sub pixels which require sophisticated technology to produce. However, there may be a few bright or dark pixels on the screen. These pixels will have no impact on the performance of the product.



Dolby, Dolby Vision, Dolby Atmos, and the double-D symbol are registered trademarks of Dolby Laboratories Licensing Corporation. Manufactured under license from Dolby Laboratories. Confidential unpublished works. Copyright © 2012–2022 Dolby Laboratories. All rights reserved.

PRODUCT SPECIFICATION

55" UHD Android LED TV

Television picture quality:	UHD Integrated digital. Screen Size: 139 cm Resolution 3840x2160 pixels 60Hz.
TV System:	PAL-B/G,SECAM-B/G
DTV Tuner Decoder	DVB-T, DVB-C, DVB-T2, DVB-S2 16/32/64/128/256 QAM modulation MPEG2,MPEG4,H.265
Connectivity:	1 Optical port 2 USB ports 1 RJ45 4 HDMI sockets 1 VIDEO socket 1 L socket 1 R socket 2 RF sockets 1 EARPHONE port 1 CI slot Supported Systems:PAL+SECAM Storage channel number: 1000(DTV),100(ATV) TV (RF) :75 Ω Imbalance AV Video-Input:75 Ω ,1V-P,RCA AV Audio-Input:20K Ω ,500mV RMS HDMI Video Input: 480i, 480p, 720p, 1080i, 1080p,2160p WiFi : Standard: IEEE 802.11a/b/g/n/ac ,Frequency: 2.4GHz/5GHz Bluetooth:V5.1
Sound quality:	Stereo sound system. 2 x 13.5 watts RMS power output.
Standby Power consumption	$\leq 0.5W$
Digital features:	Digitally interactive. Digital text. Digital video broadcasting (DVB) subtitles available. Auto setup. Auto scan for new channels. Now and next programme guide. 7 day electronic programme guide (EPG). Top up TV compatible. CI slot. Audio description compatible.
Additional features:	UHF/VHF tuner;Sleep timer;Parental Guidance;Picture and text Remote control batteries required 2 x AAA (included). VESA Mount Size: 200x200 mm Package Size (WxHxD): 1360x860x150mm Set Size (WxHxD) with Stand: 1229x782x255mm Set Size (WxHxD) without Stand: 1229x730x68mm Package weight : 18.7kg Set weight with stand: 15.2kg Set weight without stand: 14.0kg

* The part specifications of this TV set provided here are for reference only.
Diferences may occur as product technology is updated.
Design and specifications are subject to change without notice.

PRODUCT SPECIFICATION

65" UHD Android LED TV

Television picture quality:	UHD Integrated digital. Screen Size: 165cm Resolution 3840x2160 pixels 60Hz.
TV System:	PAL-B/G,SECAM-B/G
DTV Tuner Decoder	DVB-T, DVB-C, DVB-T2, DVB-S2 16/32/64/128/256 QAM modulation MPEG2,MPEG4,H.265
Connectivity:	1 Optical port 2 USB ports 1 RJ45 4 HDMI sockets 1 VIDEO socket 1 L socket 1 R socket 2 RF sockets 1 EARPHONE port 1 CI slot Supported Systems:PAL+SECAM Storage channel number: 1000(DTV),100(ATV) TV (RF) :75 Ω Imbalance AV Video-Input:75 Ω ,1V-P,RCA AV Audio-Input:20K Ω ,500mV RMS HDMI Video Input: 480i, 480p, 720p, 1080i, 1080p,2160p WiFi : Standard: IEEE 802.11a/b/g/n/ac ,Frequency: 2.4GHz/5GHz Bluetooth:V5.1
Sound quality:	Stereo sound system. 2 x 13.5 watts RMS power output.
Standby Power consumption	$\leq 0.5W$
Digital features:	Digitally interactive. Digital text. Digital video broadcasting (DVB) subtitles available. Auto setup. Auto scan for new channels. Now and next programme guide. 7 day electronic programme guide (EPG). Top up TV compatible. CI slot. Audio description compatible.
Additional features:	UHF/VHF tuner;Sleep timer;Parental Guidance;Picture and text Remote control batteries required 2 x AAA (included). VESA Mount Size: 400x200 mm Package Size (WxHxD): 1610x1005x175mm Set Size (WxHxD) with Stand: 1448x906x295mm Set Size (WxHxD) without Stand: 1448x852x67mm Package weight : 28.85kg Set weight with stand: 20.8kg Set weight without stand: 17.8kg

* The part specifications of this TV set provided here are for reference only.
Differences may occur as product technology is updated.
Design and specifications are subject to change without notice.

Haier

美工资料		 惠科股份有限公司 HKC Corporation Limited			
料号		物料名称	英文说明书	版本	V0
国家/订单	中东	工厂型号	55 65VX	客户型号	
规格	142x205mm	比例	1:1	客户品牌	HAIER
设计		核准		日期	2023.4.1
材质	80g书写纸 黑白印刷 骑马钉				
备注说明					