



## User Manual

### M92/S90/M96 Series

Illustration in this guide are provided for reference only and may differ from actual product appearance. Product design and specification may be changed without notice.

 


# IMPORTANT SAFETY INSTRUCTIONS

- 1) Read these instructions.
- 2) Keep these instructions.
- 3) Heed all warnings.
- 4) Follow all instructions.
- 5) Do not use this product near water.
- 6) Clean only with dry cloth.
- 7) Do not block any ventilation openings, install in accordance with the instructions.
- 8) Do not install near any heat sources such as radiations, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 9) Do not defeat the safety purpose of the polarized plug. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- 10) Protected the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- 11) Only use attachments/accessories specified by the manufacturer.
- 12) Unplug this apparatus during lighting storms or when unused for long periods of time.
- 13) Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- 14) Mains plug is used as the disconnect device, the disconnect device shall remain readily operable.
- 15) The ventilation should not be impeded by covering the ventilation openings with items, such as newspapers, table-cloth, curtains, etc.
- 16) No naked flame sources, such as lighted candles, should be placed on the apparatus.
- 17) Attention should be drawn to the environmental aspects of battery disposal.
- 18) The use of apparatus in moderate climate.
- 19) The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the apparatus.
- 20) Warning: To avoid any injury caused by lean of the product, please always ensure the whole product was placed within the table surface in horizontal.

 This symbol indicates AC voltage.

 This symbol indicates DC voltage.

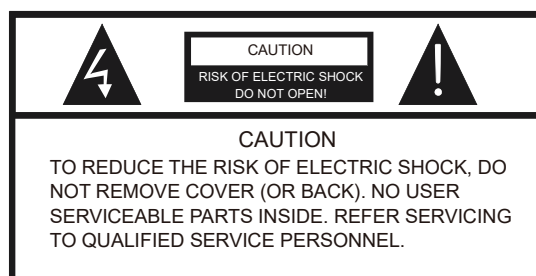

 The symbol indicates that dangerous voltages constituting a risk of electric shock are present within this unit.

 The symbol indicates that there are important operating and maintenance instructions provided in the user manual given with this unit.

## **WARNING:**

To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.

## **WARNING:**

The batteries shall not be exposed to excessive heat such as radiators, fire or the like.



This marking indicates that this product should not be disposed with other household wastes. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.



## **EU Battery Regulation**

This symbol on the battery(ies) or on the packaging indicates that the battery(ies) provided with this product shall not be treated as household waste. Instead, please separate battery(ies) from other types of waste and recycle it(them) through your local recycling system to protect environment and health.

The chemical symbol for lead (Pb) is added under this symbol if the battery(ies) contains more than 0.004 % lead. For more detailed information about recycling of this battery(ies), please contact your local authority or the shop where you purchased the product or battery(ies).

# IMPORTANT SAFETY INSTRUCTIONS

---



This symbol indicates that this product incorporates double insulation between hazardous mains voltage and user accessible parts. When servicing use only identical replacement parts.

## Stability Hazard

A display may fall, causing serious personal injury or death. Many injuries, particularly to children, can be avoided by taking simple precautions such as:

- ALWAYS use cabinets or stands or mounting methods recommended by the manufacturer of the display.
- ALWAYS use furniture that can safely support the display.
- ALWAYS ensure the display is not overhanging the edge of the supporting furniture.
- ALWAYS educate children about the dangers of climbing on furniture to reach the display or its controls.
- ALWAYS route cords and cables connected to your display so they cannot be tripped over, pulled or grabbed.
- NEVER place a television set in an unstable location.
- NEVER place the display on tall furniture (for example, cupboards or bookcases) without anchoring both the furniture and the display to a suitable support.
- NEVER place the display on cloth or other materials that may be located between the display and supporting furniture.
- NEVER place items that might tempt children to climb, such as toys and remote controls, on the top of the display or furniture on which the display is placed.

## CAUTION

Risk of explosion if battery is replaced by an incorrect type.

Warning for Apparatus containing COIN / BUTTON CELL BATTERIES (Below instruction only used for the apparatus containing a user-replaceable coin/button cell battery)

### WARNING:

Do not ingest the battery, Chemical Burn Hazard (The remote control supplied with) this product contains a coin/button cell battery. If the coin/button cell battery is swallowed, it can cause severe internal burns in just 2 hours and can lead to death. Keep new and used batteries away from children. If the battery compartment does not close securely, stop using the product and keep it away from children. If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.

## Precautions For Using Battery

Improper using of the battery will cause leakage. So please do as the following methods and use carefully.

- Please note the batteries' polarity, to avoid short circuit.
- When the battery's voltage is insufficient which affect the use range, you should replace new battery.
- Remove the batteries from the remote control unit if you do not intend to use it for a longtime.
- Do not use different types of batteries (for example, Manganese and Alkaline batteries) together.
- Do not put the battery into fire, and charge or decompose the battery.
- Please dispose batteries abide by relevant environmental protection regulation.

## Warning

Don't disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a Battery.

Don't leaving a battery in an extremely high temperature surrounding environment.

To avoid battery subjected to extremely low air pressure. The batteries battery pack or batteries installed) shall not be exposed to excessive heat such as sunshine, fire or the like.

## License

 


Dolby, Dolby Vision, Dolby Atmos, and the double-D symbol are registered trademarks of Dolby Laboratories Licensing Corporation. Dolby Vision IQ is a trademark of Dolby Laboratories Licensing Corporation. Manufactured under license from Dolby Laboratories. Confidential unpublished works. Copyright © 2012–2024 Dolby Laboratories. All rights reserved.




The terms HDMI, HDMI High-Definition Multimedia Interface, HDMI Trade dress and the HDMI Logos are trademarks or registered trademarks of HDMI Licensing Administrator, Inc.


## PRECAUTIONS AND REMINDERS

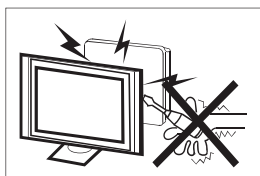

 
High voltages are used in the operation of this television receiver. Do not remove the cabinet back from your set. Refer servicing to qualified service personnel.

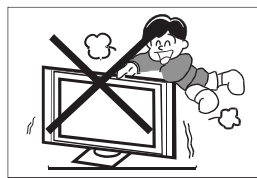

 Never stand on, lean on, or suddenly push the television or its stand. You should pay special attention to children. Serious injury may result if it falls.

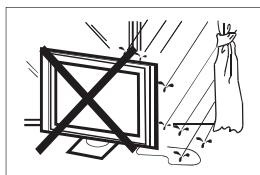

 
To prevent fire or electrical shock hazard, do not expose the television receiver to rain or moisture.

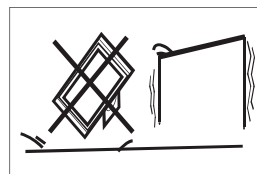


Do not place your television on an unstable cart, stand, shelf or table. Serious injury to an individual, and damage to the television, may result if it falls.



 
Do not drop or push objects into the television cabinet slots or openings. Never spill any kind of liquid on the television receiver.

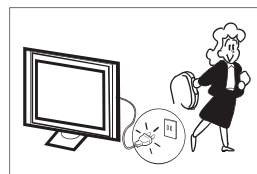

 
When the television receiver is not used for an extended period of time, it is advisable to disconnect the AC power cord from the AC outlet.

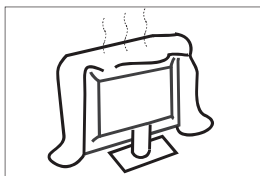

 
Do not block the ventilation holes in the back cover. Adequate ventilation is essential to prevent failure of electrical components.

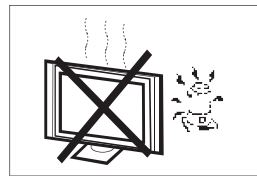

 Avoid exposing the television receiver to direct sunlight and other sources of heat. Do not stand the television receiver directly on other products which give off heat, e.g. video cassette players and audio amplifiers. Do not place naked flame sources, such as lighted candles on the television.

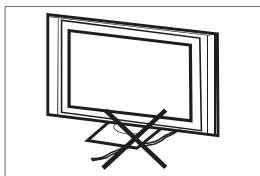

 Do not trap the power supply cord under the television receiver.

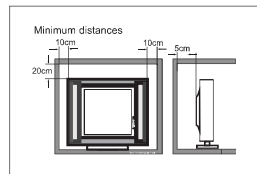

If the television is to be built into a compartment or similar enclosure, the minimum distances must be maintained. Heat build-up can reduce the service life of your television, and can also be dangerous.



If you are going to clean the product, unplug the TV, use soft fabric, no water, never chemicals.


Note: the use of apparatus in moderate climates.

Note: This product uses a panel consisting of sub pixels which require sophisticated technology to produce. However, there may be a few bright or dark pixels on the screen. These pixels will have no impact on the performance of the product.

## PREPARATION AND CONTROLS

 
### TURNING ON THE TV

1. Install the stand and place the TV on a solid surface.

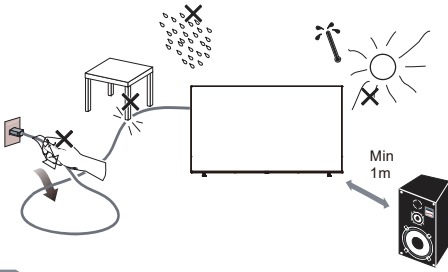


#### NOTE

 - Ensure that the TV is placed in a position to allow free flow of air. Do not cover the ventilation openings on the back cover.
  - To prevent any unsafe situations, no naked flame sources, such as lighted candles, should be placed on or in the vicinity.
  - Avoid heat, direct sunlight and exposure to rain or water. The TV shall not be exposed to dripping or splashing.
2. Connect the antenna or cable to the **ANT** aerial socket on the back of the TV set.
  3. Power:  
Plug the cord into a working power outlet.

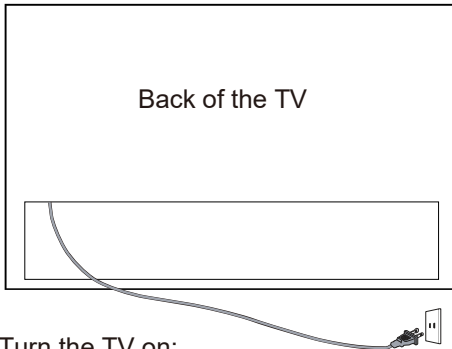

4. Turn the TV on:  
Press **⏻** on the remote control or **POWER** button at the bottom/side of the TV.

### BUTTON CONTROL

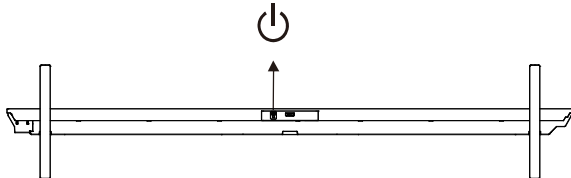 

*Note: All pictures are for reference only.*

### ACCESSORIES (M92 Series)

Remote Control - 1 pc  
User's Manual - 1 pc  
Base Installation Guide - 1 pc  
Screws (M6x20) - 4 pcs  
Base Stand - 2 pcs  
Wall Mount - 1 pc  
Cable Management Clip - 6 pcs  
Silicone Pad - 6 pcs

### ACCESSORIES (M96 Series)

Remote Control - 1 pc  
User's Manual - 1 pc  
Base Installation Guide - 1 pc  
Screws (M6x10) - 7 pcs  
Screws (M6x16) - 4 pcs  
Base Stand - 2 pcs  
Wall Mount - 1 pc  
Cable Management Clip - 6 pcs

*Note: 75"/85" base stands individually packaged.*

### ACCESSORIES (S90 Series)

 
Remote Control - 1 pc  
User's Manual - 1 pc  
Base Installation Guide - 1 pc  
Screws (M5x20) - 8 pcs  
Base Stand - 2 pcs

## TERMINAL CONNECTION


### AV EQUIPMENT

This TV provides one group of AV for convenient connection to VCR, DVD or other video equipment. Please refer to the user's manual of the equipment to be connected as well.

You can use the input terminals on TV set rear as follows.

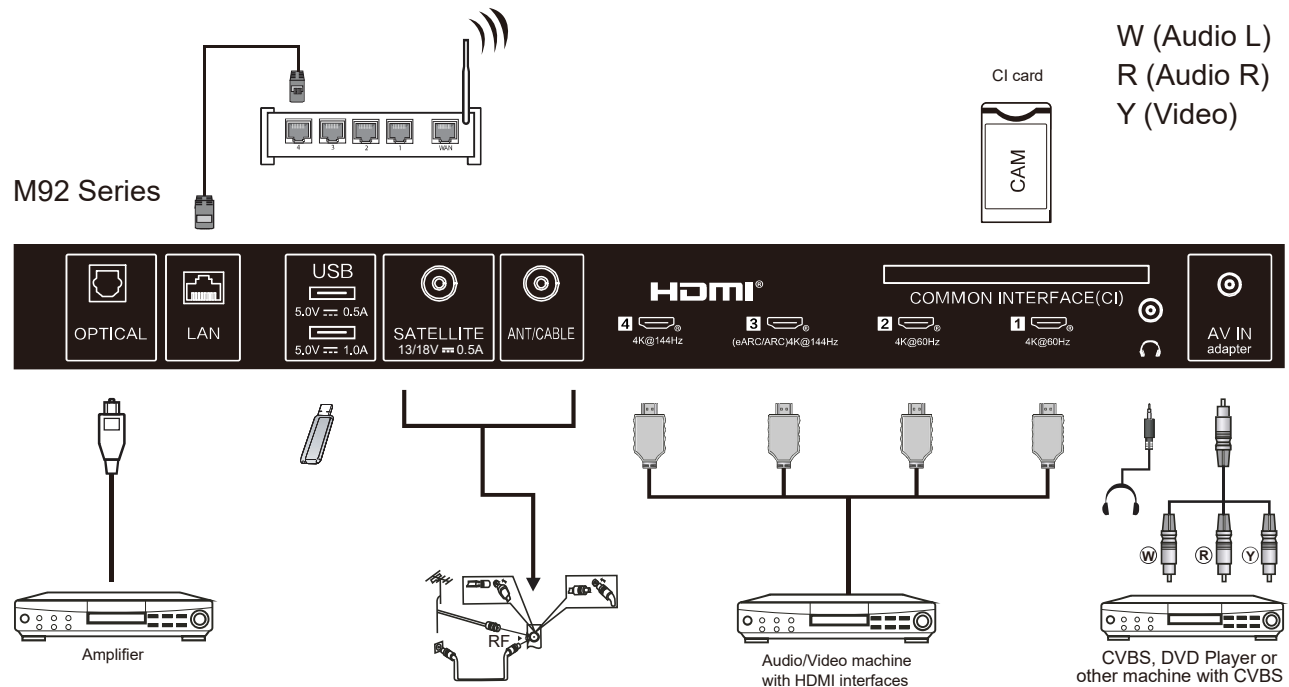

### M96 Series

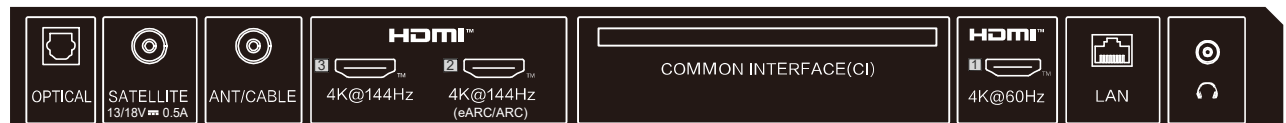 

### S90 Series



### Side USB interface

#### M92 Series



#### M96 Series



 
It can be connected to the following appliances: VCR, multi disc player, DVD, camcorder, video game or stereo system, etc

#### Note:

Sometimes it will not support in different device because the device supplies nonstandard signal.

# REMOTE CONTROL

## USING THE REMOTE CONTROL

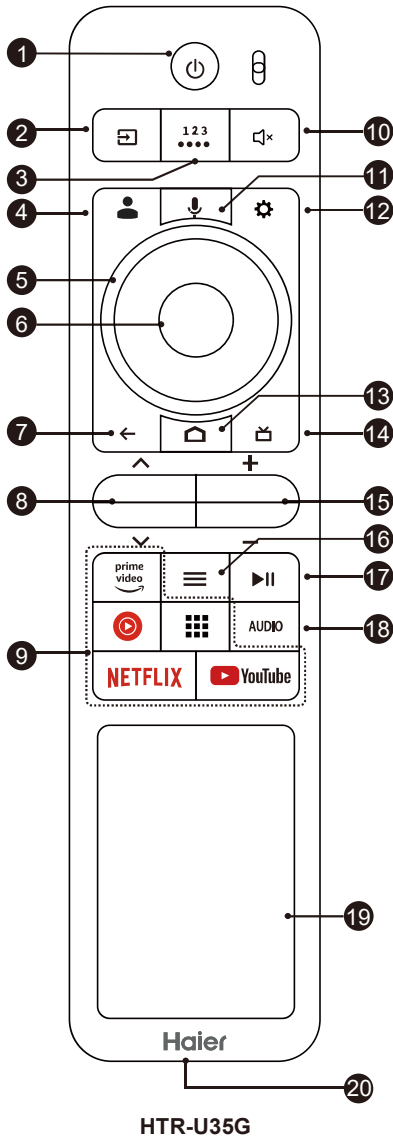


| #  | Item                                                                                                    | Description                                                                                                                                                                                                                  |
|----|---------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1  | <b>Power</b> (  )      | Turn the TV on or to standby mode.                                                                                                                                                                                           |
| 2  | <b>SOURCE</b> (  )     | Press this button to access the source list or select the desired sources as you need.                                                                                                                                       |
| 3  |                        | Access the virtual keyboard including usually-used buttons like number buttons, color buttons and so on.                                                                                                                     |
| 4  |                        | Switch Google accounts in Google TV Mode.                                                                                                                                                                                    |
| 5  |                        | Navigate the menu to select the content you need. In DTV mode, you can switch channels by pressing the up and down buttons, press the left button to start recording, and press the right button to get channel information. |
| 6  | <b>OK</b>                                                                                               | Confirm, enter or execute the selected item, or access the channel list.                                                                                                                                                     |
| 7  | <b>BACK</b> (  )       | Return to upper-level content, exit the current screen, or back to the previously viewed channel.                                                                                                                            |
| 8  | <b>Channel</b> (  )    | Push this button upwards/downwards to change channels in TV mode.                                                                                                                                                            |
| 9  | <b>APPS Button</b>                                                                                      | Access to all installed applications directly.                                                                                                                                                                               |
| 10 | <b>MUTE</b> (  )      | Press this button to mute or restore the TV sound.                                                                                                                                                                           |
| 11 | <b>MIC</b> (  )      | Start using the near field voice function.                                                                                                                                                                                   |
| 12 | <b>Settings</b> (  ) | Access the system settings of Google TV.                                                                                                                                                                                     |
| 13 | <b>HOME</b> (  )     | Short press to access the home page, and long press to access quick settings menu.                                                                                                                                           |
| 14 | <b>GUIDE</b> (  )    | Access the EPG interface in DTV mode.                                                                                                                                                                                        |
| 15 | <b>VOLUME</b> (  )   | Push this button upwards/downwards to adjust the sound volume.                                                                                                                                                               |
| 16 | <b>MENU</b> (  )     | Access the menu of quick settings in Live TV mode and Multimedia Player.                                                                                                                                                     |
| 17 |                      | Click to play/pause in multimedia mode.                                                                                                                                                                                      |
| 18 | <b>AUDIO</b>                                                                                            | Click to switch Audio channels.                                                                                                                                                                                              |
| 19 | <b>Light panel</b>                                                                                      | Convert Light Energy to Electric Energy.                                                                                                                                                                                     |
| 20 | <b>Type-C port</b>                                                                                      | Type-C port for quick charging.                                                                                                                                                                                              |


# OPERATING INSTRUCTIONS
 
## INITIAL SETUP


The first time you turn on your TV, the setup wizard will guide you through setting up basic settings. Please according to the Text Tip to First Time Setup.

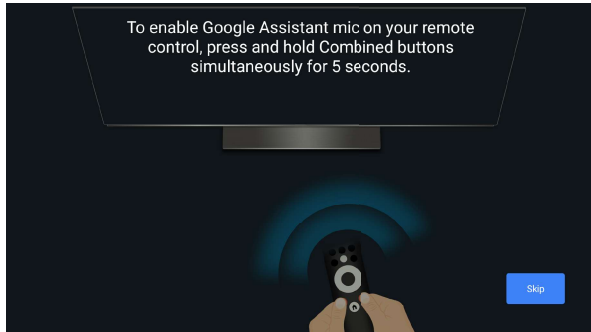

 
This function is used for the remote control pair code. After the code is successful, you can use the Bluetooth remote control to operate the TV.

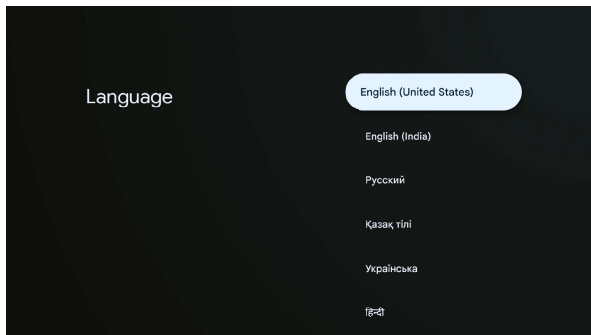

 Press **▲/▼** to select the system language and press **OK** to confirm the language.

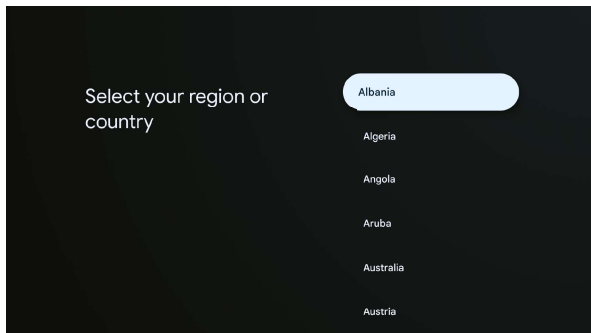


 Press **▲/▼** to select the region/country of your device and press **OK** to confirm. Complete the TV initialization settings according to the guide prompt.

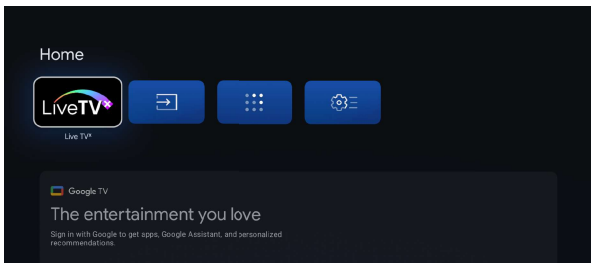


*Note: The picture is only for reference.*

 - Once in the user interface, you can switch from basic TV to Google TV settings.

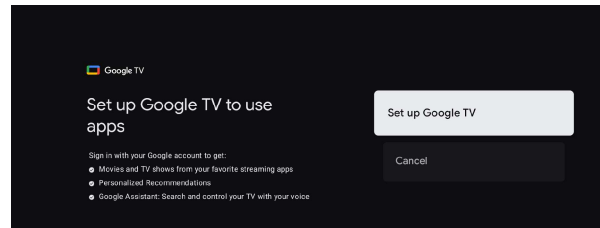

 Press **▲/▼** to select the "Set up Google TV" of your device and press **OK** to complete the setup.

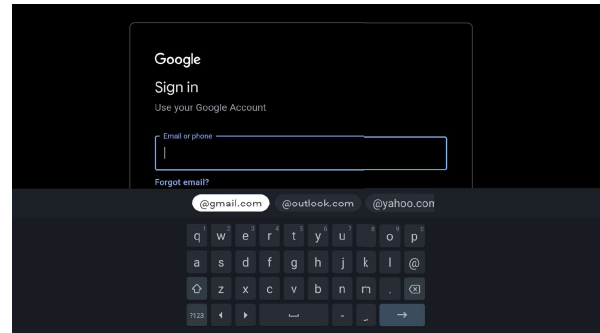


Use your Google Account Sign in. Follow the Google Guide.

## E-Manual

 E-Manual is built into your TV and can be displayed on the screen. To learn more about your TV features, access your E-Manual by referring to the following. E-Manual may be available depending on the region or model.

1. Press **HOME** button to access the home page.
2. Press **UP/DONW/LEFT/RIGHT** and **OK** button to select and enter "E-Manual" in "Apps".

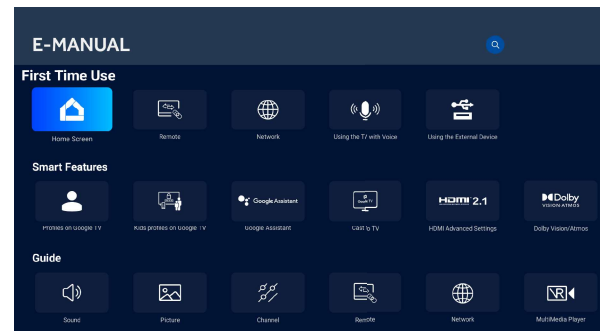

*Note: The picture is only for reference.*

## E-WASTE GUIDELINE

---



This marking indicates that this product should not be disposed with other household wastes. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use return and collection system or contact retailer where the product was purchased. They can take this product for environmental safe recycling, as per e-waste Management and Handling Rules, 2011

### Do's

1. Handover/Donate/Give the discarded electronic equipment only at the authorized collection centers.
2. Drop the discarded electronic equipment only in bins meant for electronic waste.
3. Ask the retailer about the take back schemes.
4. Consult the authorized service center whether the electronic equipment can be repaired or not, before discarding the same.
5. Tell your neighbors and other person about hazards of improper disposal or handling or improper recycling of electronic waste.
6. If the unwanted electronic equipment still works or can be repaired then consider donating them.
7. To minimize our impact on earth and to protect the environment for future generations return your discarded electronic equipments at authorized collections centers only.

### Don'ts

1. The product should not be opened by the user himself/herself, but only by authorized service personnel.
2. The product is not meant for re-sale to any unauthorized agencies/scrap dealers.
3. The product is not meant for mixing into household waste stream.
4. Do not keep any replaced spare part(s) from the product in exposed area.
5. Any disposal through unauthorized agencies/person will attract action under Environment (Protection) Act 1986.

This product is complied with the requirement of Hazardous Substances as specified under Rule 13 (1) & (2) of the E-Waste (Management & Handling) Rules, 2011.

To locate a nearest collection centre, please contact Toll Free No. 1800-419-9999 / 1800-102-9999 for details. All collection centre are operated by third parties with Haier Appliances India Pvt. Ltd. Merely as a facilitator.

# Haier