

基本内容				资料更新履历			
品牌	Haier	销往地					
物料编码	72-P750MA-60AZ2	机型/机芯	43/50/55/65D6170H				
物料名称	说明书	销售型号	H43P750UX\H50P750UX\ H55P750UX\H65P750UX				

制作要求	工艺或使用方法
------	---------

尺寸	143x210mm
材质	80g书写纸
颜色要求	黑白印刷
是否折叠或装订要求	
是否送样	否

备注:

在72-P750MA-60AZ1的基础上
更新HDMI LOGO

制作人	刘纯
制作日期	2023.4

内容见下页

平面审核		硬件会签	
结构会签		业务/DQA	
软件会签	平面设计室	会 签	7 8:14:27



User Manual

MODELS:

H43P750UX

H50P750UX

H55P750UX

H65P750UX

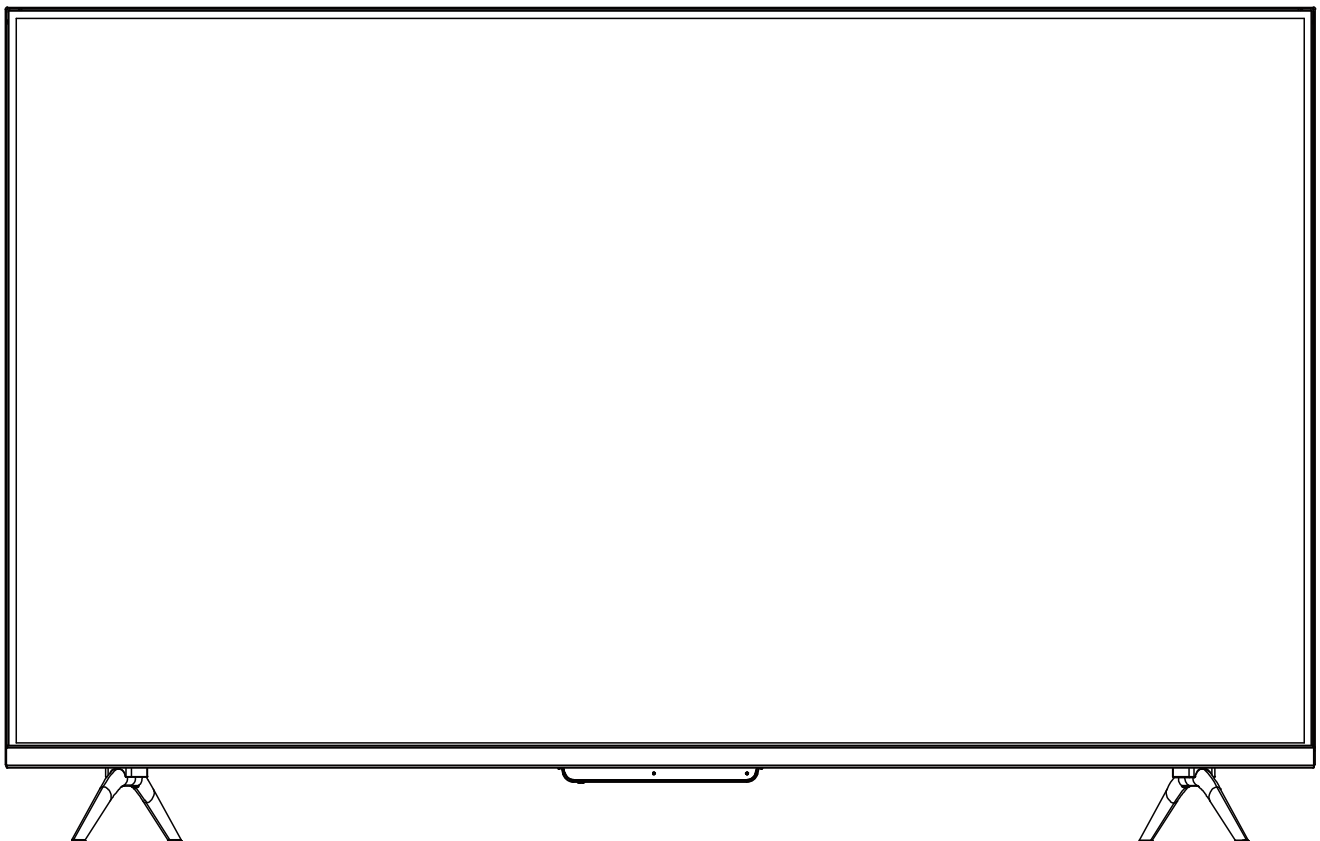 


Illustration in this guide are provided for reference only and may differ from actual product appearance. Product design and specification may be changed without notice.

A decorative graphic in the bottom right corner consisting of several overlapping triangles in various shades of grey and white, creating a modern, abstract design.

LED Television

TABLE OF CONTENTS

1. IMPORTANT SAFETY INSTRUCTIONS	1
2. PRECAUTIONS AND REMINDERS.....	2
3. PREPARATION	3
4. PERIPHERAL CONNECTION AND CONTROLS	4
5. MAKING CONNECTIONS.....	5
6. OPERATING INSTRUCTIONS	6
8. TROUBLESHOOTING	17
9. PRODUCT SPECIFICATION	18




Illustration in this guide are provided for reference only and may differ from actual product appearance.
Product design and specification may be changed without notice.

IMPORTANT SAFETY INSTRUCTIONS

- 1) Read these instructions.
- 2) Keep these instructions.
- 3) Heed all warnings.
- 4) Follow all instructions.
- 5) Do not use this apparatus near water.
- 6) Clean only with dry cloth.
- 7) Do not block any ventilation openings, install in accordance with the instructions.
- 8) Do not install near any heat sources such as radiations, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 9) Do not defeat the safety purpose of the polarized plug. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- 10) Protected the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- 11) Only use attachments/accessories specified by the manufacturer.
- 12) Unplug this apparatus during lighting storms or when unused for long periods of time.
- 13) Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- 14) Mains plug is used as the disconnect device, the disconnect device shall remain readily operable.
- 15) The ventilation should not be impeded by covering the ventilation openings with items, such as newspapers, table-cloth, curtains, etc.
- 16) No naked flame sources, such as lighted candles, should be placed on the apparatus.
- 17) Attention should be drawn to the environmental aspects of battery disposal.
- 18) The use of apparatus in moderate climate.
- 19) The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the apparatus.
- 20) warning: To avoid any injury caused by lean of the product, please always ensure the whole product was placed within the table surface in horizontal.

Actual product may vary in appearance from above image

 The main plug is used as the disconnect device, the disconnect device shall remain readily operable. the socket-outlet shall be easily accessible.

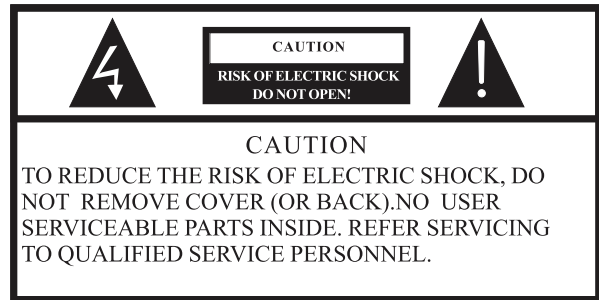

 The symbol indicates that dangerous voltages constituting a risk of electric shock are present within this unit.

 The symbol indicates that there are important operating and maintenance instructions in the literature accompanying this unit.

WARNING:

To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.

WARNING:

The batteries shall not be exposed to excessive heat such as sunshine, fire or the like.

 


This symbol indicates that this product incorporates double insulation between hazardous mains voltage and user accessible parts. When servicing use only identical replacement parts.




This marking indicates that this product should not be disposed with other household wastes. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.


PRECAUTIONS AND REMINDERS

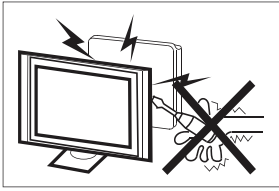

 
High voltages are used in the operation of this television receiver. Do not remove the cabinet back from your set. Refer servicing to qualified service personnel.

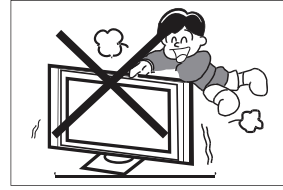

 
Never stand on, lean on, or suddenly push the television or its stand. You should pay special attention to children. Serious injury may result if it falls.

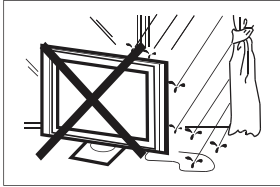

 
To prevent fire or electrical shock hazard, do not expose the television receiver to rain or moisture.

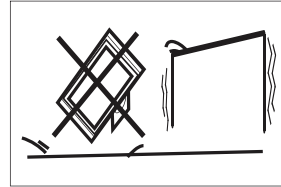

 
Do not place your television on an unstable cart, stand, shelf or table. Serious injury to an individual, and damage to the television, may result if it falls.

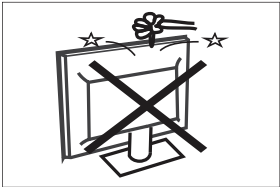

 
Do not drop or push objects into the television cabinet slots or openings. Never spill any kind of liquid on the television receiver.

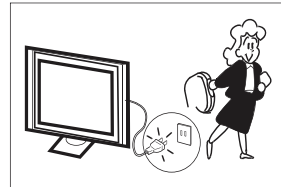

 
When the television receiver is not used for an extended period of time, it is advisable to disconnect the AC power cord from the AC outlet.

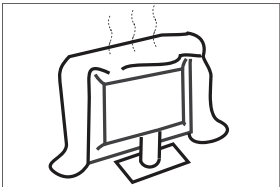

 
Do not block the ventilation holes in the back cover. Adequate ventilation is essential to prevent failure of electrical components.

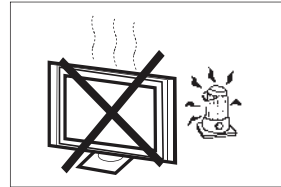

 Avoid exposing the television receiver to direct sunlight and other sources of heat. Do not stand the television receiver directly on other products which give off heat, e.g. video cassette players and audio amplifiers. Do not place naked flame sources, such as lighted candles on the television.

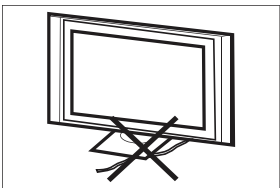

 Do not trap the power supply cord under the television receiver.

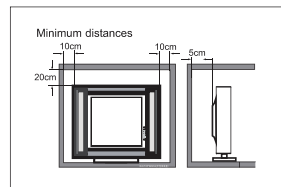

If the television is to be built into a compartment or similar enclosure, the minimum distances must be maintained. Heat build-up can reduce the service life of your television, and can also be dangerous.

Note: the use of apparatus in moderate climates.



If you are going to clean the product, Unplug the TV, use soft fabric, no water, never chemicals.

Note: This product uses a panel consisting of sub pixels which require sophisticated technology to produce. However, there may be a few bright or dark pixels on the screen. These pixels will have no impact on the performance of the product.

 
PREPARATION

IMPORTANT: Do not apply pressure to the screen display area which may compromise the integrity of the display. The manufacturer's warranty does not cover user abuse or improper installations.

ATTACHING THE STAND

IMPORTANT: The stand of the TV must be assembled prior to usage.

1. Place TV unit face down on a soft and flat surface (blanket, foam, cloth, etc.) to Prevent any damage to the TV.
2. Fix the stand to the bottom of the TV with the 4 screws.

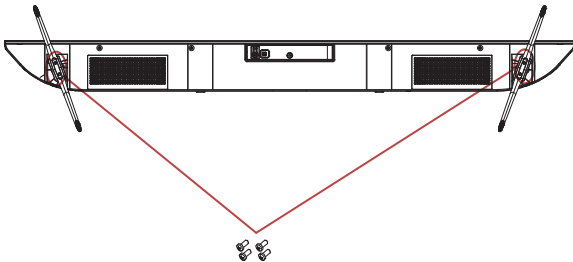

! NOTE

The appearance of the product shall be in kind.

 
PREPARING YOUR LED TV FOR WALL MOUNTING

We suggest that you keep your TV at least 2.36 inches (60 mm) from the wall to prevent cable interference. Before mounting your TV on the wall, you need to remove the stand.

For your safety, please use only with a UL listed wall mount bracket with minimum weight of the TV without stand.

To attach a wall mount bracket to your TV:

1. Remove the screws holding your TV to the stand.
2. Remove the stand from your TV.
3. Secure the wall mount bracket to the back of your TV using four screws. Follow the instructions of the user manual that came with the wall mount bracket to install.

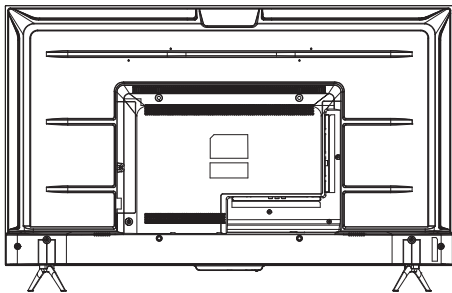


! NOTE

The wall mount bracket are not included.

4. Fix the wall mount screws (BM6x10mm/4pcs) into the rear side of the LEDTV ,using the torque of 8kgf.cm.


TURNING ON THE TV

 1. Install the stand and place the TV on a solid surface.

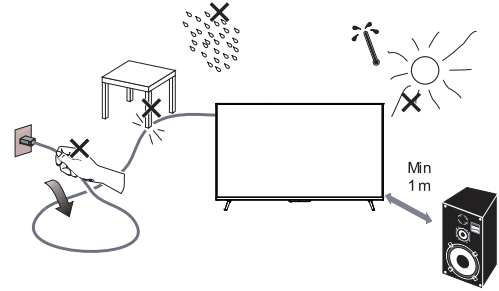

NOTE

 
- Ensure that the TV is placed in a position to allow free flow of air. Do not cover the ventilation openings on the back cover.
 - To prevent any unsafe situations, no naked flame sources, such as lighted candles, should be placed on or in the vicinity.
 - Avoid heat, direct sunlight and exposure to rain or water. The equipment shall not be exposed to dripping or splashing.
2. Connect the antenna cable or cable TV cable to the **ANT IN** aerial socket on the back of the TV set.
 3. Power:
Plug the cord into a working power outlet.

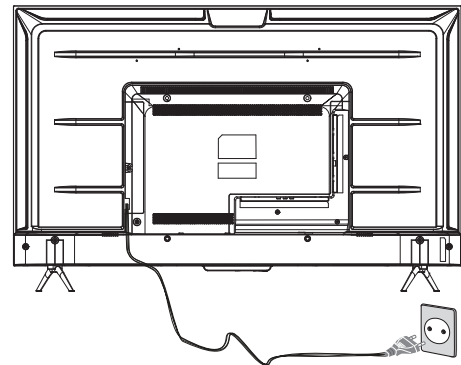

4. Turn the TV on:
Press  on the remote control or **POWER** button on the side control panel of the TV.

PERIPHERAL CONNECTION AND CONTROLS

 BUTTON CONTROL

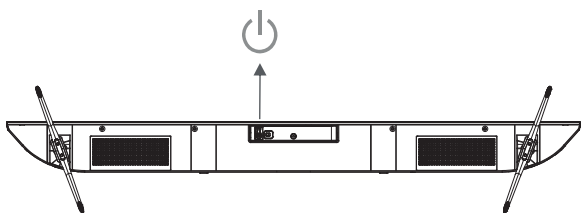

In the standby mode, press the button to turn on the TV.

In the boot state, press the middle button to shut down.

ACCESSORIES

TV
Remote Control - 1pcs
User's Manual - 1pcs
Screws - 4 pcs
Warranty Card -1pcs

PERIPHERAL CONNECTION



(43 model only)

All the terminals are (from left to right):

HDMI1(ARC), ANT IN (ANTENNA/CABLE), USB, HEADPHONE .



(50/55/65 model only)

All the terminals are (from left to right):

HDMI1(ARC), LNB IN (SATELLITE IN) ,ANT IN (ANTENNA/CABLE), USB,CI, HEADPHONE.



All the terminals are (from left to right):

 
RJ45, OPTICAL , VIDEO, AUDIO input(L/R), HDMI4, HDMI3, HDMI2.

Note:

When HDMI port get DVI signal, the audio signal receives from the AV Audio channel.


MAKING CONNECTIONS

You can use the input terminals on TV set rear as follows.

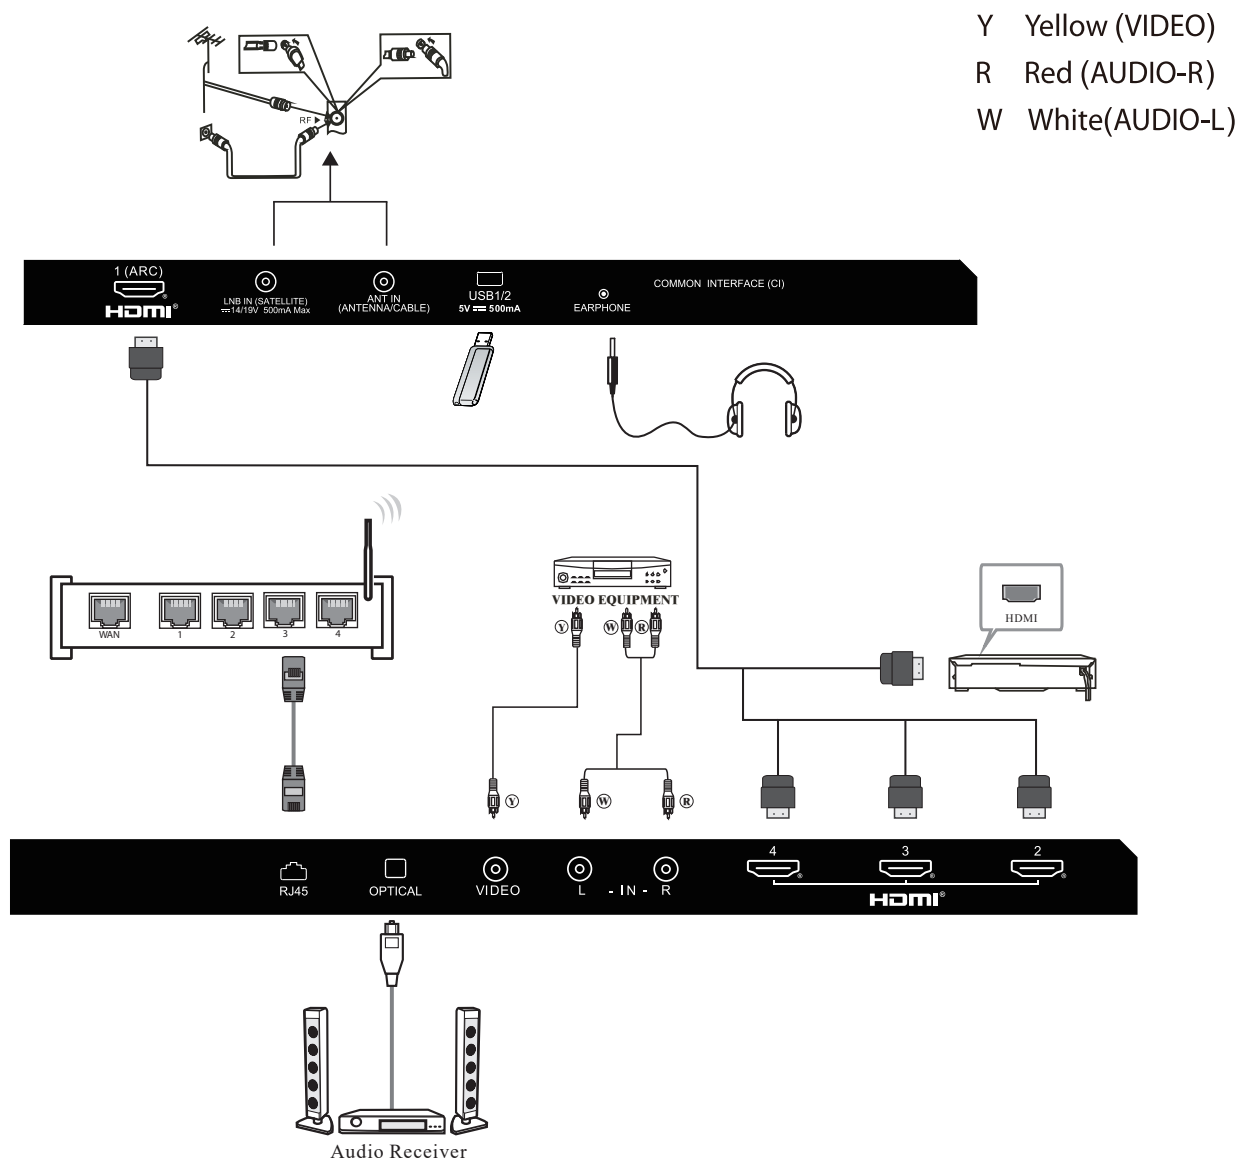


1. RF: Antennal/close circuit TV
2. HEADPHONE: Earphone output.
3. USB: Connect USB device.
4. HDMI: Connect to High-definition multimedia signal resource.
5. AV INPUT: Video input/Audio input.

 OPERATING INSTRUCTIONS

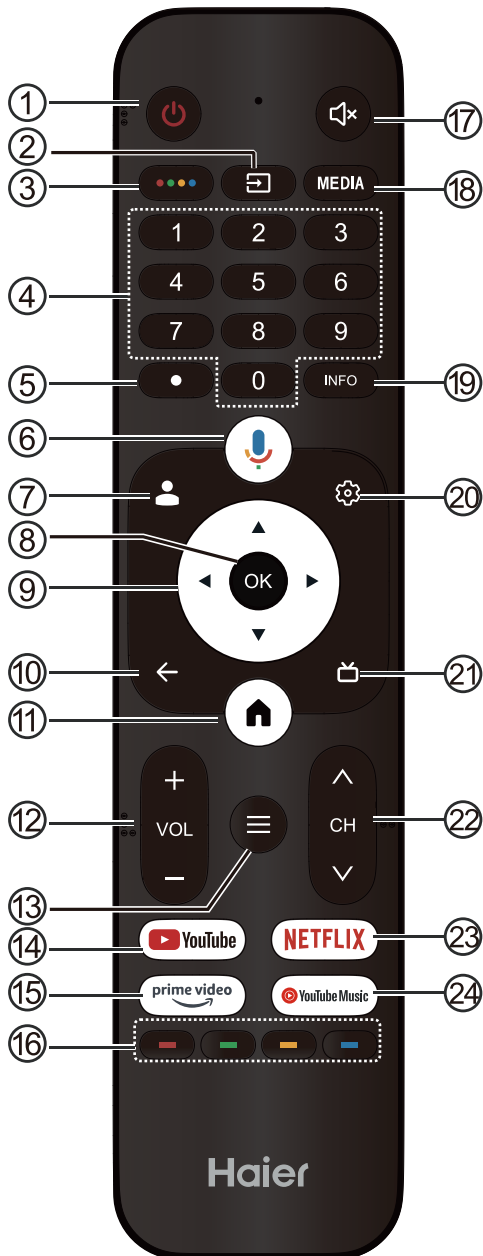

 Remove the cover of the battery compartment.
Insert the 2 supplied batteries (Type AAA 1.5V).

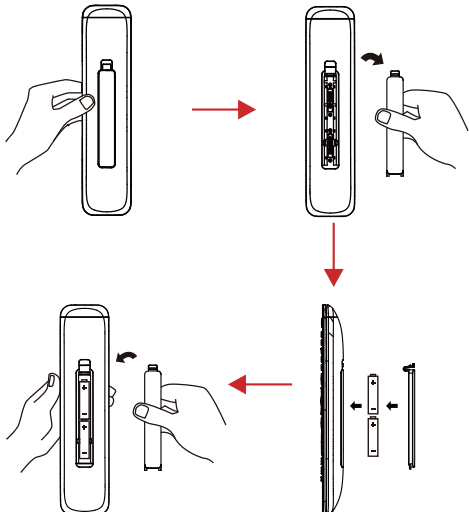

#	Item	Descriptions
1	Power	Press to turn the TV on or off. When your TV is off, power still flows through it. To completely disconnect power, unplug the power cord.
2		Press to open the input source list.
3		Press to open Virtual keyboard.
4	0~9 number	Press to enter a TV channel number.
5	(dot)	Input the character "dot". (Some areas are available)
6		Press to enter start a voice search.
7		Switch Google accounts in Google TV mode.
8	OK	Enter the selected option or perform the selected operation.
9		Press to navigate the on-screen menu.
10	← BACK	Return to the previous menu.
11		Press to open the Home Page.
12	VOL+/VOL-	Press VOL+ or VOL- to adjust volume level.
13	MENU	Press to open or close the on-screen menu.
14	YouTube	Press to open the YouTube.
15		Press to prime vido for viewing online TV shows and flms(internet connection required).
16	Coloured buttons	Implement the relevent operations according to the prompt at the botton of the menu in the text.
17		Press to mute and un-mute the sound.
18	MEDIA	Press to open Media.
19	INFO	Press to display the channel information.
20		Press to open the settings menus.
21		Press to display electronic programme guide in TV mode.
22	CH^/CH^	Press CH^ or CH^ to change TV channels.
23	NETFLIX	Press to open the NETFLIX.
24	YouTube Music	Press to open the YouTube Music.

 
OPERATING INSTRUCTIONS

INITIAL SETUP


The first time you turn on your TV, the setup wizard will guide you through setting up basic settings. Please according to the Text Tip to First Time Setup.




This function is used for the remote control pair code. After the code is successful, you can use the Bluetooth remote control to operate the TV.

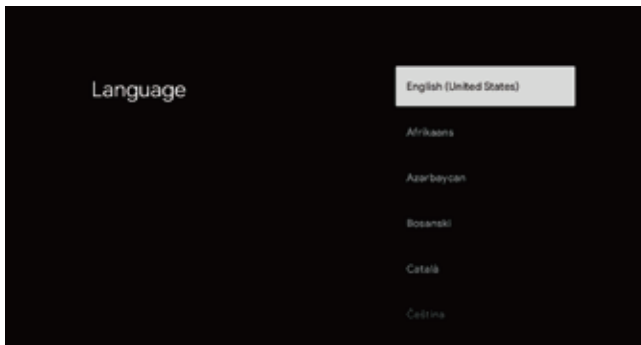

 
Press ▲/▼ to select the system language and press OK to confirm the language.

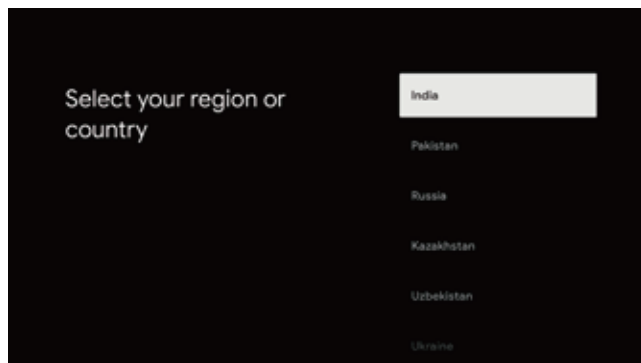

 
Press ▲/▼ to select the region/country of your device and press OK to confirm.

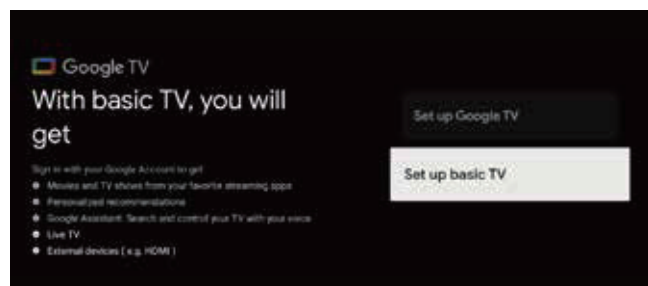

 Press ▲/▼ to select the "Set up basic TV" of your device and press OK to complete the setup.

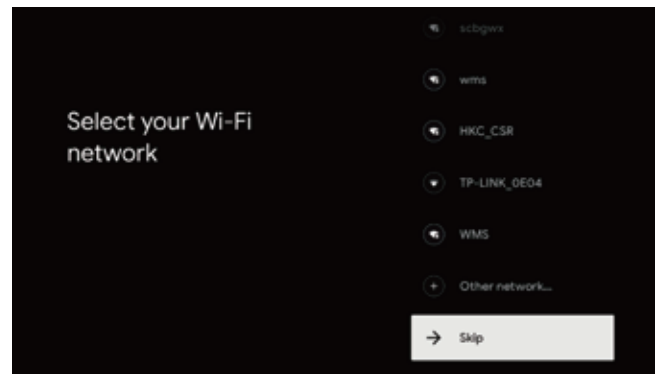

 
Press ▲/▼ to select the Wifi to connect, press OK and enter the password to confirm the Connection is successful.

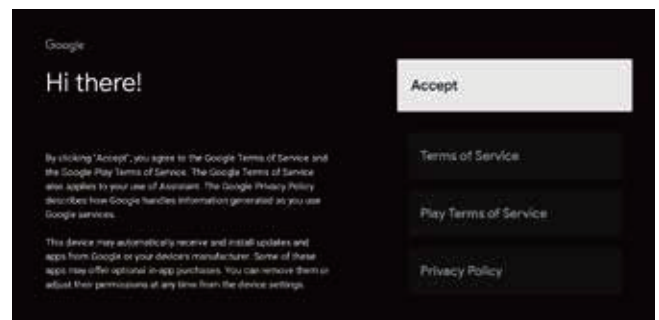


By accepting the Google Terms of Service to improve the product experience, select "Accept" to accept this condition.



 Used to set your device's password to ensure security and privacy.

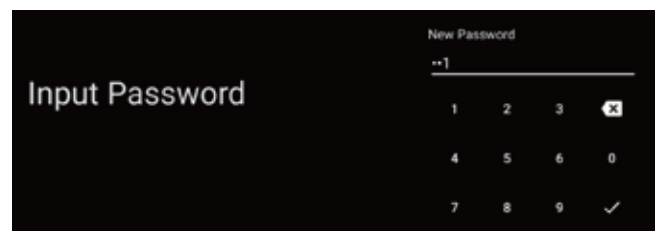


 Press OK to pop up the soft keyboard, and use the remote control to enter the 4-digit password automatically jump to the next interface.

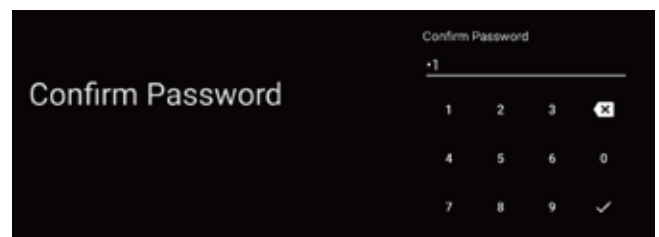


Confirm the password again and keep it consistent Use the remote control to enter the password and complete the password.

 
OPERATING INSTRUCTIONS

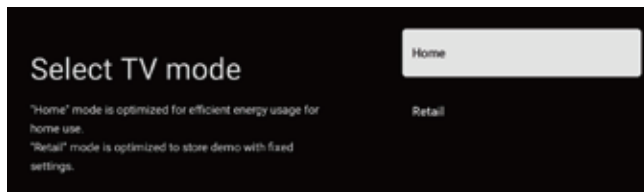

 
For selecting the mode, press ▲/▼ key to select Home mode and press "Yes".

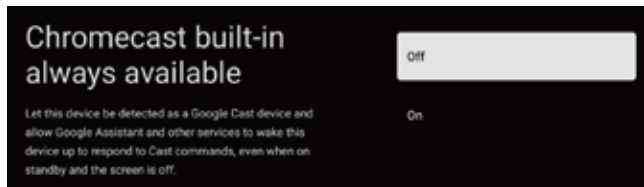

 
Select "On" to respond to cast commands, select "Off" to exit.

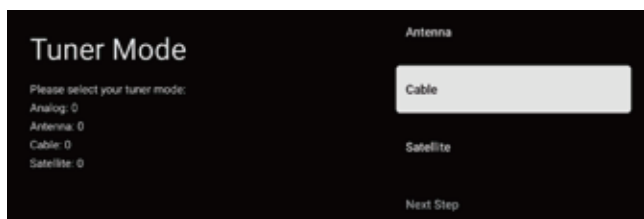

 
To select the Tuner mode for searching, press to select and press OK to confirm.

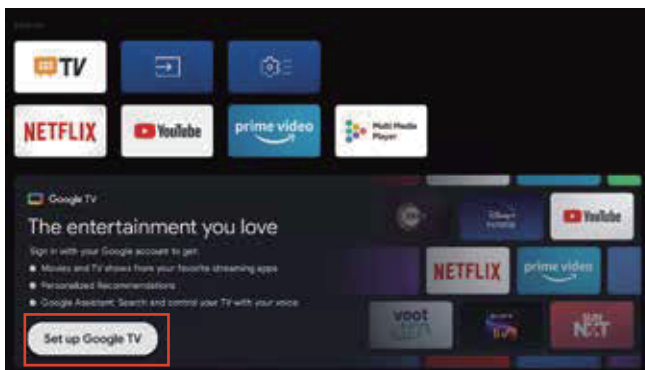


 
- Once in the user interface, you can switch from basic TV to Google TV settings.

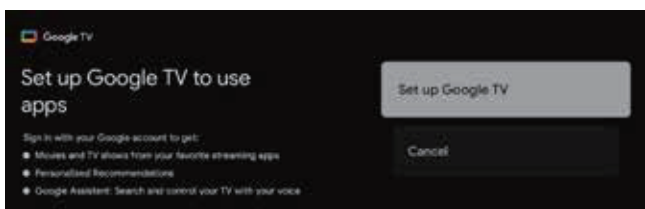


 
Press ▲/▼ to select the "Set up Google TV" of your device and press OK to complete the setup.

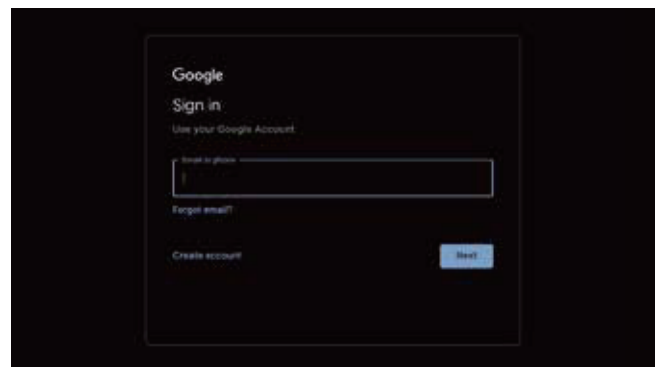

Use your Google Account Sign in

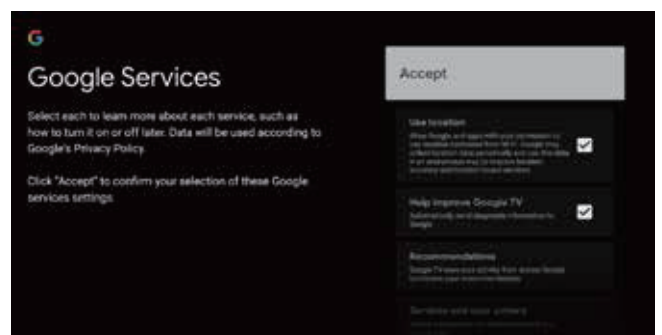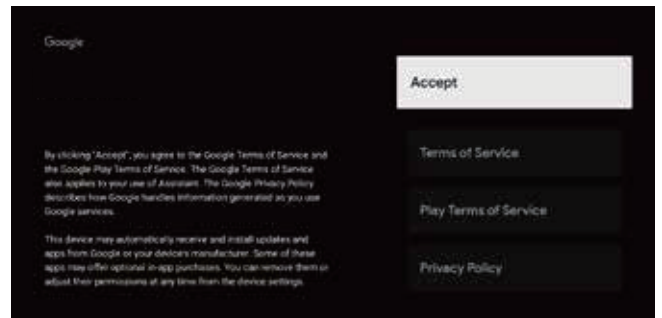  


  By accepting the Google Terms of Service to improve the product experience, select "Accept" to accept this condition.

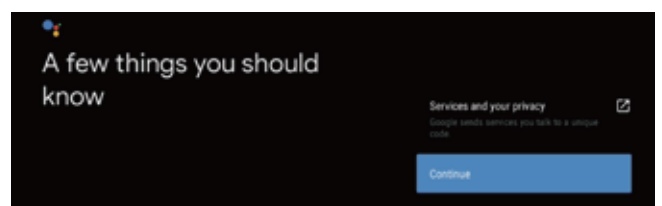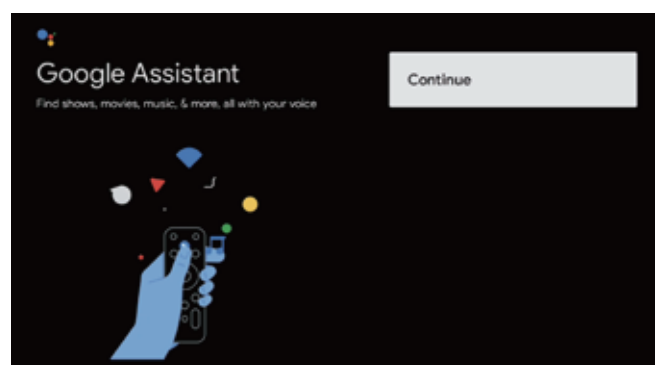

Press to select and press OK to continue.

 
OPERATING INSTRUCTIONS

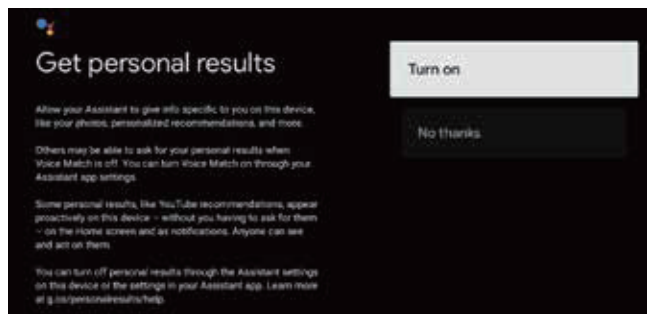


Press ▲/▼ to select the Get personal results and press OK to setup.

NOTE:

 The content of this page will vary depending on the country selected by the Boot Wizard.

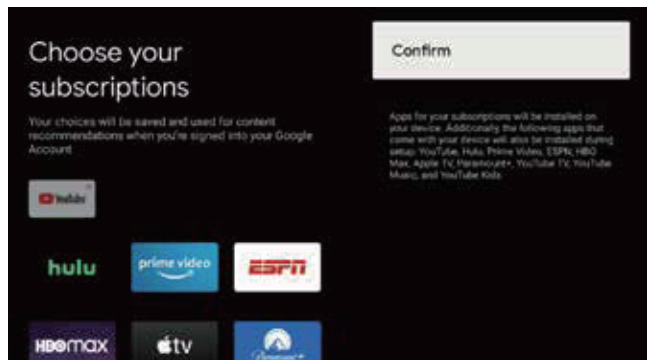

 
Press ▲/▼ to select the Choose your subscriptions and press OK .

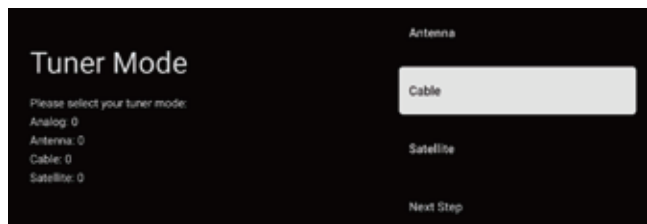


To select the Tuner mode for searching, press to select and press OK to confirm

NOTE:

 The content of this page will vary depending on the model.

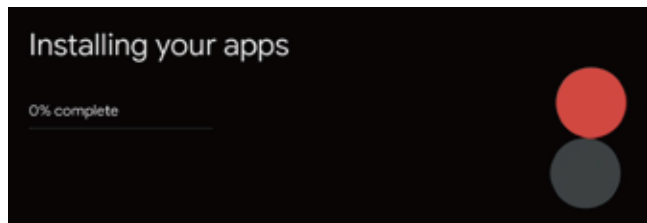


 Press the next step Installing your apps.

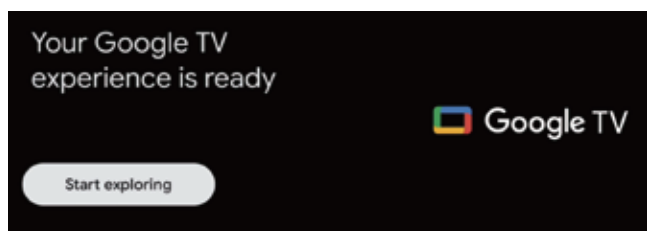

Your Google TV experience is ready and press OK to Start exploring.

 HOME SCREEN


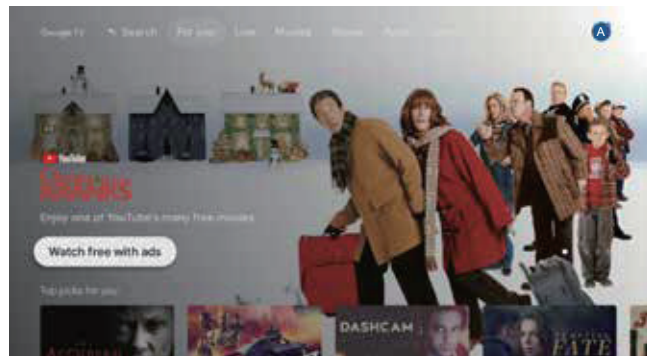


After completing the wizard Settings, you can watch TV and go to the home screen.


NAVIGATING THE ON-SCREEN MENU

There are two ways to enter. First, in live TV, press the menu button to display TV options, press ▲/▼/◀/▶ to select the settings menu and press OK to confirm.

  Second, in the HOME interface, press the key ▶ to select the icon of the circular settings menu, press OK to confirm.

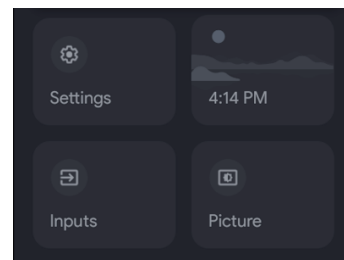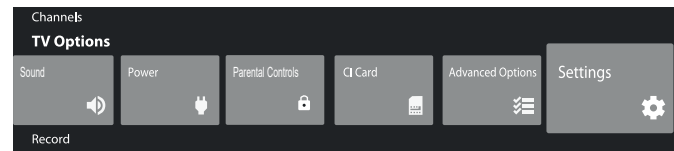

 Press ▲/▼ button to select what you want set. Press OK to enter setting.

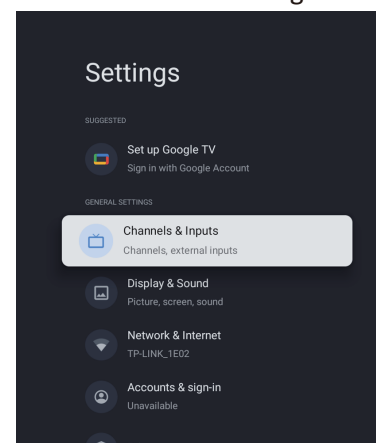


Press BACK to return to the previous menu. If the main menu is displayed, pressing BACK will close the onscreen menu.

OPERATING INSTRUCTIONS


Network

 1. Press ▲/▼ button to select what you want set.
2. Press OK button to confirm.
3. After finishing your adjustment, Press OK button to save and return to the pervious menu.

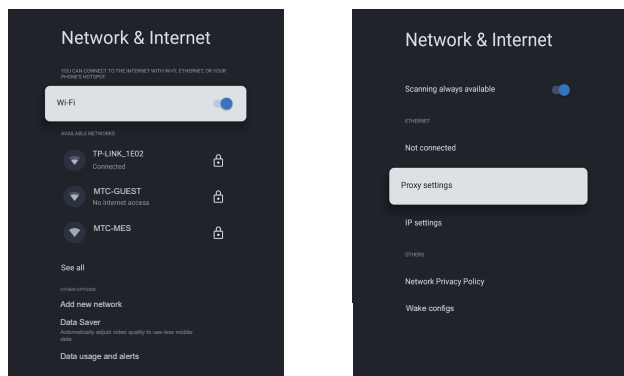


Channel & Inputs

 Press ▲/▼ button to select “Channel & Inputs” set.

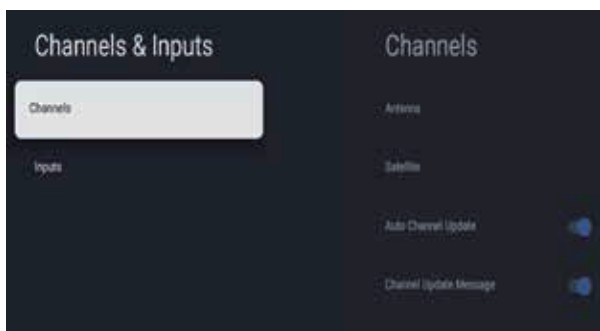

CHANNEL

 In the HOME interface, select the "Settngs" icon, press OK to open the input source list, select the “Antenna”.

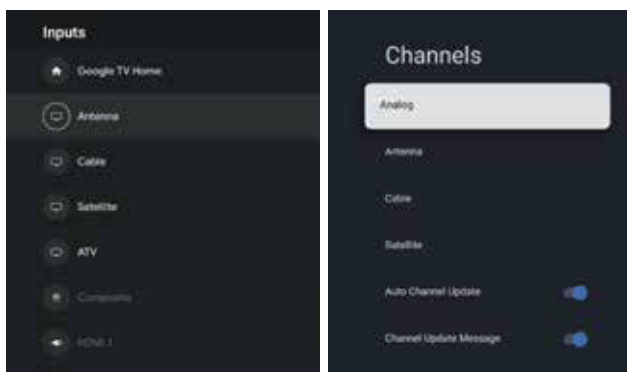

Analog/Antenna/Cable/Satellite - Press ▲/▼ button to select the option then press OK button to enter the sub-menu.

Auto Channel Update - Press OK button to choose **ON/OFF**. When selecting ON, the system will automatically scan and update channels after 5 minutes of standby.

 
Channel Update Message - Press OK button to choose **ON/OFF**. When selecting ON, the system will show you the update message.

NOTE:

The content of this page will vary depending on the model.

Channels (Analog)

1. Menu->Settings->Channel & Inputs->Channels->Analog.

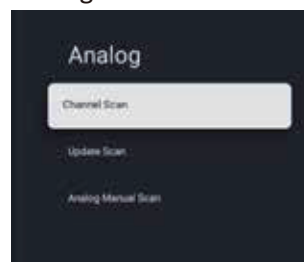


2. Channel Scan directly enters the automatic search platform interface.

Update Scan: Re-automatically search for frequency points outside the station.

Analog Manual Scan: Manual ATV search station. After input the frequency point, you can select up or down search station.

Channels (Antenna)

 
1. Menu->Settings->Channel & Inputs->Channels->Antenna.

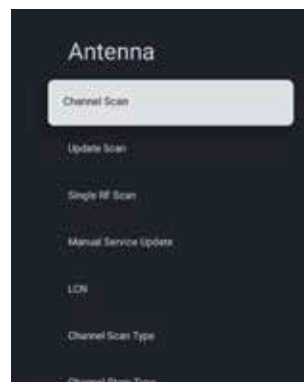

2. Channel Scan directly enters the DTV automatic search platform interface of Antenna.

Update Scan: Re-automatically search for frequency points outside the station.

 
Single RF Scan: DTV manual search, left and right after selecting RF Channel, directly OK search.

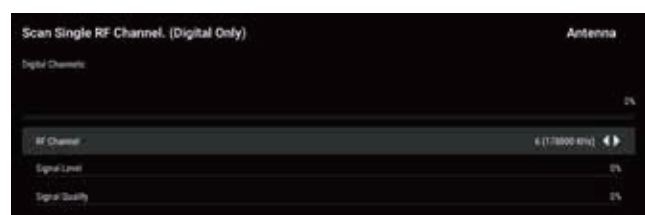

OPERATING INSTRUCTIONS

Channels (Cable)

 1. Menu->Settings->Channel & Inputs->Channels->Cable.

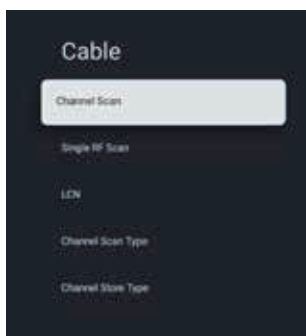

2. Enter Channel Scan, Scan Mode is Advance, Others have Advance, Quick and Full Scan modes.

Single RF Scan: manual search station.

Channels (Satellite)

 
1. Menu->Settings->Channel & Inputs->Channels->Satellite.

NOTE:

Some of the functions might be unavailable in certain sources.
And for some models, certain options are not available.



2. Enter Menu->Settings->Channel & Inputs->Channels->Satellite->Satellite Re-scan.

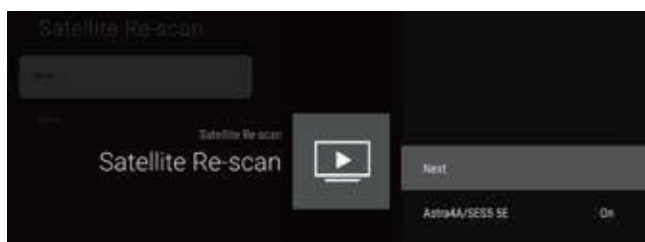


3. Press OK to enter Satellite parameter Settings, which include LNB POWER, LNB Frequency, DiSEqC Set, 22K and other parameters. Then return to Satellite re-scan and right click to enter the search menu.

Satellite Add: Add a star broadcast signal.

Satellite Manual Tuning: manually search for a certain TP which can be added by Satellite Add if needed.

Inputs

 Menu->Settings->Channel & Inputs->Inputs

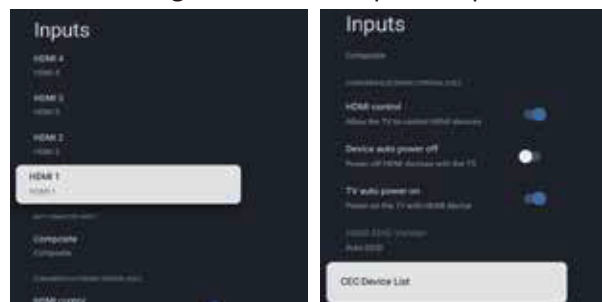

Inputs - Press ▲/▼ button to select the option then press OK button to enter the sub-menu.

HDMI control - Press ▲/▼ button to select the option then press OK button to choose ON/OFF.

Device auto power off - Press ▲/▼ button to select the option then press OK button to choose ON/OFF.

TV auto power on - Press ▲/▼ button to select the option then press OK button to choose ON/OFF.

 
HDMI EDID Version - show EDID version.

CEC Device List - Press ▲/▼ button to select the option then press OK button to enter the sub-menu.



Display & Sound

Menu->Settings->Display & Sound.

In this menu, you can set picture, sound and audio output of TV.

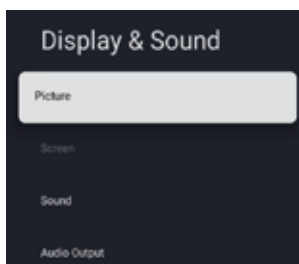

Picture

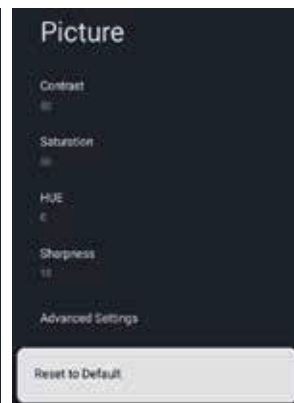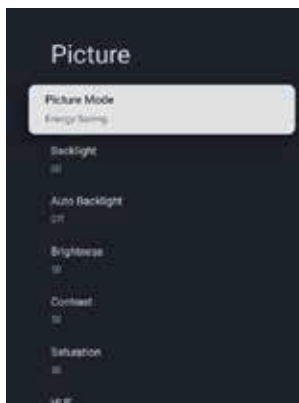  

OPERATING INSTRUCTIONS

 
Picture Mode - Press ▲/▼ button to select the option button to enter the sub-menu.(Optional: user, Standard, Vivid, Sport, Movie, Game, Energy saving).

Backlight/Brightness/Contrast/Saturation/HUE/Sharpness - Press ▲/▼ button to select the option. Press ◀ to decrease the parameter. Press ▶ to increase the parameter.

Advanced Settings - Press ▲/▼ button to select the option then press OK button to enter the sub-menu.

Reset to Default - Reset all settings to the factory defaults.

Sound

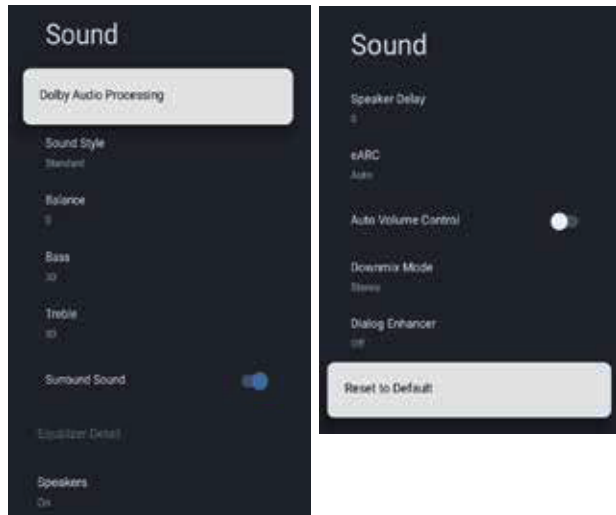

Dolby Audio processing - Press ▲/▼ button to select the option then press OK button to choose ON/OFF.

Sound style - Press ▲/▼ button to select the option then press OK button to enter the sub-menu.(Optional: user, Standard, Night, Sports, Movie, Music, News).

Balance/Bass/Treble - Press ▲/▼ button to select the option. Press ◀ to decrease the parameter. Press ▶ to increase the parameter.

dbx-tv - Press ▲/▼ button to select the option then press OK button to enter the sub-menu.

Sound Surround - Press ▲/▼ button to select the option then press OK button to choose ON/OFF.

Equalizer Detail - Press ▲/▼ button to select the option then press OK button to enter the sub-menu.

Speakers - Press ▲/▼ button to select the option then press OK button to choose ON/OFF.

Speaker Delay - Press ▲/▼ button to select the option. Press ◀ to decrease the parameter. Press ▶ to increase the parameter.

eARC - Press ▲/▼ button to select the option, then press OK button to choose Auto/OFF.

 
Auto Volume Control - Press ▲/▼ button to select the option then press OK button to choose ON/OFF.

Downmix Mode - Press ▲/▼ button to select the option then press OK button to enter the sub-menu.(Optional: Stereo, Surround).

Dialogue Enhancer - Press ▲/▼ button to select the option then press OK button to choose Off/Low/Medium/High.

Reset to Default - Reset all settings to the factory defaults.

Audio Output

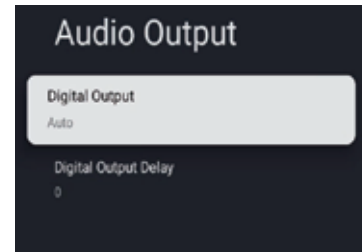

In this menu, you can read the information and settings of Audio Output.

1. Press ▲/▼ button to select what you want set.

2. Press OK button to confirm.

3. After finishing your adjustment, Press BACK button return to the previous menu.

Digital Output - Press ▲/▼ button to select the option then press OK button to enter the sub-menu.(Optional: Auto, Bypass, PCM, Dolby Audio-Dolby Digital Plus and Dolby Audio-Dolby Digital).

Digital Output Delay - Press ▲/▼ button to select the option. Press to decrease the parameter. Press to increase the parameter.

Accounts & Sign in

 
View or add a Google account

If you are already logged in to your Google account, select “Accounts & Sign In” in the settings.



And follow the prompts to complete the relevant settings.

Privacy

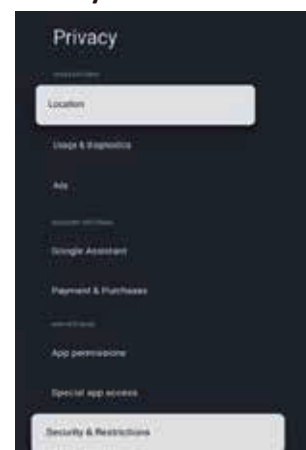


OPERATING INSTRUCTIONS

In this menu, you can read the information and settings of Privacy.

1. Press ▲/▼ button to select what you want set.
2. Press OK button to confirm.
3. After finishing your adjustment, Press BACK button return to the previous menu.

 
Apps

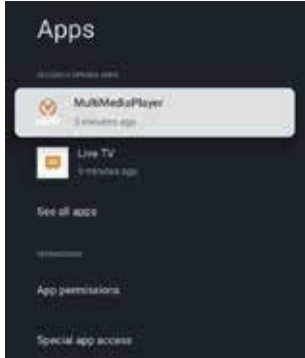

In this menu, you can set the APP permissions, and read the app lists.


1. Press ▲/▼ button to select what you want set.
2. Press OK button to confirm.
3. After finishing your adjustment, press BACK button to return to the previous menu.

 System

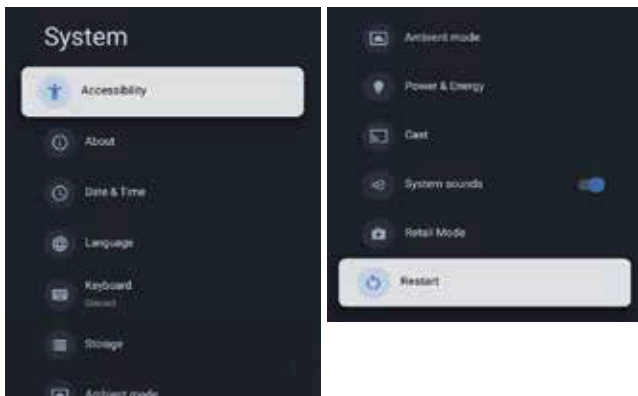

In this menu, you can read the information and settings of TV.

 Accessibility

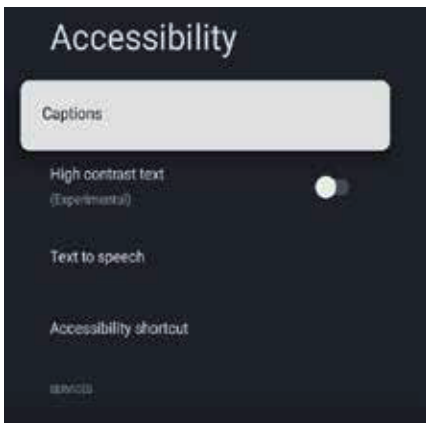


Captions - Press ▲/▼ button to select the option then press OK button to enter the sub-menu.

High contrast test - Press ▲/▼ button to select the option then press OK button to choose ON/OFF.

Text to speech - Press ▲/▼ button to select the option then press OK button to enter the sub-menu.

Accessibility shortcut - Press ▲/▼ button to select the option then press OK button to enter the sub-menu.

 About

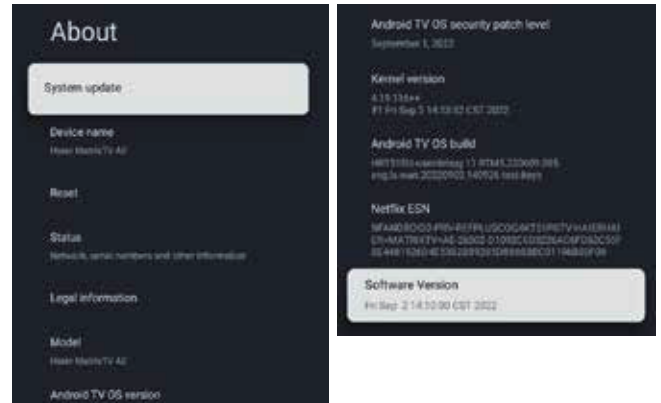

In this menu, you can System update, Factory reset and read the information of TV.

Date & Time



Automatic date & time - Press ▲/▼ button to select the option then press OK button to enter the sub-menu.
(Optional: Use network-provided time, Off)

NOTE

- Manually adjusting date time settings will automatically change the Automatic date & time to OFF.

Set date - Press ▲/▼ button to select the option then press OK button to enter the sub-menu.


Set time - Press ▲/▼ button to select the option then press OK button to enter the sub-menu.

Set time zone - Press ▲/▼ button to select the option then press OK button to enter the sub-menu.

Use 24-hour format - Press ▲/▼ button to select the option then press OK button to choose ON/OFF.


OPERATING INSTRUCTIONS

 Language

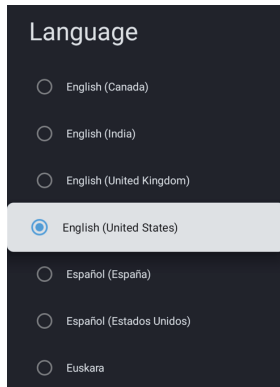

Language - Press ▲/▼ button to select the option then press OK button to enter the select language.

 Keyboard

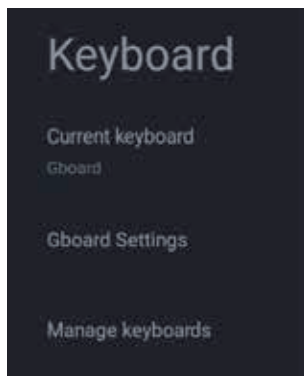


Current keyboard - Press ▲/▼ button to select the option then press OK button to enter the sub-menu.

Gboard Settings - Press ▲/▼ button to select the option then press OK button to enter the sub-menu.

Manage keyboards - Press ▲/▼ button to select the option then press OK button to enter the sub-menu.

 
Storage

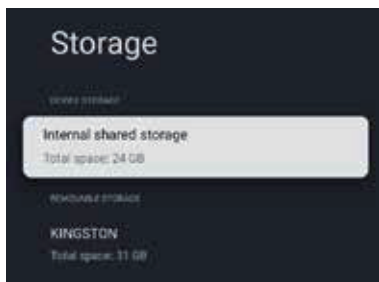

Internal shared storage - Press ▲/▼ button to select the option then press OK button to enter the sub-menu.

KINGSTON - Press ▲/▼ button to select the option then press OK button to enter the sub-menu.
(Note: Show extrnal devices if available)

 
Ambient mode

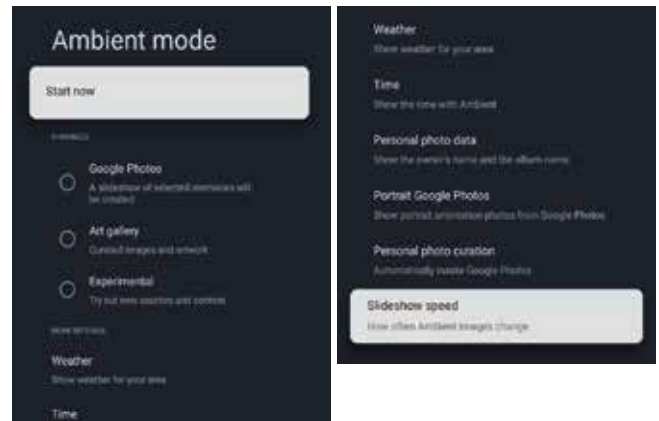

In this menu, you can read the information and settings of Ambient mode.

1. Press ▲/▼ button to select what you want set.
2. Press OK button to confirm.
3. After finishing your adjustment, Press BACK button to return to the previous menu.

 
Power & Energy

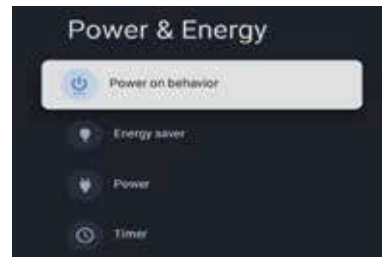

In this menu, you can set Power on behavior, Energy saver, Power, Timer.


1. Press ▲/▼ button to select what you want set.
2. Press OK button to confirm.
3. After finishing your adjustment, Press BACK button to return to the previous menu.

 Cast

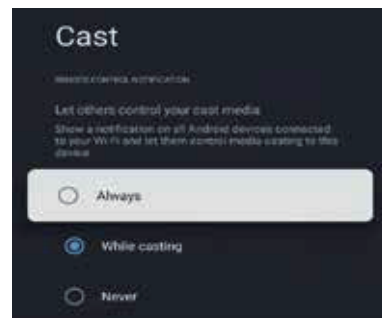

Press ▲/▼ button to select the option then press OK button to choose Always/While casting/Never.

 
System sounds



Press ▲/▼ button to select the option then press OK button to choose ON/OFF.

OPERATING INSTRUCTIONS

 Retail Mode

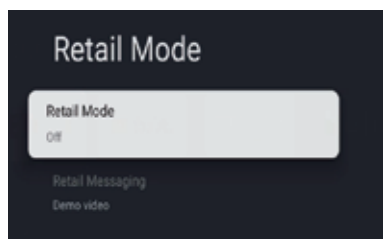

Retail mode - Press ▲/▼ button to select the option then press OK button to choose ON/OFF.

 
Retail messaging - Press ▲/▼ button to select the option then press OK button to enter the sub-menu.

(Note: Demo video, e-POP left, e-POP Right)




(This option is valid when the Retail mode is selected as On).

Factory reset

Press OK button to enter the sub-menu. Reset-Erase everything.

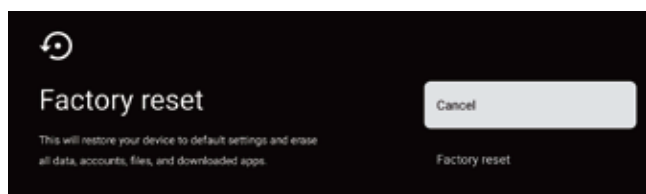

Remotes & Accessories

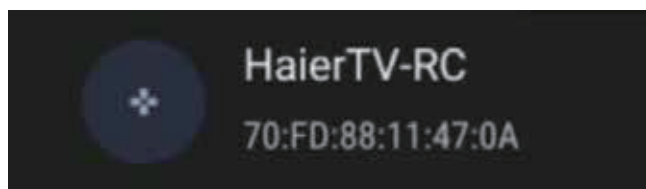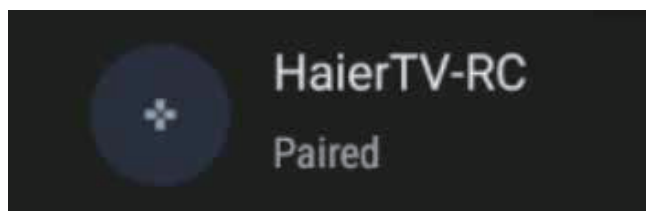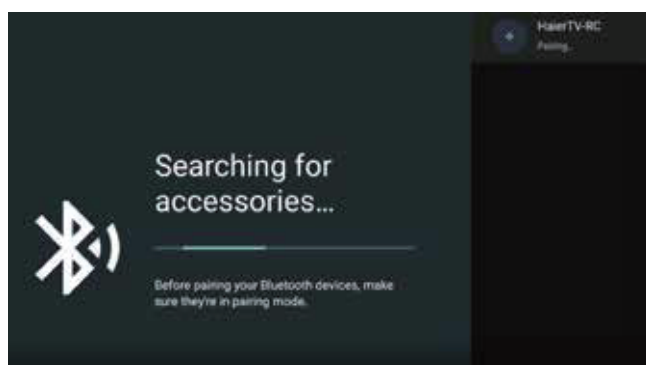   

In this menu, you can pair Bluetooth devices.

1. Press the "←" and "⏏" buttons at the bottom of the remote control for 5 seconds.
2. When the LED starts to flash, release it. The remote

 
 
controller will send the pairing signal to the TV and display the information of the remote control on the right side of the screen.

3. Press the OK button to display the pairing. If the paired is displayed, the connection is successful.


4. If the couldn't pair appears, the connection fails. Wait 30 seconds and then press the "←" and "⏏" buttons at the bottom of the remote control for 5 seconds to repeat the previous steps.

5. Press "←" button return to the previous menu.

USE OF MULTI MEDIA PLAYER

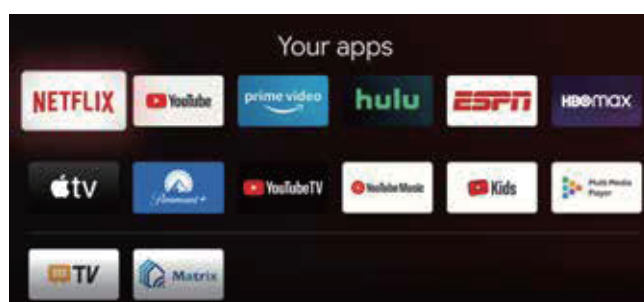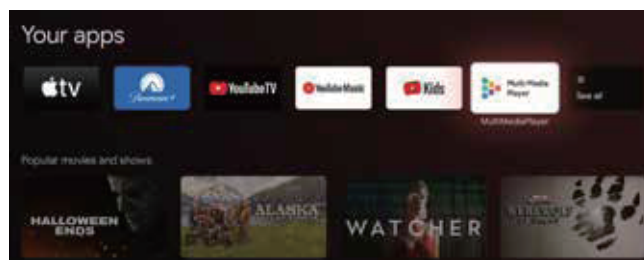

 1. In the HOME interface, press ▲/▼◀/▶ to select the Multi Media Player application.


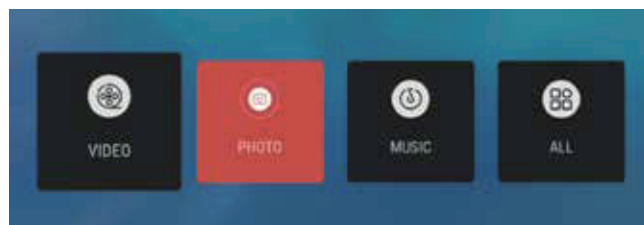


2. Select OK key to enter Multi Media Player and display Video, Photo, Audio. after inserting the usb flash drive, you can view the corresponding files in the usb flash drive (FAT32 Format).

NOTE

The menu may be different depending on when you purchased the TV.

  OPERATING INSTRUCTIONS

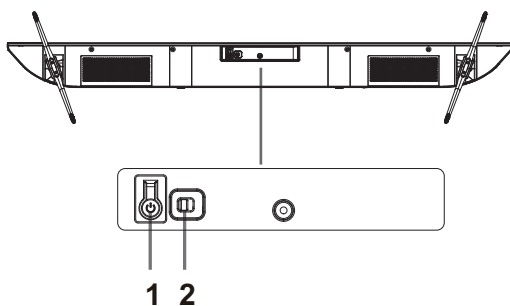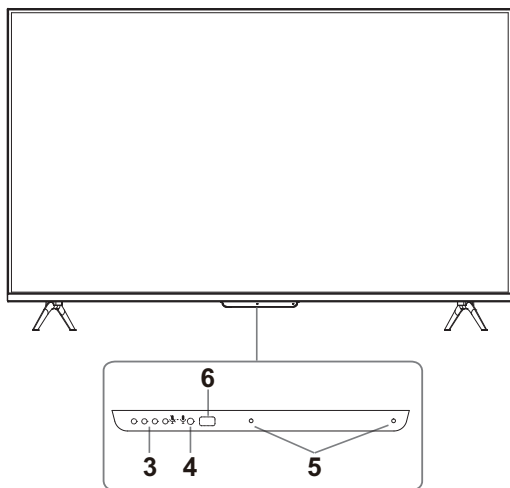


1. Power On / Power Off
2. Voice On / Voice Off
3. Enable Far Field Assistant
4. Disable Far Field Assistant

Turn it right to set it On , the indicator light will lighting and then go off, the voice function has been initiated. you can say "Ok Google" to use voice function, and the indicator will lighting when the TV receives the voice, then directly say your request.

Turn it left to set it Off to exit voice function, indicator light will go to yellow.

3. Far Field Assistant light
4. Power LED
5. Voice signal receiver
6. Remote control signal receiver

 1. Move the switch toward the center of the screen.
(Open by default)

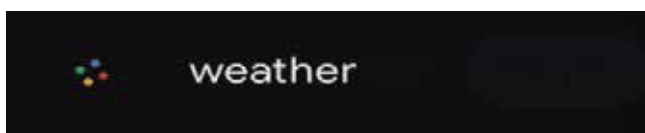

2. Operate the remote control and click the microphone icon. Select settings Google assistant, and select sign in or use assistant without sign in—Allow
3. Continue to click the microphone icon to conduct voice interaction through the wake-up word "Ok Google".
4. Click the microphone icon again. When the prompt "Google assistant is not ready!" is prompted, the system starts the voice module. After the prompt disappears, it can be used. For example, when we say "Ok Google, weather", Voice function indicator will light up and feed back the weather conditions.

NOTE

- This feature requires network support. When the network fails or is restricted, try manually setting the current network date and time.

5. Supported Far Field Assistant locales
en-US/es-US, fr-FR, es-ES, ja-JP, ko-KR, de-DE, it-IT, en-GB, en-AU, en-IN/hi-IN, en-CA/fr-CA, es-MX, pt-BR, id-ID, sv-SE, vi-VN

TROUBLESHOOTING

Please make these simple checks before calling service. These tips may save you time and money since charges for receiver installation and adjustments of customer controls are not covered under your warranty.

Symptoms	Items to Check and Actions to Follow
"Ghost" or double image	• This may be caused by obstruction to the antenna due to high rise buildings or hills. Using a highly directional antenna may improve the picture.
No power	• Check if the TV's AC power cord is plugged into the outlet. • Unplug the TV, wait for 60 seconds. Then reinsert plug into the outlet and turn on the TV again.
No picture	• Check antenna connections at the rear of the TV to see if it is properly connected to the TV. • Possible broadcast station trouble. Try another channel. • Adjust the contrast and brightness settings. • Check the Closed Captions control. Some TEXT modes could block the screen.
Good picture but no sound	• Increase the volume level by pressing the VOL+ button on the remote control or on the TV side control panel. • Press the MUTE button on the remote control to ensure mute is off.
Good sound but poor color	• Adjust the contrast, color and brightness settings.
Poor picture	• Poor picture quality may occur when an activated S-VHS camera or camcorder is connected to your TV and other peripherals at the same time. Switch off one of the peripherals.
Snowy picture and noise	• Check the antenna connection.
Horizontal dotted line	• This may be caused by electrical interference (e.g. hair dryer, nearby neon lights, etc.) Turn off the equipment.
Television not responding to remote control	• Check whether the batteries are working. Replace if necessary. • Clean the remote control sensor lens on the TV. • You can still use the buttons on the side of your TV.
Pixels (dots) that are always dark or always lit	• Your TV is precision-manufactured using an extremely high level of technology. However, sometimes pixels may not display correctly. These types of occurrences are inherent to this type of product and do not constitute a defective product.

NOTE

• This product uses a panel consisting of sub pixels which require sophisticated technology to produce. However, there may be a few bright or dark pixels on the screen. These pixels will have no impact on the performance of the product.



Dolby, Dolby Vision, Dolby Atmos, and the double-D symbol are registered trademarks of Dolby Laboratories Licensing Corporation. Manufactured under license from Dolby Laboratories. Confidential unpublished works. Copyright © 2012–2022 Dolby Laboratories. All rights reserved.

PRODUCT SPECIFICATION

Main parameter

Viewing Picture Size (Diagonal)	43 inch	50 inch	55 inch	65 inch
Resolution	3840x2160			
Aspect Ratio	16 : 9			
TV System	PAL-B/G, SECAM-B/G, DVB-T , DVB-C, DVB-T2, <u>DVB-S/S2 (50/55/65 model only)</u>			
Video Signal System	PAL/NTSC/SECAM			
Receiving Channel	DVB-T2:1000, DVB-C:1000,ATV:99, <u>DVB-S2:1000 (50/55/65 model only)</u>			
Input Power Voltage	100-240V~ 50/60Hz			
Power consumption	95W	145W	165W	195W
Audio Output Power (THD ≤7%)	2 x 10W		2 x 13.5W	
Signal input/output	High-Definition Multimedia Interface(HDMI) x 4 Composite Video Input x 1 Audio Input x 1 LAN Input x 1 USB x 2 Optical output x 1 Headphone output x 1 RF x 1 CI x 1 (50/55/65 model only) Satellite Input x 1 (50/55/65 model only)			
Horizontal definition(TV line)	Composite Videoinput ≥350			

Note: Regarding CI and Satellite input, this feature is not available for some models, subject to the actual machine.

* The part specifications of this TV set provided here are for reference only.
 Differences may occur as product technology is updated.
 Design and specifications are subject to change without notice.

Haier