 


USER MANUAL
Google Series
H85S800UX

Haier

Inspired Living

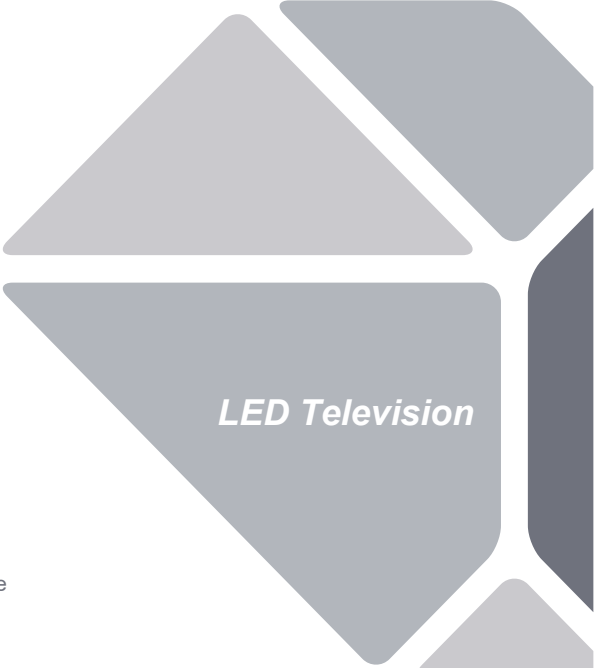

LED Television

Illustration in this manual are provided for reference only and may differ from actual product appearance. Product design and specification may get changed without notice

IMPORTANT SAFETY INSTRUCTIONS

 
- 1) Read these instructions.
- 2) Keep these instructions.
- 3) Heed all warnings.
- 4) Follow all instructions.
- 5) Do not use this product near water.
- 6) Clean only with dry cloth.
- 7) Do not block any ventilation openings, install in accordance with the instructions.
- 8) Do not install near any heat sources such as radiations, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 9) Do not defeat the safety purpose of the polarized plug. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- 10) Protected the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- 11) Only use attachments/accessories specified by the manufacturer.
- 12) Unplug this apparatus during lighting storms or when unused for long periods of time.
- 13) Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- 14) Mains plug is used as the disconnect device, the disconnect device shall remain readily operable.
- 15) The ventilation should not be impeded by covering the ventilation openings with items, such as newspapers, table-cloth, curtains, etc.
- 16) No naked flame sources, such as lighted candles, should be placed on the apparatus.
- 17) Attention should be drawn to the environmental aspects of battery disposal.
- 18) The use of apparatus in moderate climate.
- 19) The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the apparatus.
- 20) Warning: To avoid any injury caused by lean of the product, please always ensure the whole product was placed within the table surface in horizontal.



This symbol indicates AC voltage.



This symbol indicates DC voltage.

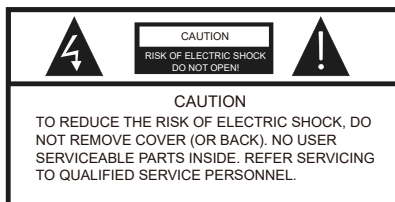

The symbol indicates that dangerous voltages constituting a risk of electric shock are present within this unit.



The symbol indicates that there are important operating and maintenance instructions provided in the user manual given with this unit.

WARNING:

To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.

WARNING:

The batteries shall not be exposed to excessive heat such as radiators, fire or the like.



This marking indicates that this product should not be disposed with other household wastes. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.



EU Battery Regulation

This symbol on the battery(ies) or on the packaging indicates that the battery(ies) provided with this product shall not be treated as household waste. Instead, please separate battery(ies) from other types of waste and recycle it(them) through your local recycling system to protect environment and health.

The chemical symbol for lead (Pb) is added under this symbol if the battery(ies) contains more than 0.004 % lead. For more detailed information about recycling of this battery(ies), please contact your local authority or the shop where you purchased the product or battery(ies).

IMPORTANT SAFETY INSTRUCTIONS



This symbol indicates that this product incorporates double insulation between hazardous mains voltage and user accessible parts. When servicing use only identical replacement parts.

Stability Hazard

A display may fall, causing serious personal injury or death. Many injuries, particularly to children, can be avoided by taking simple precautions such as:

- ALWAYS use cabinets or stands or mounting methods recommended by the manufacturer of the display.
- ALWAYS use furniture that can safely support the display.
- ALWAYS ensure the display is not overhanging the edge of the supporting furniture.
- ALWAYS educate children about the dangers of climbing on furniture to reach the display or its controls.
- ALWAYS route cords and cables connected to your display so they cannot be tripped over, pulled or grabbed.
- NEVER place a television set in an unstable location.
- NEVER place the display on tall furniture (for example, cupboards or bookcases) without anchoring both the furniture and the display to a suitable support.
- NEVER place the display on cloth or other materials that may be located between the display and supporting furniture.
- NEVER place items that might tempt children to climb, such as toys and remote controls, on the top of the display or furniture on which the display is placed.

CAUTION

Risk of explosion if battery is replaced by an incorrect type.

Warning for Apparatus containing COIN / BUTTON CELL BATTERIES (Below instruction only used for the apparatus containing a user-replaceable coin/button cell battery)

WARNING:

Do not ingest the battery, Chemical Burn Hazard (The remote control supplied with) this product contains a coin/button cell battery. If the coin/button cell battery is swallowed, it can cause severe internal burns in just 2 hours and can lead to death. Keep new and used batteries away from children. If the battery compartment does not close securely, stop using the product and keep it away from children. If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.

Precautions For Using Battery

Improper using of the battery will cause leakage. So please do as the following methods and use carefully.

- Please note the batteries' polarity, to avoid short circuit.
- When the battery's voltage is insufficient which affect the use range, you should replace new battery.
- Remove the batteries from the remote control unit if you do not intend to use it for a longtime.
- Do not use different types of batteries (for example, Manganese and Alkaline batteries) together.
- Do not put the battery into fire, and charge or decompose the battery.
- Please dispose batteries abide by relevant environmental protection regulation.

Warning

Don't disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a Battery.

Don't leaving a battery in an extremely high temperature surrounding environment.

To avoid battery subjected to extremely low air pressure. The batteries battery pack or batteries installed) shall not be exposed to excessive heat such as sunshine, fire or the like.

 
License




Dolby, Dolby Vision, Dolby Atmos, and the double-D symbol are registered trademarks of Dolby Laboratories Licensing Corporation. Manufactured under license from Dolby Laboratories. Confidential unpublished works. Copyright ©2012–2024 Dolby Laboratories. All rights reserved.




The terms HDMI, HDMI High-Definition Multimedia Interface, HDMI Trade dress and the HDMI Logos are trademarks or registered trademarks of HDMI Licensing Administrator, Inc.

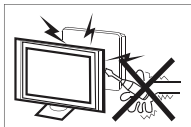

 
High voltages are used in the operation of this television receiver. Do not remove the cabinet back from your set. Refer servicing to qualified service personnel.

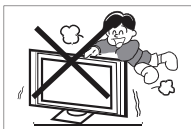

 Never stand on, lean on, or suddenly push the television or its stand. You should pay special attention to children. Serious injury may result if it falls.

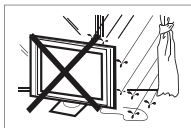

 
To prevent fire or electrical shock hazard, do not expose the television receiver to rain or moisture.

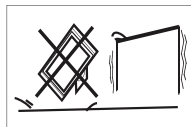

Do not place your television on an unstable cart, stand, shelf or table. Serious injury to an individual, and damage to the television, may result if it falls.



 
Do not drop or push objects into the television cabinet slots or openings. Never spill any kind of liquid on the television receiver.

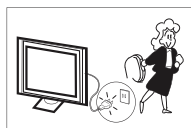

When the television receiver is not used for an extended period of time, it is advisable to disconnect the AC power cord from the AC outlet.



 
Do not block the ventilation holes in the back cover. Adequate ventilation is essential to prevent failure of electrical components.

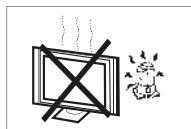

Avoid exposing the television receiver to direct sunlight and other sources of heat. Do not stand the television receiver directly on other products which give off heat, e.g. video cassette players and audio amplifiers. Do not place naked flame sources, such as lighted candles on the television.



 Do not trap the power supply cord under the television receiver.

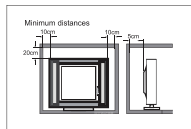

If the television is to be built into a compartment or similar enclosure, the minimum distances must be maintained. Heat build-up can reduce the service life of your television, and can also be dangerous.



If you are going to clean the product, unplug the TV, use soft fabric, no water, never chemicals.

Note: use the apparatus in moderate climates.

Note: This product uses a panel consisting of sub pixels which require sophisticated technology to produce. However, there may be a few bright or dark pixels on the screen. These pixels will have no impact on the performance of the product.

PREPARATION

MAIN FEATURES

- 1) Google TV.
- 2) High Luminance.
- 3) Wide Viewing Angle.
- 4) HDMI Interface.
- 5) Multi Media Player (USB).



ACCESSORIES

- 1) Remote Control ----- 1 pcs
- 2) User's Manual ----- 1 pcs
- 3) Base Screws ----- 6 pcs
- 4) Base Group ----- 2 pcs
- 5) Warranty Card ----- 1 pcs

GENERAL SPECIFICATIONS

Model	H85S800UX		
Size (Diagonal)	215cm		
Resolution	3840x2160		
Aspect Ratio	16:9		
TV System	ATV (PAL, SECAM)/DTV (DVB-T/C/T2)		
Video Signal System	PAL, SECAM		
Input Power Voltage	100-240V~50/60Hz		
Power Consumption	360W		
Audio Output	2 x 13.5W		
Signal Input / Output	HDMI Ports	x4	Headphone O/P x1
	USB Ports	x2	RF x1
	LAN	x1	
	AV IN	x1	
	Optical O/P	x1	
Wi-Fi: IEEE802.11 a/b/g/n/ac 2.4GHz/5GHz			

  Screen care

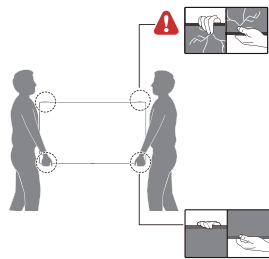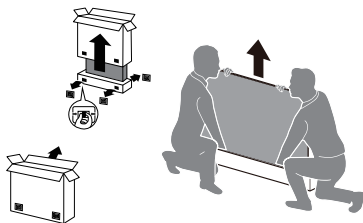


PREPARATION

IMPORTANT: Do not apply pressure to the screen display area which may compromise the integrity of the display. The manufacturer's warranty does not cover user abuse or improper installations.

ATTACHING THE STAND

IMPORTANT: The stand of the TV must be assembled prior to usage.

 1. Place the TV unit face down on a soft and flat surface (blanket, foam, cloth, etc.) to prevent any damage to the TV.
2. Fix the stand to the bottom of the TV with the 6 screws.

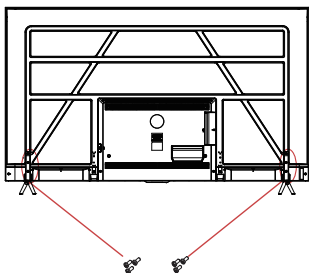


PREPARING YOUR OLED TV FOR WALL MOUNTING

We suggest that you keep your TV at least 2.36 inches (60 mm) from the wall to prevent cable interference. Before mounting your TV on the wall, you need to remove the standand.

For your safety, please use only with a UL listed wall mount bracket with minimum weight of the TV without stand.

To attach a wall mount bracket to your TV:

 
1. Remove the screws holding your TV to the stand.
2. Remove the stand from your TV.
3. Secure the wal mount bracket to the back of your TV using four screws. Follow the instructions of the user manual that came with the wall mount bracket to install.

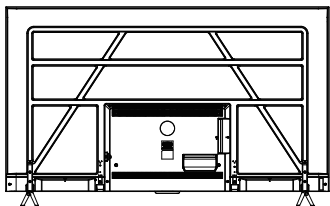

4. Fix the wall mount screws (M8x20mm/4pcs) into the rear side of the LED TV, using the torque of 8kgf,cm.


TURNING ON THE TV

 1. Install the stand and place the TV on a solid surface.

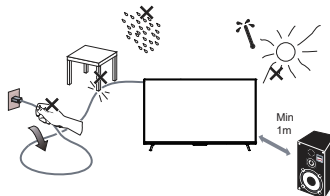

NOTE

 - Ensure that the TV is placed in a position to allow free flow of air. Do not cover the ventilation openings on the back cover.
 - To prevent any unsafe situations, no naked flame sources, such as lighted candles, should be placed on or in the vicinity.
 - Avoid heat, direct sunlight and exposure to rain or water. The equipment shall not be exposed to dripping or splashing.
2. Connect the antenna cable or cable TV cable to the **ANT** in aerial socket on the back of the TV set.
 3. Power:
Plug the cord into a working power outlet.

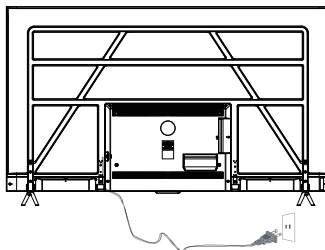

4. Turn the TV on:
Press **⏻** on the remote control or **POWER** button on the side control pannel of the TV.

 


NOTE

The wall mount bracket are not included.


PERIPHERAL CONTROLS

BUTTON CONTROL

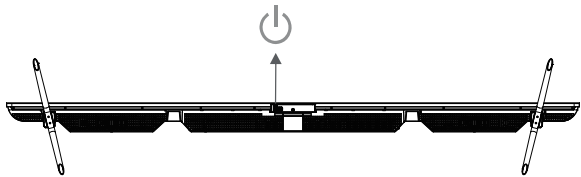

In the standby mode, press the button to turn on the TV.
In the boot state, long press the button to shut down.

 HANDS FREE VOICE CONTROL

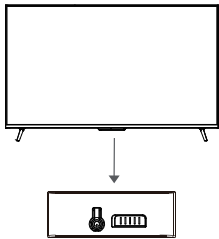




Switch to open or close the Hands Free Voice Control.

Note : This feature requires network connection.
Far-Field voice commands are available in these languages.
en-US/es-US, fr-FR, es-ES, ja-JP, ko-KR, de-DE, it-IT,
en-GB, en-AU, en-IN/hi-IN, en-CA/fr-CA, es-MX, pt-BR,
id-ID, sv-SE, vi-VN

Switch turn on  or off  the Micphone.

HOW TO USE HANDS FREE VOICE CONTROL :

   
1. Activate the hands free voice control with the toggle switch.
2. Select "Set up Google TV" on home screen to open the Google assistant settings, and select sign in.

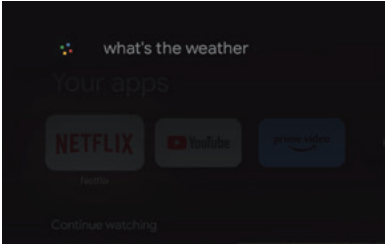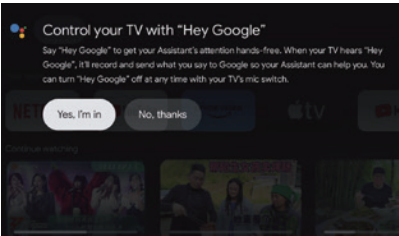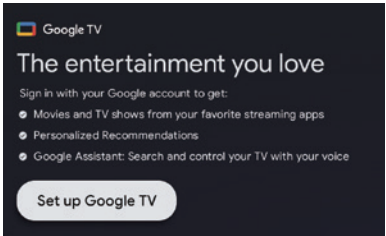

3. When the prompt "Control your TV with Hey Google! " is prompted, select "Yes I'm in", it can be used. For example, when we say "Hey Google,What's the weather", hands free voice indicator will light up and feed back the weather conditions.

TERMINAL CONNECTION

 You can use the input terminals on TV set rear as follows.

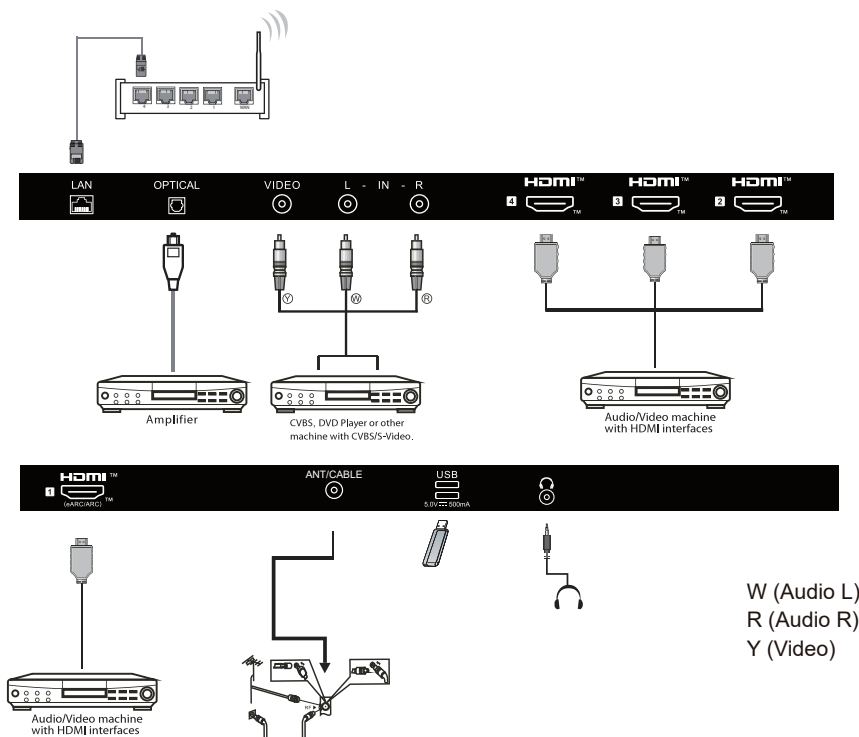


Note :

1. Using a non-certified HDMI cable may result a blank screen or a connection error.
2. Some HDMI cables and devices may not be compatible with the TV due to different HDMI specifications.
3. Do not connect Headphone out to Home Theatre Line in / Aux in / Audio In.
4. We recommend to use a USB drive with 1GB free space and a disk speed faster than 5.0MB/sec
5. USB port supports a voltage of 5V & maximum current consumption of 500mA.
6. Depending on the file, playback may not be possible, even when using the supported formats.
7. When connecting an audio system which is not compatible with ARC, you need to connect an optical audio cable to "OPTICAL" output.


REMOTE CONTROL

Note:

 - 1). The picture is only for reference.
- 2). The image, buttons and functions of remote control may vary depending on the region or model.

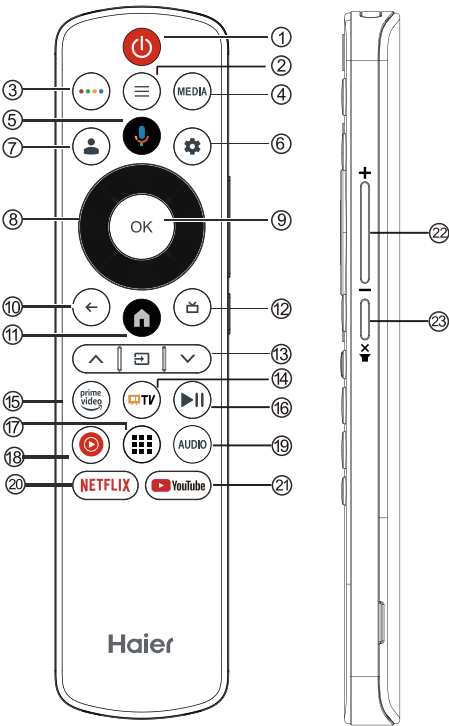

 Remove the cover of the battery compartment.
Insert the 2 supplied batteries (Type AAA 1.5V).

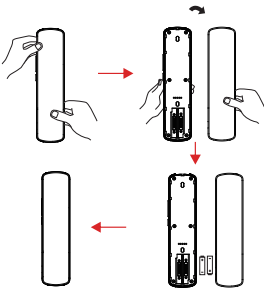


#	Item	Descriptions
1	Power	Press to turn the TV on or off. When your TV is off, power still flows through it. To completely disconnect power, unplug the power cord.
2		Press to open or close the on-screen menu.
3		Press to open Soft Keyboard.
4	MEDIA	Press to open the Media Center.
5		Press to enter start a voice search.
6		Press to open the Dashboard.
7		Switch Google accounts in Google TV mode.
8		Press to navigate the on-screen menu.
9	OK	Enter the selected option or perform the selected operation.
10		Return to the previous menu.
11		Press to open the Home Page.
12		Press to display electronic programme guide in TV mode.
13	CH$\wedge$/CH$\vee$	Press CH$\wedge$ or CH$\vee$ to change TV channels. Press to open the input source list.
14		Press to open the Live TV.
15		Press to prime video for viewing online TV shows and films(internet connection required).
16		Press to star playing the MEDIA, or to pause playing.
17		Press to open the app list.
18		Press to open the Youtube music.
19	AUDIO	Press to select Mono,Nicam,Stereo for ATV channel,Audio language for DTV channel.
20	NETFLIX	Press to open the NETFLIX.
21		Press to open the YouTube.
22		Press this button adjust the volume.
23		Press this button to mute or restore sound.


OPERATING INSTRUCTIONS

INITIAL SETUP

 
The first time you turn on your TV, the setup wizard will guide you through setting up basic settings. Please according to the Text Tip to First Time Setup.

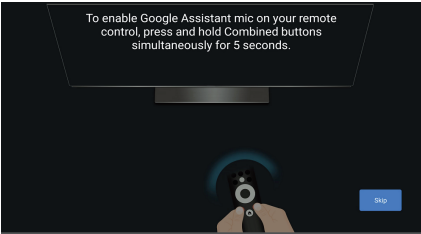

 This function is used for the remote control pair code. After the code is successful, you can use the Bluetooth remote control to operate the TV.

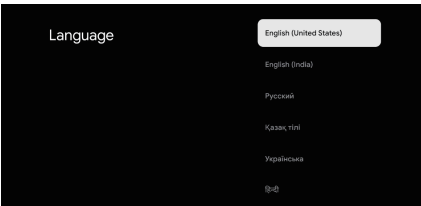


 Press ▲/▼ to select the system language and press **OK** to confirm the language.

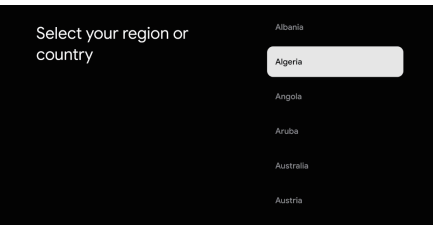


Press ▲/▼ to select the region/country of your device and press **OK** to confirm.

 Complete the TV initialization settings. according to the guide prompt.

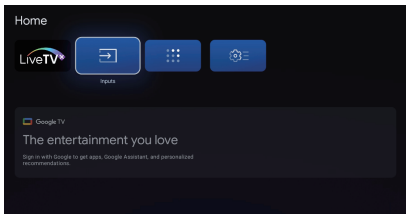


Note: The picture is only for reference.

 - Once in the user interface, you can switch from basic TV to Google TV settings

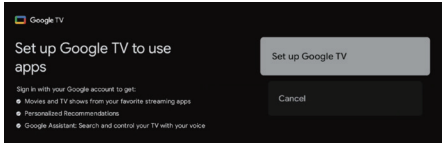

Press ▲/▼ to select the “Set up Google TV” of your device and press **OK** to complete the setup.

 
Use your Google Account Sign in. Follow the Google Guide.

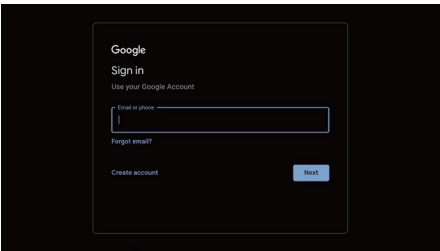

E-Manual

E-Manual is built into your TV and can be displayed on the screen. To learn more about your TV features, access your E-Manual by referring to the following. E-Manual may be available depending on the region or model.

 1. Press **HOME** button to access the home page.
2. Press **UP/DONW/LEFT/RIGHT** and **OK** button to select and enter “E-Manual” in “Apps”.

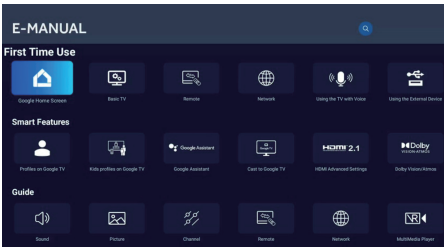

Note: The picture is only for reference.

Haier

美工资料		HKC 惠科股份有限公司 HKC Corporation Limited			
料 号		物料名称	英文说明书	版 本	V0
国家/订单		工厂型号	FZ	客户型号	
规 格	142x205mm	比 例	1:1	客户品牌	HAIER
设 计	sujiabin	核 准		日 期	2025. 4. 24
材 质	80g书写纸 黑白印刷 骑马钉				
备注说明	本表格无需印刷				