

*USER MANUAL*  
Google Series  
H65C95FUX

# Haier

 
Inspired Living

*OLED Television*



# IMPORTANT SAFETY INSTRUCTIONS

- 1) Read these instructions.
- 2) Keep these instructions.
- 3) Heed all warnings.
- 4) Follow all instructions.
- 5) Do not use this product near water.
- 6) Clean only with dry cloth.
- 7) Do not block any ventilation openings, install in accordance with the instructions.
- 8) Do not install near any heat sources such as radiations, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 9) If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- 10) Protected the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- 11) Only use attachments/accessories specified by the manufacturer.
- 12) Unplug this apparatus during lightning storms or when unused for long periods of time.
- 13) Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- 14) Mains plug is used as the disconnect device, the disconnect device shall remain readily operable.
- 15) The ventilation should not be impeded by covering the ventilation openings with items, such as newspapers, table-cloth, curtains, etc.
- 16) No naked flame sources, such as lighted candles, should be placed on the apparatus.
- 17) Attention should be drawn to the environmental aspects of battery disposal.
- 18) The use of apparatus in moderate climate.
- 19) The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the apparatus.
- 20) Warning: To avoid any injury caused by lean of the product, please always ensure the whole product was placed within the table surface in horizontal.

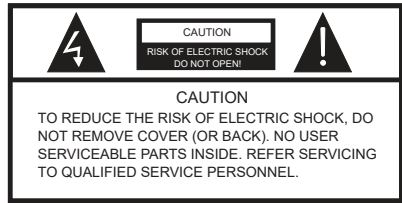

The symbol indicates that dangerous voltages constituting a risk of electric shock are present within this unit.



The symbol indicates that there are important operating and maintenance instructions provided in the user manual given with this unit.

### WARNING:

To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.

### WARNING:

The batteries shall not be exposed to excessive heat such as radiators, fire or the like.



This symbol indicates AC voltage.



This symbol indicates DC voltage.



This symbol indicates that this product incorporates double insulation between hazardous mains voltage and user accessible parts. When servicing use only identical replacement parts.



This marking indicates that this product should not be disposed with other household wastes. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

# IMPORTANT SAFETY INSTRUCTIONS

---

## Stability Hazard

A display may fall, causing serious personal injury or death. Many injuries, particularly to children, can be avoided by taking simple precautions such as:

- ALWAYS use cabinets or stands or mounting methods recommended by the manufacturer of the display.
- ALWAYS use furniture that can safely support the display.
- ALWAYS ensure the display is not overhanging the edge of the supporting furniture.
- ALWAYS educate children about the dangers of climbing on furniture to reach the display or its controls.
- ALWAYS route cords and cables connected to your display so they cannot be tripped over, pulled or grabbed.
- NEVER place a television set in an unstable location.
- NEVER place the display on tall furniture (for example, cupboards or bookcases) without anchoring both the furniture and the display to a suitable support.
- NEVER place the display on cloth or other materials that may be located between the display and supporting furniture.
- NEVER place items that might tempt children to climb, such as toys and remote controls, on the top of the display or furniture on which the display is placed.

## CAUTION

Risk of explosion if battery is replaced by an incorrect type.

## Warning

Don't disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a Battery.

Don't leaving a battery in an extremely high temperature surrounding environment.

To avoid battery subjected to extremely low air pressure.

 


Dolby, Dolby Vision, Dolby Vision IQ, Dolby Atmos, Dolby Audio and the double-D symbol are trademarks of Dolby Laboratories Licensing Corporation. Manufactured under license from Dolby Laboratories. Confidential unpublished works. Copyright ©1992–2022 Dolby Laboratories. All rights reserved.



The terms HDMI, HDMI High-Definition Multimedia Interface, HDMI Trade dress and the HDMI Logos are trademarks or registered trademarks of HDMI Licensing Administrator, Inc.


# PRECAUTIONS AND REMINDERS

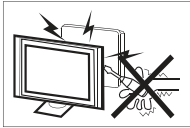


High voltages are used in the operation of this television receiver. Do not remove the cabinet back from your set. Refer servicing to qualified service personnel.



 Never stand on, lean on, or suddenly push the television or its stand. You should pay special attention to children. Serious injury may result if it falls.

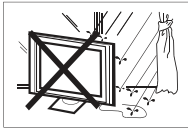

 To prevent fire or electrical shock hazard, do not expose the television receiver to rain or moisture.

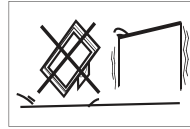

Do not place your television on an unstable cart, stand, shelf or table. Serious injury to an individual, and damage to the television, may result if it falls.



 
Do not drop or push objects into the television cabinet slots or openings. Never spill any kind of liquid on the television receiver.



When the television receiver is not used for an extended period of time, it is advisable to disconnect the AC power cord from the AC outlet.




Do not block the ventilation holes in the back cover. Adequate ventilation is essential to prevent failure of electrical components.

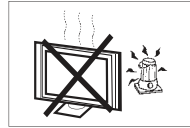

Avoid exposing the television receiver to direct sunlight and other sources of heat. Do not stand the television receiver directly on other products which give off heat, e.g. video cassette players and audio amplifiers. Do not place naked flame sources, such as lighted candles on the television.



 Do not trap the power supply cord under the television receiver.

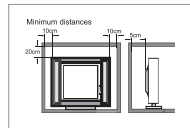

If the television is to be built into a compartment or similar enclosure, the minimum distances must be maintained. Heat build-up can reduce the service life of your television, and can also be dangerous.



If you are going to clean the product, unplug the TV, use soft fabric, no water, never chemicals.

Note: the use of apparatus in moderate climates.

Note: This product uses a panel consisting of sub pixels which require sophisticated technology to produce. However, there may be a few bright or dark pixels on the screen. These pixels will have no impact on the performance of the product.


## PREPARATION

 **IMPORTANT:** Do not apply pressure to the screen display area which may compromise the integrity of the display. The manufacturer's warranty does not cover user abuse or improper installations.

### ATTACHING THE STAND

**IMPORTANT:** The stand of the TV must be assembled prior to usage.

1. Place the TV unit face down on a soft and flat surface (blanket, foam, cloth, etc.) to prevent any damage to the TV.
2. Fix the stand to the base with four screws. (Diagram 1)  
For reminder, the base is heavy, please hold it with hand carefully.
3. Fix the base group to the back of the TV with four screws. (Diagram 2)

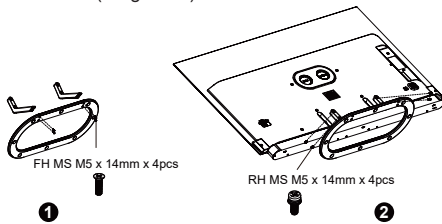


### PREPARING YOUR OLED TV FOR WALL MOUNTING

We suggest that you keep your TV at least 2.36 inches (60 mm) from the wall to prevent cable interference. Before mounting your TV on the wall, you need to remove the stand.

For your safety, please use only with a UL listed wall mount bracket with minimum weight of the TV without stand.

To attach a wall mount bracket to your TV:

 1. Remove the screws holding your TV to the stand.
2. Remove the stand from your TV. For reminder, the base is heavy, please hold it with hands carefully.
3. Remove four screws from the wall mount holes on the back of the TV.
4. Secure the wall mount bracket to the back of your TV using four screws. Follow the instructions of the user manual that came with the wall mount bracket to install.

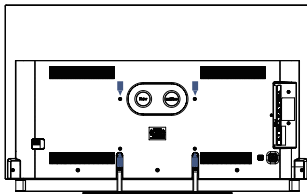


**NOTE**  
The wall mount bracket are not included.

5. Fix the wall mount screws (M6x30mm/4pcs) into the rear side of the OLED TV, using the torque of 8kgf.cm.


### TURNING ON THE TV

 1. Install the stand and place the TV on a solid surface.

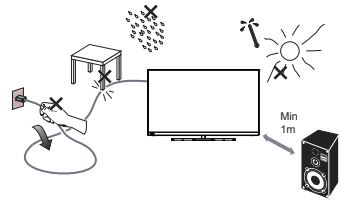

### NOTE

 
- Ensure that the TV is placed in a position to allow free flow of air. Do not cover the ventilation openings on the back cover.
  - To prevent any unsafe situations, no naked flame sources, such as lighted candles, should be placed on or in the vicinity.
  - Avoid heat, direct sunlight and exposure to rain or water. The equipment shall not be exposed to dripping or splashing.
2. Connect the antenna cable or cable TV cable to the **ANT IN** aerial socket on the back of the TV set.
  3. Power:  
Plug the cord into a working power outlet.

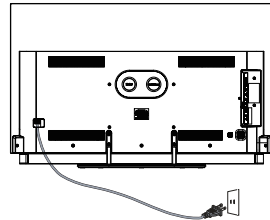

4. Turn the TV on:  
Press **⏻** on the remote control or **POWER** button on the side control panel of the TV.

# PERIPHERAL CONNECTION AND CONTROLS
 
## BUTTON CONTROL

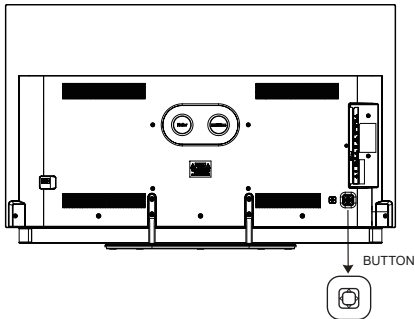

### Middle key

In the standby mode, press the middle button to turn on the TV. In the boot state, long press the middle button to shut down. Under the menu page, function equivalent to the OK key.

### Left and right key

In the non-menu page, press the left and right keys to adjust the volume addition and subtraction.

### Up and down keys

In the non-menu page, you can adjust the TV channel under the program addition and subtraction; Under the menu page, you can move the cursor up and down.

## ACCESSORIES

- Remote Control - 1 pcs
- User's Manual - 2 pcs
- RH MS Screws (M5x14) - 4 pcs
- FH MS Screws (M5x14) - 4 pcs
- Base stand - 2 pcs
- Base - 1 pcs
- Wall spacer - 4 pcs
- QSG - 2 pcs
- Warranty Card - 1 pcs
- Power cord - 1 pcs
- RCA to 3.5mm Jack Composite A/V Cable - 1 pcs

 
## PERIPHERAL CONNECTION



All the terminals are (from left to right):  
 OPTICAL, LAN, USB, LNB IN(SATELLITE) , ANT IN(ANTENNA/CABLE), HDMI4, HDMI3(eARC/ARC),  
 HDMI2, HDMI1, HEADPHONE, AV IN adapter, COMMON INTERFACE(CI)

## TERMINAL CONNECTION


You can use the input terminals on TV set rear as follows.

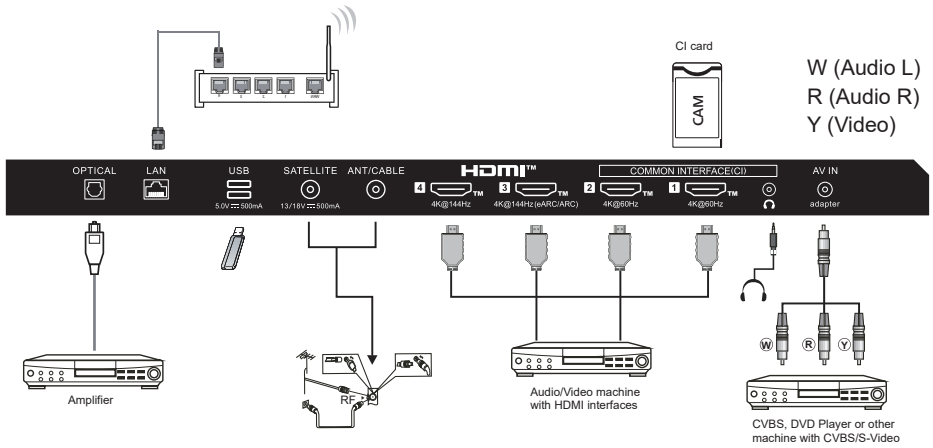

1. RF: Antenna/close circuit TV
2. EARPHONE: Earphone output.
3. USB: Connect USB device.
4. HDMI: Connect to High-definition multimedia signal resource.
5. AV INPUT: Video input/Audio input.

# OPERATING INSTRUCTIONS
 
## USING THE REMOTE CONTROL

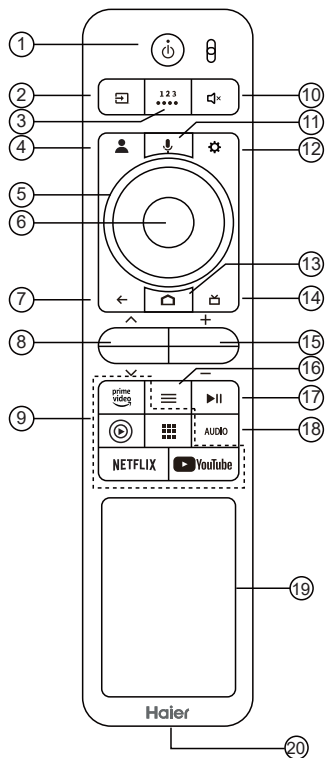


#	Item	Description
1	Power(⏻)	Turn the TV on or to standby mode.
2	SOURCE (☑)	Press this button to access the source list or select the desired sources as you need.
3	••••	Access the virtual keyboard including usually-used buttons like number buttons, color buttons and so on.
4	👤	Switch Google accounts in Google TV Mode.
5	▲▼◀▶	Navigate the menu to select the content you need.
6	OK	Confirm, enter or execute the selected item, or access the channel list.
7	BACK (←)	Return to the previous menu.
8	Channel (▲/▼)	Push this button upwards/downwards to select the desired source in the source list, or change channels in TV mode.
9	APPs Button	Access to all installed applications directly.
10	MUTE (🔇)	Press this button to mute or restore the TV sound.
11	MIC (🗣️)	Start using the near field voice function.
12	Settings (⚙️)	Access the system settings of Android TV.
13	HOME (🏠)	Short press to access the home page, and long press to access the application center.
14	GUIDE (📺)	Access the EPG interface in DTV mode.
15	VOLUME (▲/▼)	Push this button upwards/downwards to adjust the sound volume.
16	MENU (☰)	Access the menu of quick settings.
17	▶️	Click to play/pause in multimedia mode.
18	AUDIO	Click to switch Audio channels.
19	Light panel	Convert Light Energy to Electric Energy.
20	Type-C port	Type-C port for quick charging.


# OPERATING INSTRUCTIONS

## INITIAL SETUP

 
The first time you turn on your TV, the setup wizard will guide you through setting up basic settings. Please according to the Text Tip to First Time Setup.

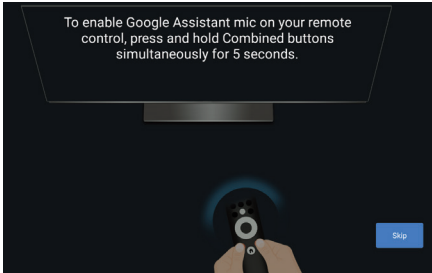

 
This function is used for the remote control pair code. After the code is successful, you can use the Bluetooth remote control to operate the TV.

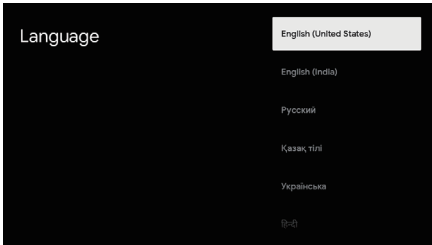

 
Press ▲/▼ to select the system language and press **OK** to confirm the language.

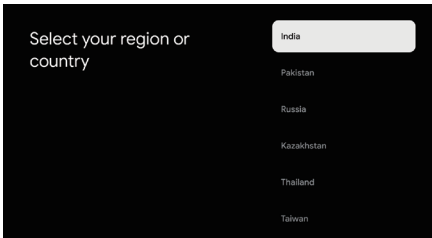

 
Press ▲/▼ to select the region/country of your device and press **OK** to confirm.

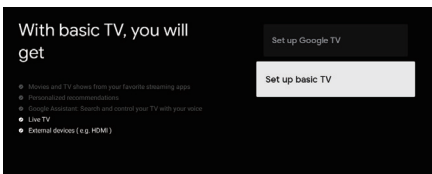

 Press ▲/▼ to select the “Set up basic TV” of your device and press **OK** to complete the setup.

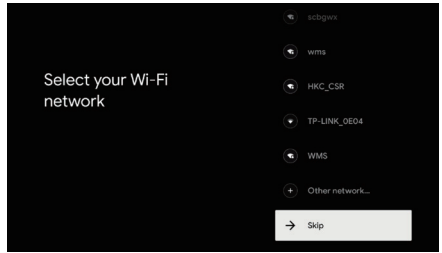

 
Press ▲/▼ to select the wifi to connect, press **OK** and enter the password to confirm the Connection is successful.

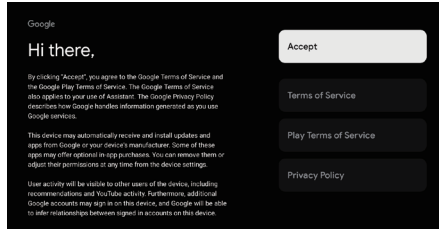


By accepting the Google Terms of Service to improve the product experience, select “Accept” to accept this condition.



 Used to set your device's password to ensure security and privacy.

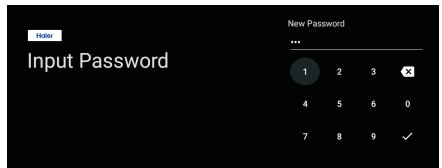


 Press **OK** to pop up the soft keyboard, and use the remote control to enter the 4-digit password automatically jump to the next interface.

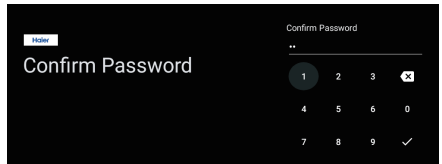


Confirm the password again and keep it consistent Use the remote control to enter the password and complete the password.


# OPERATING INSTRUCTIONS

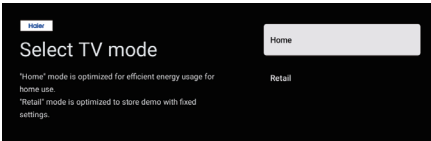 

 For selecting the mode, press ▲/▼ key to select Home mode and press "Yes".

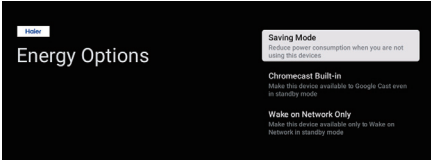

 
Select "Saving Mode" and proceed to the next step.

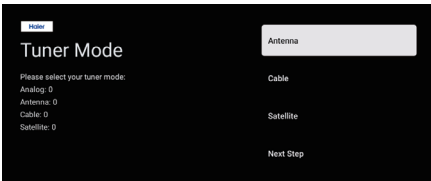


To select the Tuner mode for searching, press to select and press OK to confirm.



 • Once in the user interface, you can switch from basic TV to Google TV settings

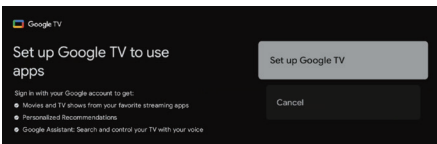

 Press ▲/▼ to select the "Set up Google TV" of your device and press OK to complete the setup.

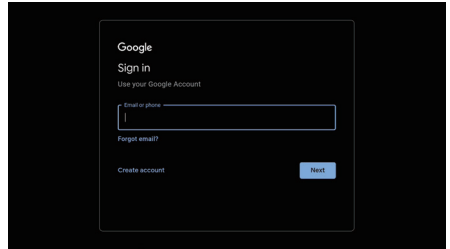


Use your Google Account Sign in. Follow the Google Guide.

## E-Manual

 E-Manual is built into your TV and can be displayed on the screen. To learn more about your TV features, access your E-Manual by referring to the following. E-Manual may be available depending on the region or model.

1. Press **HOME** button to access the home page.
2. Press **UP/DONW/LEFT/RIGHT** and OK button to select and enter "E-Manual" in "Apps".

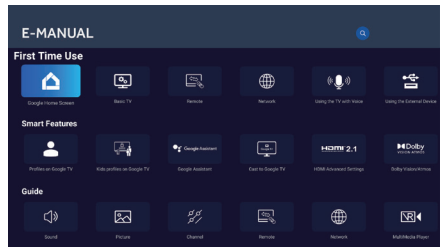

*Note: The picture is only for reference.*

# Haier



X41G43MV672xxA