

MODELS:

H50S80FUX

H55S80FUX

H65S80FUX

H75S80FUX

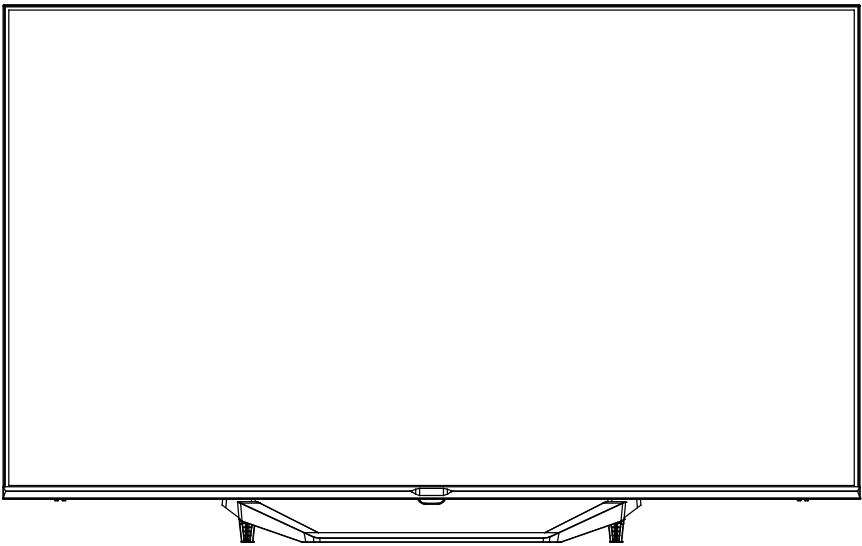 


Illustration in this guide are provided for reference only and may differ from actual product appearance. Product design and specification may be changed without notice.

LED Television

TABLE OF CONTENTS

IMPORTANT SAFETY INSTRUCTIONS	1
STABILITY HAZARD.....	2
PRECAUTIONS AND REMINDERS	3
PREPARATION.....	4
PERIPHERAL CONNECTION AND CONTROLS	5
TERMINAL CONNECTION	6
REMOTE CONTROL	7
OPERATING INSTRUCTIONS	8




Illustration in this guide are provided for reference only and may differ from actual product appearance. Product design and specification may be changed without notice.


IMPORTANT SAFETY INSTRUCTIONS


- 1) Read these instructions.
- 2) Keep these instructions.
- 3) Heed all warnings.
- 4) Follow all instructions.
- 5) Do not use this apparatus near water.
- 6) Clean only with dry cloth.
- 7) Do not block any ventilation openings, install in accordance with the instructions.
- 8) Do not install near any heat sources such as radiations, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 9) Do not defeat the safety purpose of the polarized plug. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- 10) Protected the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- 11) Only use attachments/accessories specified by the manufacturer.
- 12) Unplug this apparatus during lightning storms or when unused for long periods of time.
- 13) Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- 14) Mains plug is used as the disconnect device, the disconnect device shall remain readily operable.
- 15) The ventilation should not be impeded by covering the ventilation openings with items, such as newspapers, table-cloth, curtains, etc.
- 16) No naked flame sources, such as lighted candles, should be placed on the apparatus.
- 17) Attention should be drawn to the environmental aspects of battery disposal.
- 18) The use of apparatus in moderate climate.
- 19) The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the apparatus.
- 20) warning: To avoid any injury caused by lean of the product, please always ensure the whole product was placed within the table surface in horizontal.

Actual product may vary in appearance from above image

 The main plug is used as the disconnect device, the disconnect device shall remain readily operable. the socket-outlet shall be easily accessible.

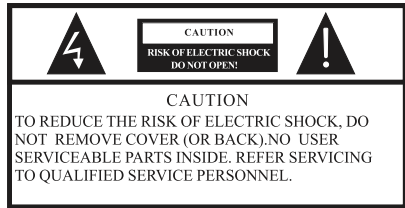

 The symbol indicates that dangerous voltages constituting a risk of electric shock are present within this unit.

 The symbol indicates that there are important operating and maintenance instructions in the literature accompanying this unit.

WARNING:

To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.

WARNING:



The batteries shall not be exposed to excessive heat such as sunshine, fire or the like.



This symbol indicates that this product incorporates double insulation between hazardous mains voltage and user accessible parts. When servicing use only identical replacement parts.



This marking indicates that this product should not be disposed with other household wastes. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

	Direct current
	Alternating current

“Stability Hazard”

“The television set may fall, causing serious personal injury or death”

- **ALWAYS** use cabinets or stands or mounting methods recommended by the manufacturer of the television set.
- **ALWAYS** use furniture that can safely support the television set.
- **ALWAYS** ensure the television set is not overhanging the edge of the supporting furniture.
- **ALWAYS** educate children about the dangers of climbing on furniture to reach the television set or its controls.
- **ALWAYS** route cords and cables connected to your television so they cannot be tripped over, pulled or grabbed.
- **NEVER** place a television set in an unstable location.
- **NEVER** place the television set on tall furniture (for example, cupboards or bookcases) without anchoring both the furniture and the television set to a suitable support.
- **NEVER** place the television set on cloth or other materials that may be located between the television set and supporting furniture.
- **NEVER** place items that might tempt children to climb, such as toys and remote controls, on the top of the television or furniture on which the television is placed.

 


Dolby, Dolby Audio, and the double-D symbol are trademarks of Dolby Laboratories Licensing Corporation.
Dolby Audio Speaker System is a trademark of Dolby Laboratories Licensing Corporation.
Manufactured under license from Dolby Laboratories.
Confidential unpublished works. Copyright © 2012–2024
Dolby Laboratories. All rights reserved.



The terms HDMI, HDMI High-Definition Multimedia Interface, HDMI Trade dress and the HDMI Logos are trademarks or registered trademarks of HDMI Licensing Administrator, Inc.


PRECAUTIONS AND REMINDERS

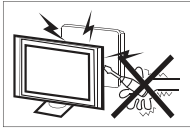


High voltages are used in the operation of this television receiver. Do not remove the cabinet back from your set. Refer servicing to qualified service personnel.



 Never stand on, lean on, or suddenly push the television or its stand. You should pay special attention to children. Serious injury may result if it falls.

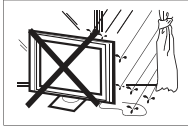

 To prevent fire or electrical shock hazard, do not expose the television receiver to rain or moisture.

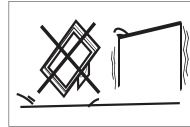

Do not place your television on an unstable cart, stand, shelf or table. Serious injury to an individual, and damage to the television, may result if it falls.



 
Do not drop or push objects into the television cabinet slots or openings. Never spill any kind of liquid on the television receiver.



When the television receiver is not used for an extended period of time, it is advisable to disconnect the AC power cord from the AC outlet.




Do not block the ventilation holes in the back cover. Adequate ventilation is essential to prevent failure of electrical components.

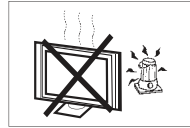

Avoid exposing the television receiver to direct sunlight and other sources of heat. Do not stand the television receiver directly on other products which give off heat, e.g. video cassette players and audio amplifiers. Do not place naked flame sources, such as lighted candles on the television.



 Do not trap the power supply cord under the television receiver.

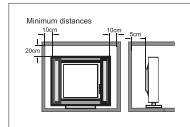

If the television is to be built into a compartment or similar enclosure, the minimum distances must be maintained. Heat build-up can reduce the service life of your television, and can also be dangerous.



If you are going to clean the product, unplug the TV, use soft fabric, no water, never chemicals.

Note: the use of apparatus in moderate climates.

Note: This product uses a panel consisting of sub pixels which require sophisticated technology to produce. However, there may be a few bright or dark pixels on the screen. These pixels will have no impact on the performance of the product.

 
PREPARATION

IMPORTANT: Do not apply pressure to the screen display area which may compromise the integrity of the display. The manufacturer's warranty does not cover user abuse or improper installations.


ATTACHING THE STAND

IMPORTANT: The stand of the TV must be assembled prior to usage.


1. Assemble left leg and right leg with middle decoration properly as shown in the picture.

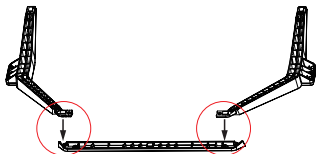

 2. Lock 2 pcs screws after assembling legs and middle decoration properly.

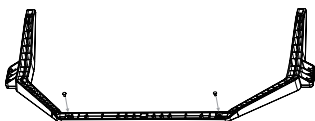

 3. Lay the TV flat and fasten the stand assembly parts with 4 pcs screws.

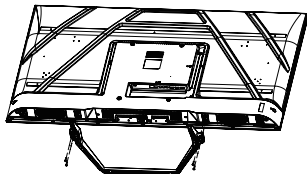

PREPARING YOUR TV FOR WALL MOUNTING

We suggest that you keep your TV at least 2.36 inches (60 mm) from the wall to prevent cable interference. Before mounting your TV on the wall, you need to remove the stand.

 
 
For your safety, please use only with a UL listed wall mount bracket with minimum weight of the TV without stand.

To attach a wall mount bracket to your TV:

1. Use the expansion bolts (4*36PWA) to fix the wall mount brackets into the wall.
2. Fix the wall mount screws (M6x8mm/4pcs) into the rear side of the LCD TV, using the tongue of 8kgf.cm.
* The TV appearance subject to material object.

3. Put the LCD TV with wall mount screws onto the wall mount brackets.

Warning: the angle between the TV and wall must not be bigger than 3°.

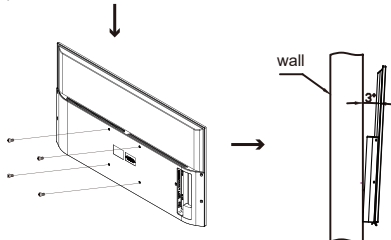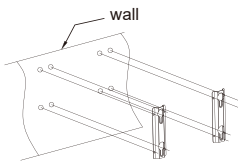


NOTE

The wall mount bracket are not included.

TURNING ON THE TV

 
1. Install the stand and place the TV on a solid surface.

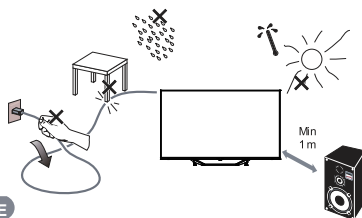

NOTE

- Ensure that the TV is placed in a position to allow free flow of air. Do not cover the ventilation openings on the back cover.
- To prevent any unsafe situations, no naked flame sources, such as lighted candles.
- Avoid heat, direct sunlight and exposure to rain or water.

 
2. Connect the antenna or cable to the **ANT IN** from aerial socket to the back of the TV set.
3. Power:
Plug the cord into a working power outlet.

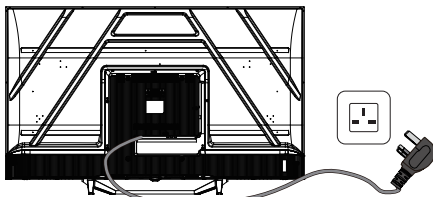

4. Turn the TV on:
Press \odot on the remote control or **POWER** button on the bottom of the TV.

PERIPHERAL CONNECTION AND CONTROLS

 BUTTON CONTROL

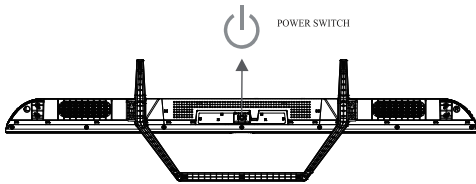

ACCESSORIES

- Remote Control - 1 pc
- User's Manual - 1 pc
- Stand - 2 pcs
- Screws - 4 pcs
- Warranty Card - 1 pc

REAR AV Connections(SIDE)



All the terminals are(from left to right):
HDMI1(eARC/ARC),ANT IN(ANTENNA/CABLE), USB, HEADPHONE.

 
REAR AV Connections



All the terminals are(from left to right):
LAN, OPTICAL, AV IN adapter, HDMI4, HDMI3, HDMI2.


TERMINAL CONNECTION

You can use the input terminals on TV set rear as follows.

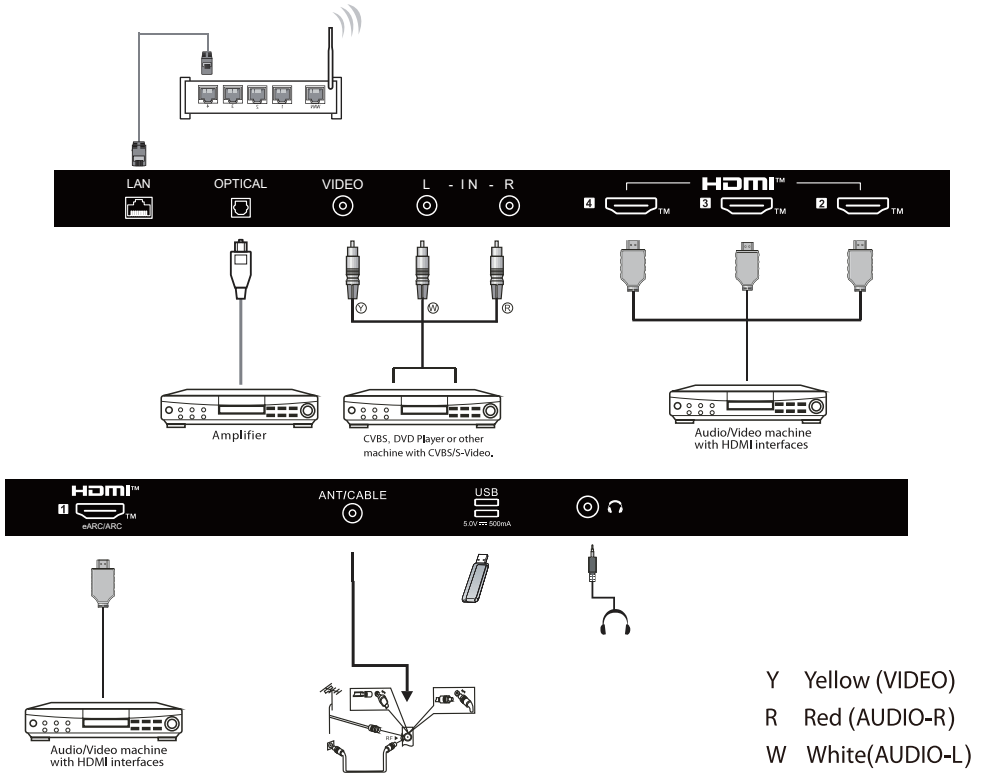


1. RF: Antenna/close circuit TV
2. EARPHONE: Earphone output.
3. USB: Connect USB device.
4. HDMI: Connect to High-definition multimedia signal resource.
5. AV INPUT: Video input/Audio input.

 REMOTE CONTROL

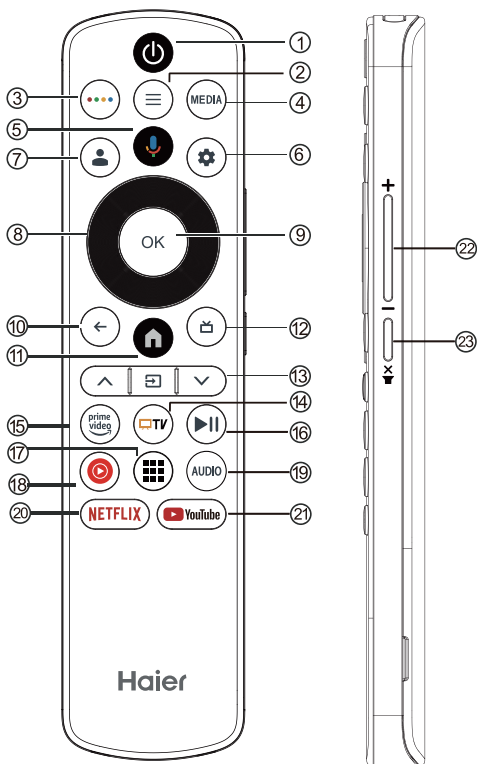

#	Item	Descriptions
1	Power	Press to turn the TV on or off. When your TV is off, power still flows through it. To completely disconnect power, unplug the power cord.
2		Press to open or close the on-screen menu.
3		Press to open Soft Keyboard.
4	MEDIA	Press to open the Media Center.
5		Press to enter start a voice search.
6		Press to open the Dashboard.
7		Switch Google accounts in Google TV mode.
8		Press to navigate the on-screen menu.
9	OK	Enter the selected option or perform the selected operation.
10		Return to the previous menu.
11		Press to open the Home Page.
12		Press to display electronic programme guide in TV mode.
13	CH[^]/CH^v	Press CH[^] or CH^v to change TV channels. Press to open the input source list.
14		Press to open the Live TV.
15		Press to prime video for viewing online TV shows and films(internet connection required).
16		Press to start playing the MEDIA, or to pause playing.
17		Press to open the app list.
18		Press to open the Youtube music.
19	AUDIO	Press to select Mono,Nicam,Stereo for ATV channel,Audio language for DTV channel.
20	NETFLIX	Press to open the NETFLIX.
21		Press to open the YouTube.
22		Press this button adjust the volume.
23		Press this button to mute or restore sound.

 
Remove the cover of the battery compartment.
Insert the 2 batteries (Type AAA 1.5V).

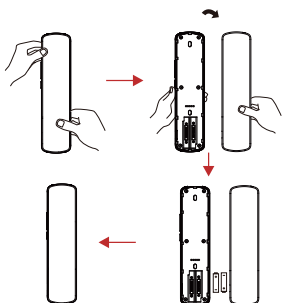


OPERATING INSTRUCTIONS

INITIAL SETUP

 
The first time you turn on your TV, the setup wizard will guide you through setting up basic settings. Please according to the Text Tip to First Time Setup.

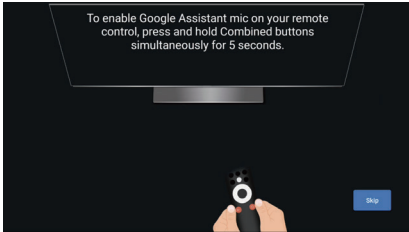

 
This function is used for the remote control pair code. After the code is successful, you can use the Bluetooth remote control to operate the TV.

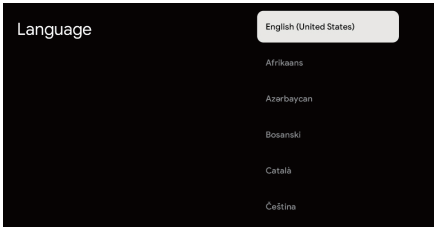

 Press ▲/▼ to select the system language and press **OK** to confirm the language.

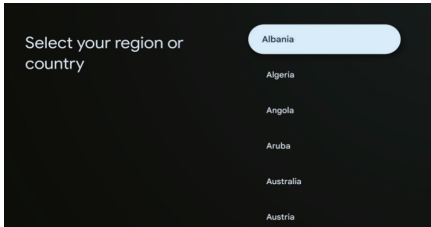


 Press ▲/▼ to select the region/country of your device and press **OK** to confirm. Complete the TV initialization settings according to the guide prompt.

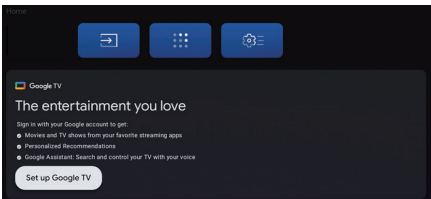


Note: The picture is only for reference.

 - Once in the user interface, you can switch from basic TV to Google TV settings

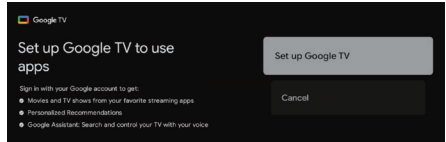

 Press ▲/▼ to select the “Set up Google TV” of your device and press **OK** to complete the setup.

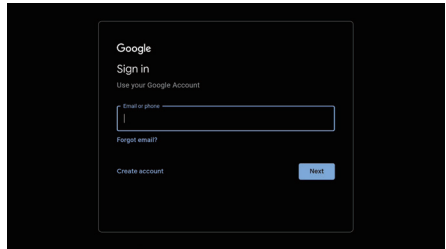


Use your Google Account Sign in. Follow the Google Guide.

E-Manual

E-Manual is built into your TV and can be displayed on the screen. To learn more about your TV features, access your E-Manual by referring to the following. E-Manual may be available depending on the region or model.

 1. Press **HOME** button to access the home page.
2. Press **UP/DOWN/LEFT/RIGHT** and **OK** button to select and enter “E-Manual” in “Apps”.

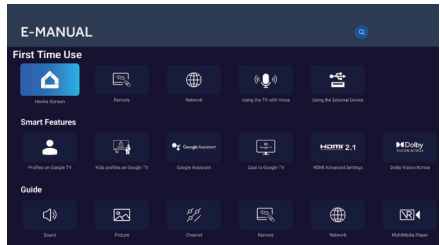

Note: The picture is only for reference.

Haier



90101-43240