

**Haier**  
Inspired Living

User Manual

 
**MODELS:**

LE50U6900UG

LE55U6900UG

LE58U6900UG

LE65U6900UG

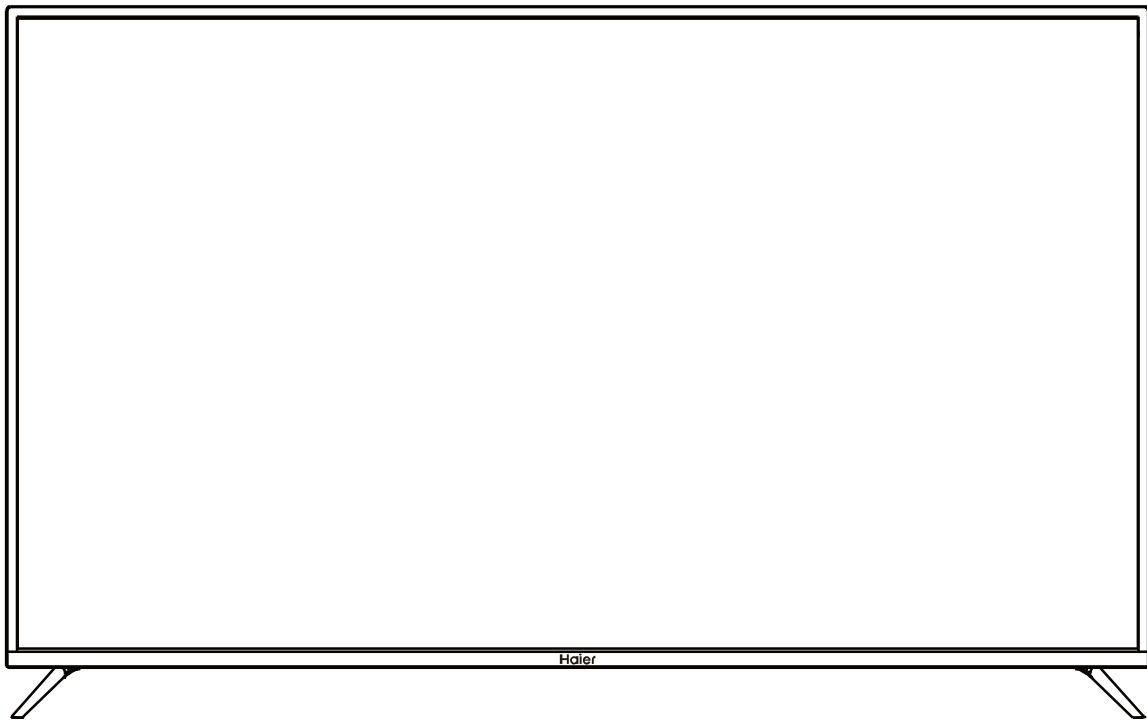

LED Television


# TABLE OF CONTENTS


IMPORTANT SAFETY INSTRUCTIONS .....	1
PRECAUTIONS AND REMINDERS.....	2
PREPARATION .....	3
PERIPHERAL CONNECTION AND CONTROLS .....	4
MAKING CONNECTIONS.....	5
OPERATING INSTRUCTIONS .....	6
TROUBLESHOOTING .....	17
PRODUCT SPECIFICATION .....	18

# IMPORTANT SAFETY INSTRUCTIONS

- 1) Read these instructions.
- 2) Keep these instructions.
- 3) Heed all warnings.
- 4) Follow all instructions.
- 5) Do not use this apparatus near water.
- 6) Clean only with dry cloth.
- 7) Do not block any ventilation openings, install in accordance with the instructions.
- 8) Do not install near any heat sources such as radiations, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 9) Do not defeat the safety purpose of the polarized plug. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- 10) Protected the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- 11) Only use attachments/accessories specified by the manufacturer.
- 12) Unplug this apparatus during lighting storms or when unused for long periods of time.
- 13) Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- 14) Mains plug is used as the disconnect device, the disconnect device shall remain readily operable.
- 15) The ventilation should not be impeded by covering the ventilation openings with items, such as newspapers, table-cloth, curtains, etc.
- 16) No naked flame sources, such as lighted candles, should be placed on the apparatus.
- 17) Attention should be drawn to the environmental aspects of battery disposal.
- 18) The use of apparatus in moderate climate.
- 19) The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the apparatus.

 


 The symbol indicates that dangerous voltages constituting a risk of electric shock are present within this unit.

 The symbol indicates that there are important operating and maintenance instructions in the literature accompanying this unit.


**WARNING:**  
To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.

**WARNING:**  
The batteries shall not be exposed to excessive heat such as sunshine, fire or the like.




This symbol indicates that this product incorporates double insulation between hazardous mains voltage and user accessible parts. When servicing use only identical replacement parts.




 This marking indicates that this product should not be disposed of with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.


# PRECAUTIONS AND REMINDERS

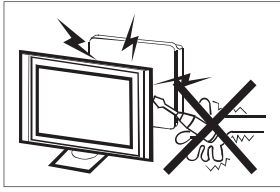 

 
High voltages are used in the operation of this television receiver. Do not remove the cabinet back from your set. Refer servicing to qualified service personnel.

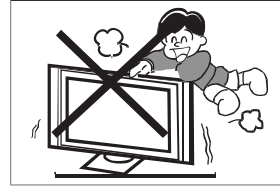

 
Never stand on, lean on, or suddenly push the television or its stand. You should pay special attention to children. Serious injury may result if it falls.

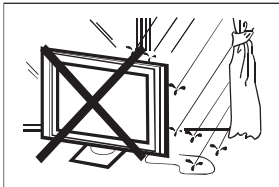

 
To prevent fire or electrical shock hazard, do not expose the television receiver to rain or moisture.

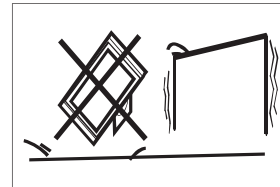

 
Do not place your television on an unstable cart, stand, shelf or table. Serious injury to an individual, and damage to the television, may result if it falls.

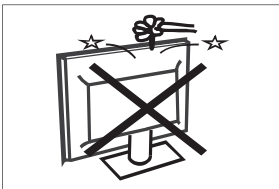

 
Do not drop or push objects into the television cabinet slots or openings. Never spill any kind of liquid on the television receiver.

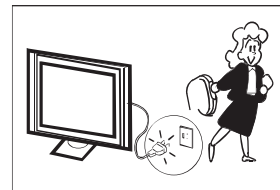

 
When the television receiver is not used for an extended period of time, it is advisable to disconnect the AC power cord from the AC outlet.

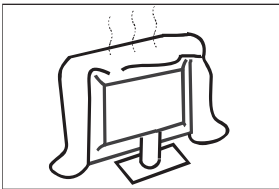

 
Do not block the ventilation holes in the back cover. Adequate ventilation is essential to prevent failure of electrical components.

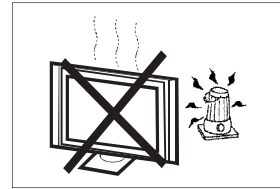

 Avoid exposing the television receiver to direct sunlight and other sources of heat. Do not stand the television receiver directly on other products which give off heat, e.g. video cassette players and audio amplifiers. Do not place naked flame sources, such as lighted candles on the television.

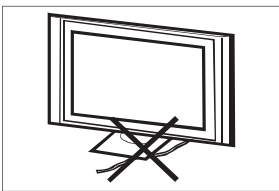

 Do not trap the power supply cord under the television receiver.

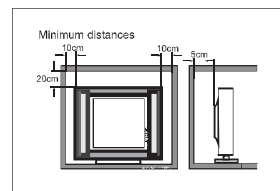

If the television is to be built into a compartment or similar enclosure, the minimum distances must be maintained. Heat build-up can reduce the service life of your television, and can also be dangerous.



If you are going to clean the product, Unplug the TV, use soft fabric, no water, never chemicals.

Note: the use of apparatus in moderate climates.


## PREPARATION

 **IMPORTANT:** Do not apply pressure to the screen display area which may compromise the integrity of the display. The manufacturer's warranty does not cover user abuse or improper installations.

### ATTACHING THE STAND

**IMPORTANT:** The stand of the TV must be assembled prior to usage.

1. Place TV unit face down on a soft and flat surface (blanket, foam, cloth, etc.) to prevent any damage to the TV.
2. Fix the stand to the bottom of the TV with the four screws.

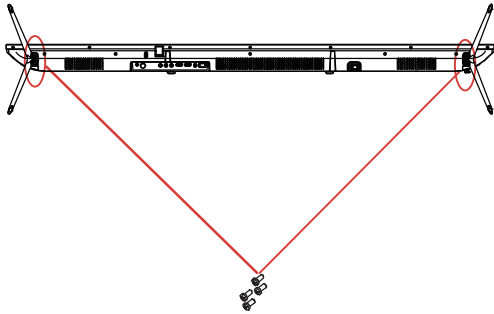

#### NOTE

The appearance of the product shall be in kind.

 
### PREPARING YOUR LED TV FOR WALL MOUNTING

We suggest that you keep your TV at least 2.36 inches (60 mm) from the wall to prevent cable interference. Before mounting your TV on the wall, you need to remove the stand.

For your safety, please use only with a UL listed wall mount bracket with minimum weight of the TV without stand.

To attach a wall mount bracket to your TV:

1. Remove the screws holding your TV to the stand.
2. Remove the stand from your TV.
3. Secure the wall mount bracket to the back of your TV using four screws. Follow the instructions of the user manual that came with the wall mount bracket to install.

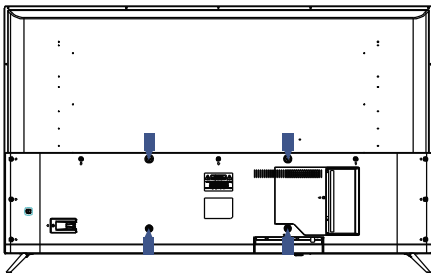


#### NOTE

The wall mount bracket are not included.


### TURNING ON THE TV

 1. Install the stand and place the TV on a solid surface.

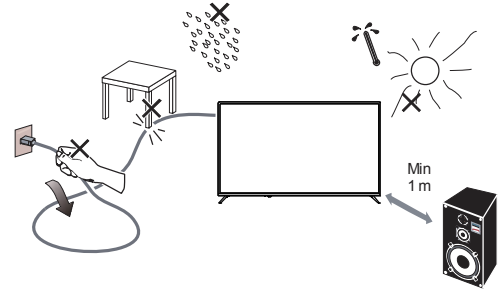



#### NOTE

 - Ensure that the TV is placed in a position to allow free flow of air. Do not cover the ventilation openings on the back cover.
  - To prevent any unsafe situations, no naked flame sources, such as lighted candles, should be placed on or in the vicinity.
  - Avoid heat, direct sunlight and exposure to rain or water. The equipment shall not be exposed to dripping or splashing.
2. Connect the antenna cable or cable TV cable to the **ANT IN** aerial socket on the back of the TV set.
  3. Remote control:  
Remove the cover of the battery compartment. Insert 2 batteries (Type AAA 1.5V).

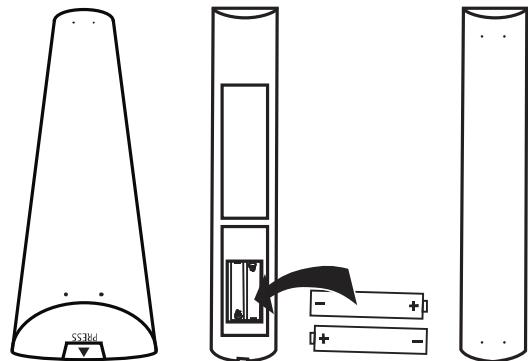


 
4. Power:  
Plug the cord into a working power outlet.

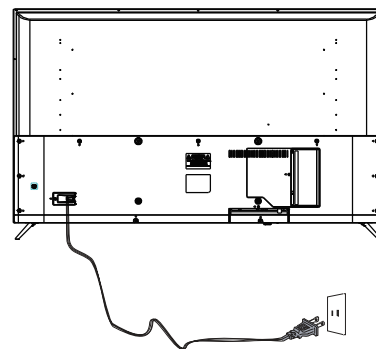

5. Turn the TV on:  
Press  on the remote control or **POWER** button on the side control panel of the TV.

# PERIPHERAL CONNECTION AND CONTROLS
  
## BUTTON CONTROL

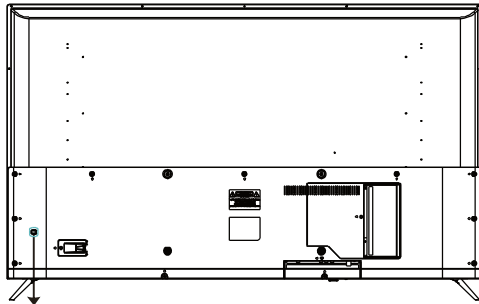

### Middle key

In the standby mode, press the middle button to turn on the TV.  
In the boot state, long press the middle button to shut down.  
Under the menu page, function equivalent to the OK key.

### Left and right keys

In the non-menu page, Under the menu page, press the left and right keys to adjust the volume addition and subtraction.

### Up and down keys

In the non-menu page, you can adjust the TV channel under the program addition and subtraction;  
Under the menu page, you can move the cursor up and down.

## ACCESSORIES

- TV 50"/55"/58"/65"
- Remote Control - 1 pc
- User's Manual - 1 pc
- Quick Start Guide - 1 pc
- Warranty Card - 1 pc
- E-waste Guideline Manual - 1 pc
- Screws - 4pcs
- Mini YPbPr Cable - 1 pc

## PERIPHERAL CONNECTION



 
 
All the terminals are(from left to right):  
OPTICAL, USB1, RJ45, HDMI1, HDMI2, HDMI3, VIDEO, L, R



All the terminals are(from left to right):  
HDMI4(ARC), LNB IN(SATELLITE), ANT IN(ANTENNA/CABLE), CI, MINI YPbPr, EARPHONE, TF, USB2.

# MAKING CONNECTIONS

You can use the input terminals on TV set rear as follows.

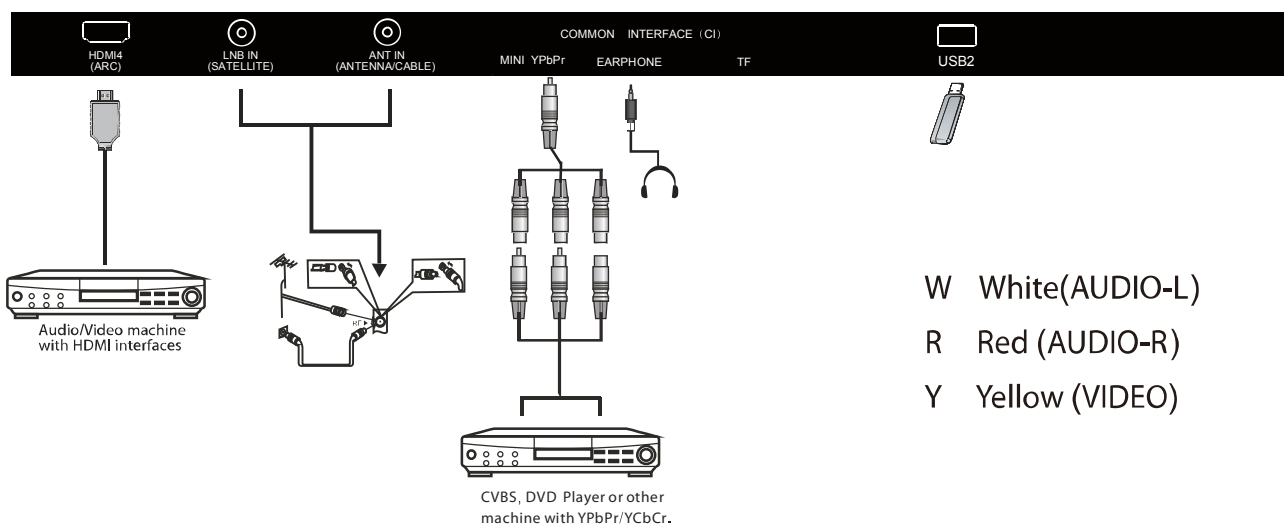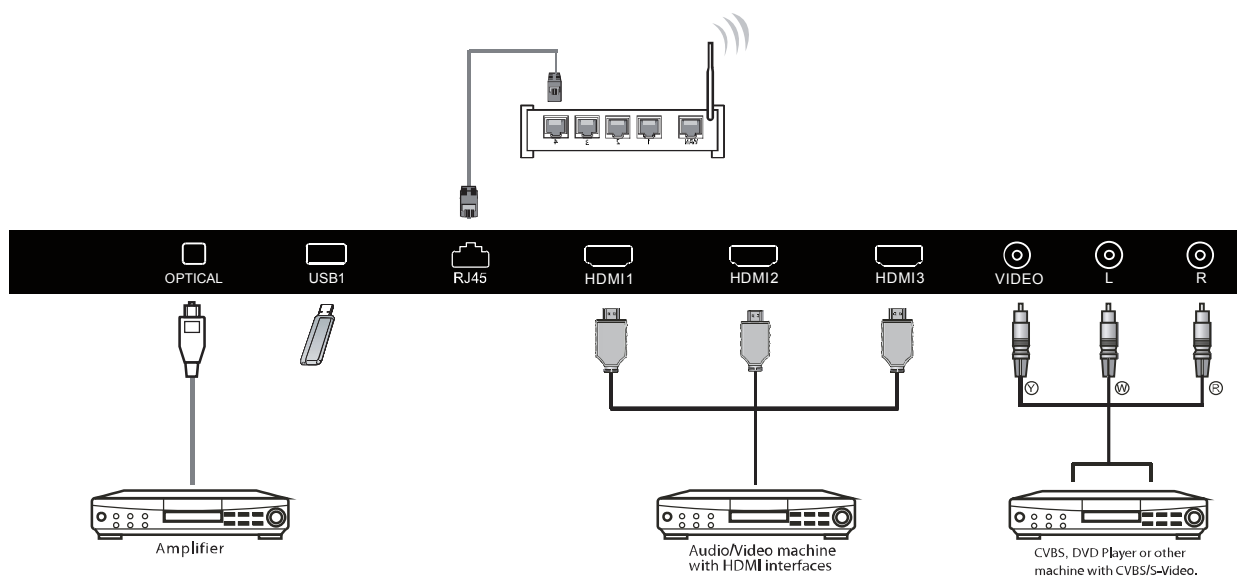

1. HDMI: Connect to High-definition multimedia signal resource.
2. USB: Connect USB device.
3. YPbPr: Component input terminal.
4. RF: Antennal/close circuit TV
5. AV INPUT: Video input/Audio input.

# OPERATING INSTRUCTIONS

 
## USING THE REMOTE CONTROL




#	Item	Descriptions
1	<b>Power</b>	Press to turn the TV on or off. When your TV is off, power still flows through it. To completely disconnect power, unplug the power cord.
2	<b>MUTE</b>	Press to switch the sound on or off.
3	<b>Google Assistant</b>	Press to open the google assistant or start a voice search.
4	<b>◀◀(reverse)</b>	Press to reverse playback in multimedia & Timeshift mode.
5	<b>▶(play)</b>	Press to play in multimedia mode & Timeshift mode.
6	<b>▶▶(forward)</b>	Press to fast forward in multimedia & Timeshift mode.
7	<b>(REC)</b>	Press to record the TV program you are watching in DTV mode.
8	<b>   (Pause)</b>	Press to pause in multimedia mode & Timeshift mode.
9	<b>■ (stop)</b>	Press to stop multimedia playback, REC & Timeshift mode.
10	<b>TEXT</b>	Press to select the teletext mode.
11	<b>FAV</b>	Press to open a favorite channel list.
12	<b>SUBTITLE</b>	Open or close subtitle.
13	<b>SOURCE</b>	Press to open the input source list.
14	<b>NETFLIX</b>	Press to open the NETFLIX.
15	<b>YouTube</b>	Press to open the YouTube.
16	<b>HOME</b>	Press to open the Home Page.
17	<b>MENU</b>	Press to open or close the on-screen menu.
18	<b>▲▼◀▶</b>	Press to navigate the on-screen menu.
19	<b>OK</b>	Enter the selected option or perform the selected operation.
20	<b>BACK</b>	Return to the previous menu.
21	<b>EXIT</b>	It depends on the actual function.
22	<b>INFO</b>	Press to display the channel information.
23	<b>GUIDE</b>	Press to display electronic programme guide in TV mode.
24	<b>VOL+/VOL-</b>	Press <b>VOL+</b> or <b>VOL-</b> to adjust volume level.
25	<b>CH+/CH-</b>	Press <b>CH+</b> or <b>CH-</b> to change TV channels.
26	<b>0~9 number</b>	Press to enter a TV channel number.
27	<b>CH.LIST</b>	Press to display the Channel List.
28	<b>AUDIO</b>	Press to select Mono, Nicam, Stereo for ATV channel, Audio language for DTV channel.
29	<b>Coloured buttons</b>	Implement the relevant operations according to the prompt at the bottom of the menu in the text.

## INITIAL SETUP

The first time you turn on your TV, the setup wizard will guide you through setting up basic settings. Please according to the Text Tip to First Time Setup.

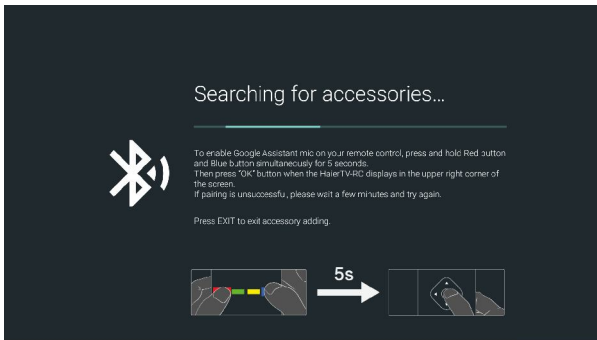

 This function is used for the remote control pair code. After the code is successful, you can use the Bluetooth remote control to operate the TV.

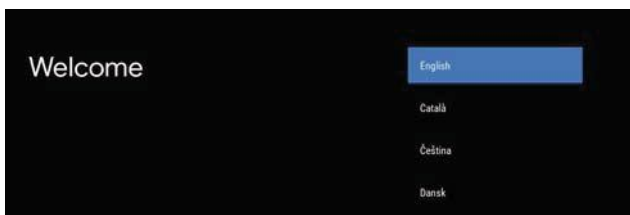


Press ▲/▼ to select the system language and press **OK** to confirm the language.




Connect your Android phone to your TV, select "Continue" to continue the connection, and choose "Skip" to skip this step.



 
Press ▲/▼ to select the wifi to connect, press **OK** and enter the password to confirm the connection is successful.

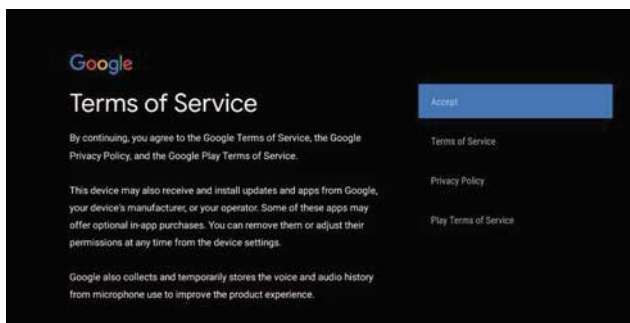

 By accepting the Google Terms of Service to improve the product experience, select "Accept" to accept this condition.

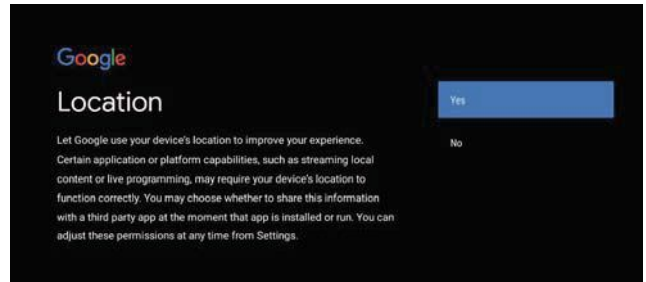

 
Agree to Google to get the location information of your device to get more features, choose "YES" to accept.

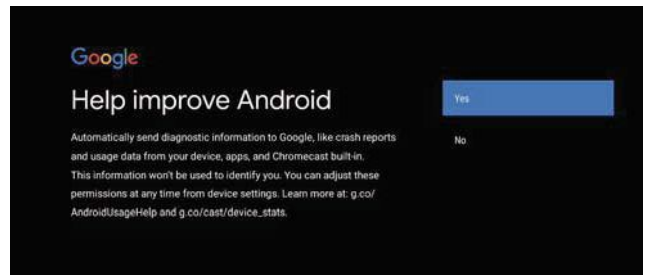

By agreeing to automatically send diagnostic information to Google to improve discriminative power, choose "YES" to accept.



 1. Your device is powered by Android TV and press the ► button to select the browsing feature.
2. You can get more apps from Google Play and press the ► button to go to the next screen.
3. Transfer photos and other content to the TV via the built-in Chromecast, press **OK** to complete the browsing.

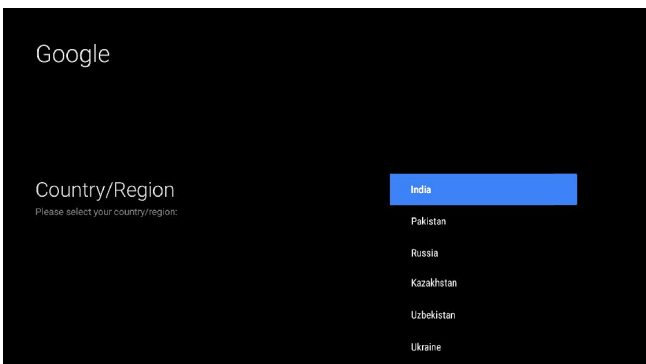

Press ▲/▼ to select the country of your device and press **OK** to confirm.



 
Used to set your device's password to ensure security and privacy.




Press **OK** to pop up the soft keyboard, and use the remote control to enter the 4-digit password automatically jump to the next interface.




Confirm the password again and keep it consistent. Use the remote control to enter the password and complete the password confirmation.

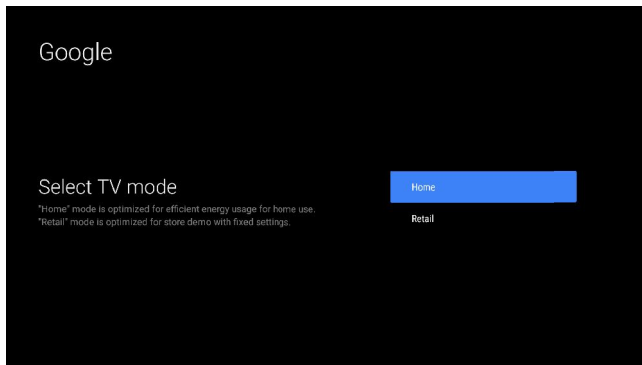

 
For selecting the mode, press **▲/▼** key to select Home mode and press **OK** to confirm.

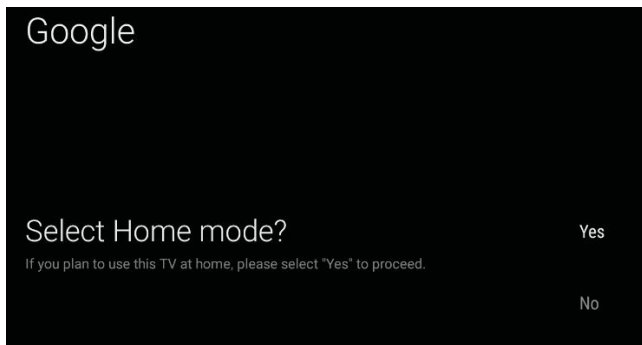

 
Confirm the selected mode again, select "Yes" to confirm the selected mode, and select "No" to return to the previous step.

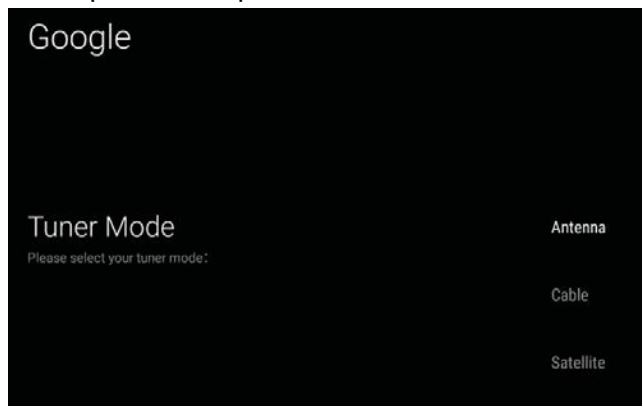

 To select the Tuner mode for searching, press **▲/▼** to select and press **OK** to confirm.

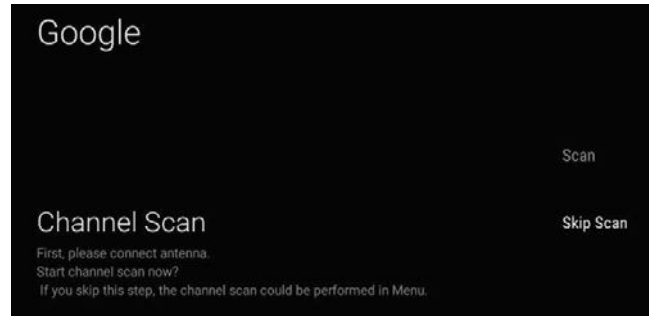

 Press **▲/▼** to select whether to search, select "Scan" to search, select "Skip scan" to skip the search.

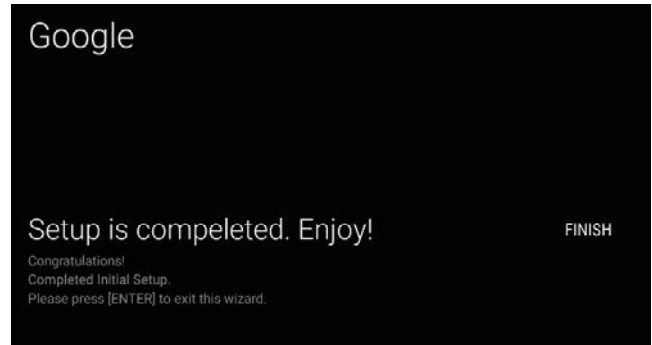


Press **OK** to complete the setup.

#### NOTE

 The IOT system is working support towards a more connected IOT based home appliances, The simplicity of voice control will allow the smart television to act as the central access point of the modern smart home under the standard language & words.

### HOME SCREEN

After completing the wizard Settings, you can watch TV and go to the home screen.

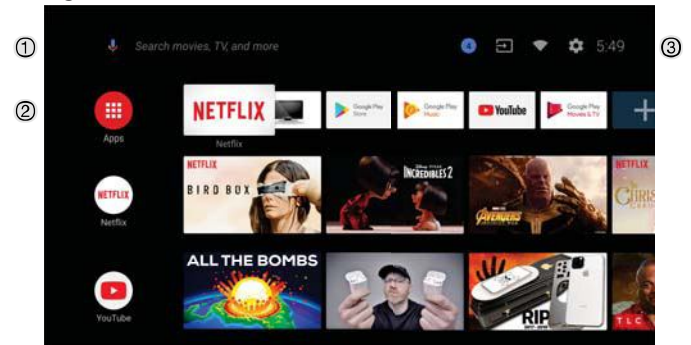

① Open the google assistant or start a voice search.

② Among the applications installed on the TV, the icons for the favourite applications are shown inside here. (Favourite applications can be added / deleted / changed its order by users.)

📱 **Apps:** Click to jump to Apps screen where all the installed applications are listed.

③

🔔 **Notification:** Display the notifications.

📺 **Inputs:** Icon to select an input source.


🌐 **Network&Interent:** Icon to Set up Network, Such as wifi.

⚙️ **Settings:** Various settings can be configured here.


For details on the settings, see the next explanation.

## INPUT SOURCE

 1. In the HOME interface, press ▲/▼ ◀/▶ to select the "Inputs" icon, press **OK** to open the input source list, then press up to highlight an input and press **OK** to switch.


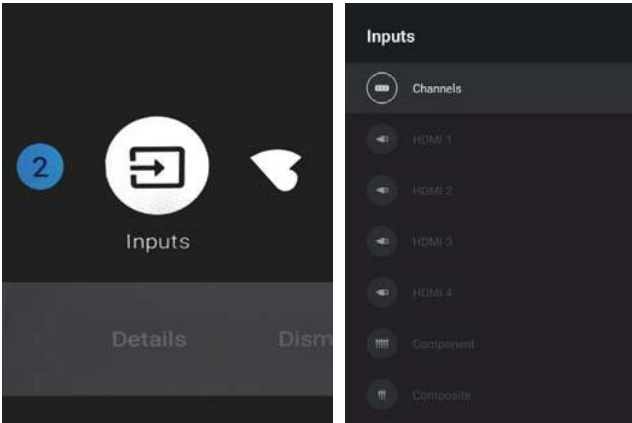


 2. Under live TV, press the **SOURCE** button to display the list of input sources. You can select the desired source.

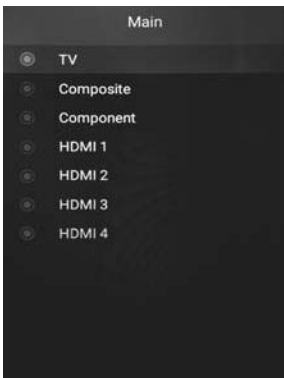


## NAVIGATING THE ON-SCREEN MENU

  1. There are two ways to enter. First, in live TV, press the menu button to display TV options, press ▲/▼ ◀/▶ to select the settings menu and press **OK** to confirm. Second, in the HOME interface, press the ▶ key to select the icon of the circular settings menu, press **OK** to confirm.

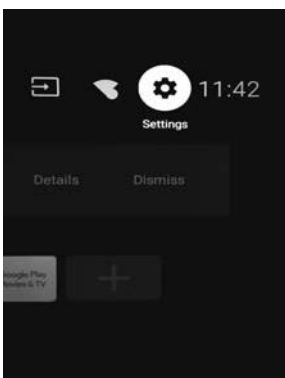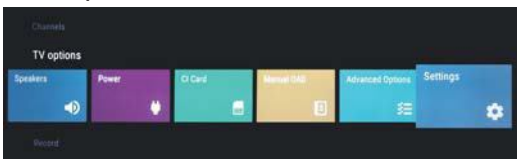

2. Press ▲/▼ button to select what you want set.


 
3. Press **OK** to enter setting.

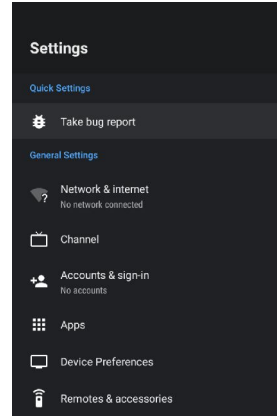


Press **BACK** to return to the previous menu. If the main menu is displayed, pressing **BACK** will close the onscreen menu.

## Network

  1. Press ▲ /▼ button to select what you want set .
2. Press **OK** button to adjust.
3. After finishing your adjustment, Press **OK** button to save and return to the previous menu.

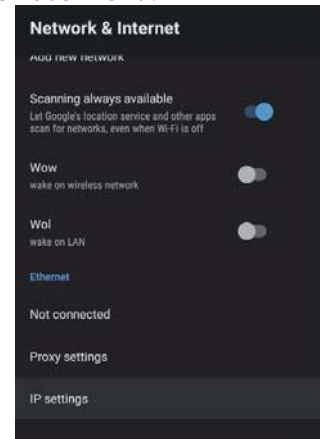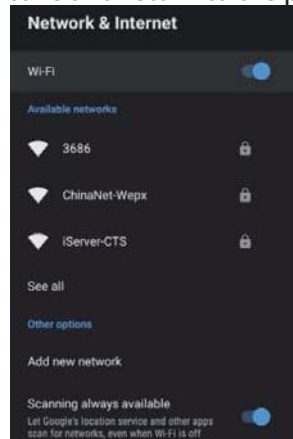

## CHANNEL

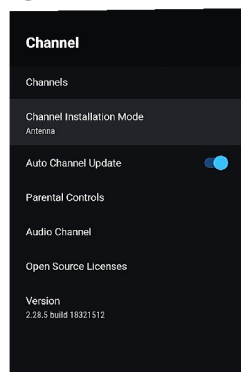 

**Channels** – Display the scan **sub-menu** based on different Channel installation modes.

**Channel installation mode** – Select on-screen display channel sources. You can select the signal type.

- **Antenna** – Set the signal type to antenna. When set to Antenna, the TV can receive analog and digital (DVB/T2) broadcasting signals.
- **Cable** – Set the signal type to cable. When set to Cable, the TV can receive analog and QAM broadcasting signals.
- **Satellite** – Set the signal type to Satellite. When set to Satellite, the TV can receive Satellite broadcasting signals.


**Auto Channel Update** – Press **OK** button to choose ON/OFF. When selecting ON, the system will automatically scan and update channels after 5 minutes of standby.

**Parental controls** – Press **▲/▼** button to select the option then press **OK** button to enter the sub-menu.


**Audio Channel** – Press **▲/▼** button to select the option then press **OK** button to enter the sub-menu.

**Open source licenses** – Press **▲/▼** button to select the option then press **OK** button to enter the sub-menu.


## Antenna

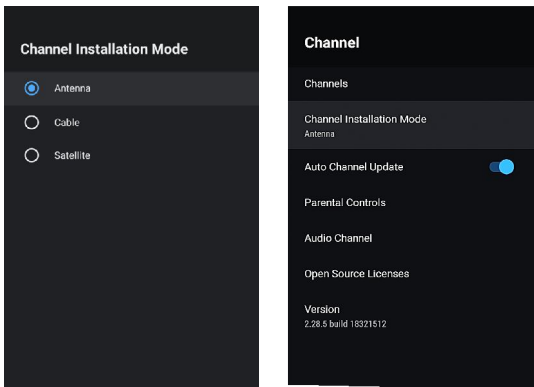 

 1. Menu->Settings->Channel->Channel Installation Mode enter, choose Antenna.

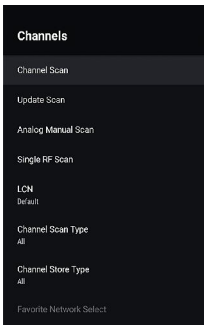


 2. Enter Menu->Settings->Channel->Channels.

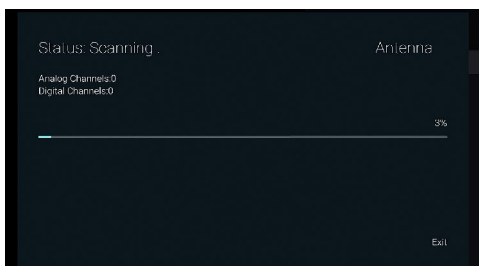


3. Channel Scan directly enters the ATV+DTV automatic search platform interface of Antenna.

 **Update Scan:** Re-automatically search for frequency points outside the station.

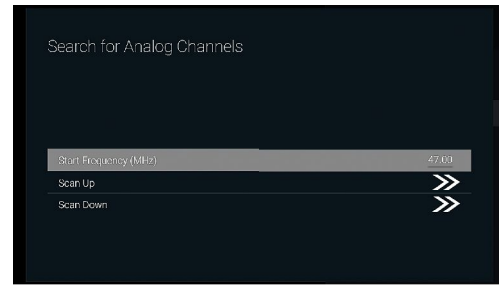


 **Analog Manual Scan:** Manual ATV search station. After input the frequency point, you can select up or down search station.

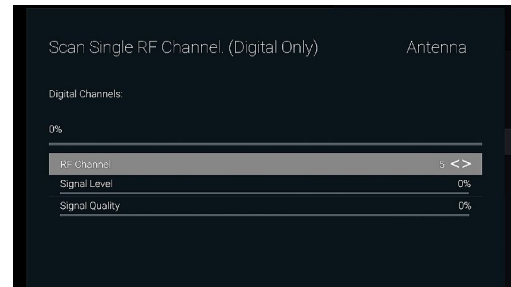


**Single RF Scan:** DTV manual search, left and right after selecting RF Channel, directly OK search.

## Cable

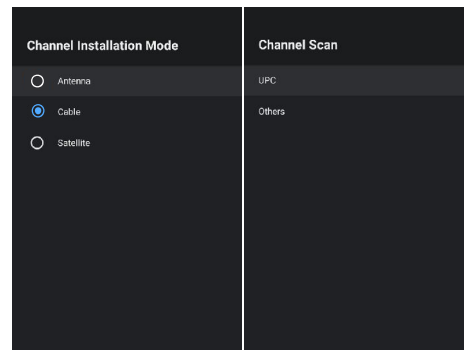 


1. Menu->Settings->Channel->Channel Installation Mode, select Cable.

 
2. Enter Menu->Settings->Channel->Channels.

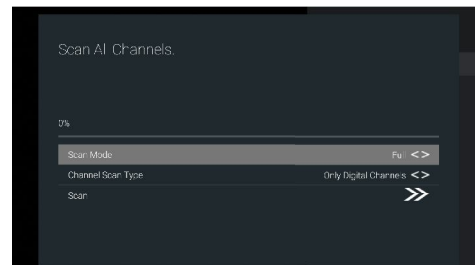

 
3. Enter Channel Scan, where UPC is the local operator, and the default Scan Mode is Full; Others have Advance, Quick and Full Scan modes.

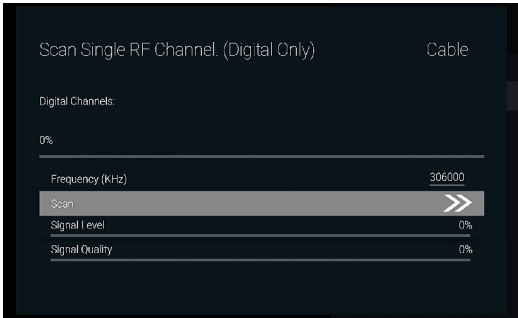

 
**Single RF Scan:** manual search station.

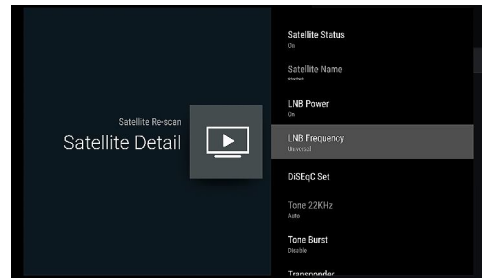


## Satellite

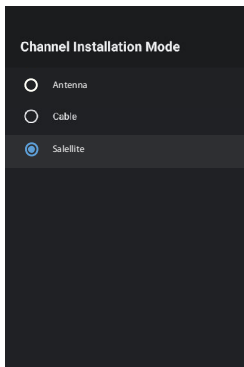 

 1. Menu->Settings->Channel->Channel Installation Mode, select Satellite.

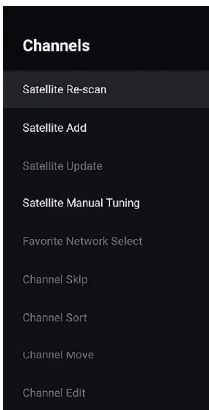

 
2. Enter Menu->Settings-> channel-> Channels->Satellite Re-scan.

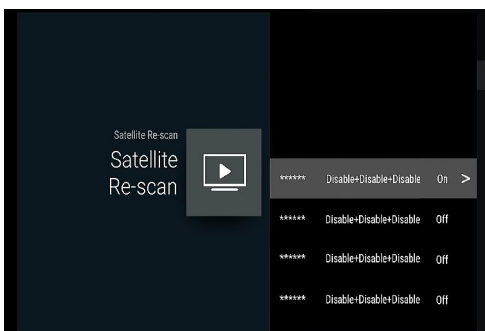

3. Press OK to enter Satellite parameter Settings, which include LNB POWER, LNB Frequency, DiSEqC Set, 22K and other parameters. Then return to Satellite re-scan and right click to enter the search menu. Then return to Satellite re-scan and right click to enter the search menu.




 **Satellite Add :** Add a star broadcast signal.

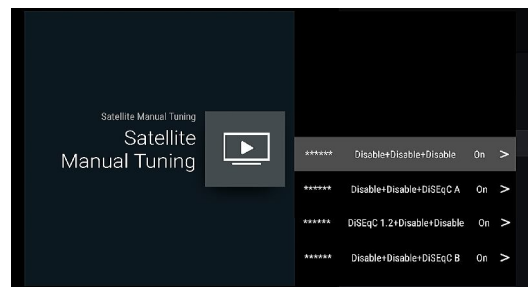


**Satellite Manual Tuning:** manually search for a certain TP, which can be added by Satellite Add if needed.

## ACCOUNTS & SIGN IN

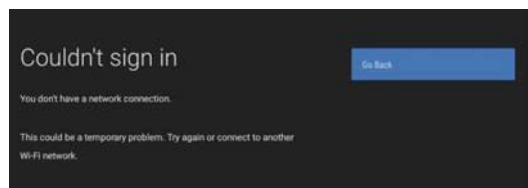 


## APPS

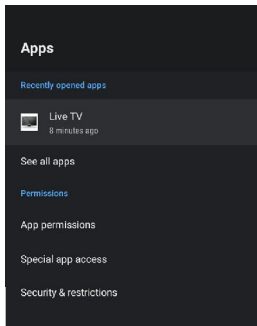 

In this menu, you can set the APP permissions, and read the app lists

1. Press ▲/▼ button to select what you want set .
2. Press OK button to adjust.
3. After finishing your adjustment, press BACK button to return to the previous menu.


## DEVICE PREFERENCES

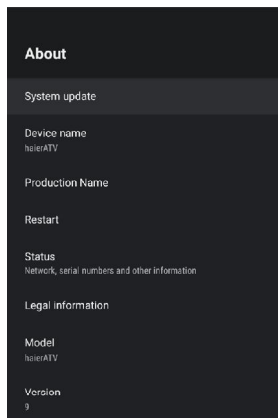 

In this menu, you can read the information and settings of TV.

1. Press ▲/▼ button to select what you want set .
2. Press OK button to adjust.
3. After finishing your adjustment, Press BACK button to return to the previous menu.

## DATE&TIME

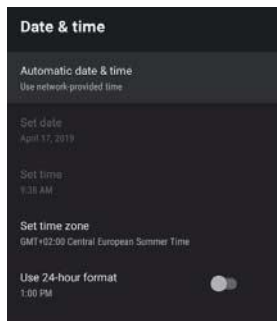 

**Automatic date & time** – Press ▲/▼ button to select the option then press OK button to enter the sub-menu. (Optional: Use network-provided time, Off)

### NOTE

- Manually adjusting date & time settings will automatically change the **Automatic date & time** to OFF .


**Set date** – Press ▲/▼ button to select the option then press OK button to enter the sub-menu.

**Set time** – Press ▲/▼ button to select the option then press OK button to enter the sub-menu.

**Set time zone** – Press ▲/▼ button to select the option then press OK button to enter the sub-menu.

**Use 24-hour format** – Press ▲/▼ button to select the option then press OK button to choose ON/OFF.
 
## TIME

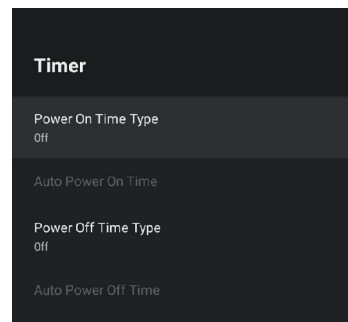


**Power On Timer Type** – Press ▲/▼ button to select the option then press OK button to choose ON/OFF/ONCE.

**Power On Timer** – Press ▲/▼ button to select the option then press OK button to enter the sub-menu.

**Power Off Timer Type** – Press ▲/▼ button to select the option then press OK button to choose ON/OFF/ONCE.


**Power Off Timer** – Press ▲/▼ button to select the option then press OK button to enter the sub-menu.

## LANGUAGE

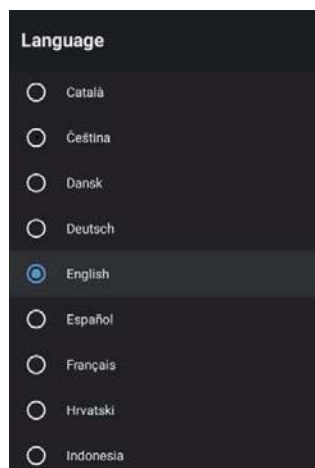 

**Language** – Press ▲/▼ button to select the option then press OK button to enter the select language.

## KEYBOARD

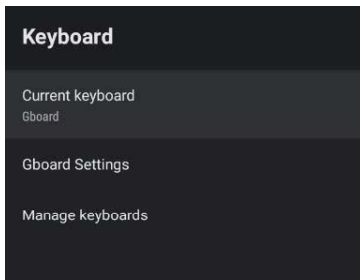 


**Current keyboard** – Press ▲/▼ button to select the option then press OK button to enter the sub-menu.

**Gboard Settings** – Press ▲/▼ button to select the option then press OK button to enter the sub-menu.

**Manage keyboards** – Press ▲/▼ button to select the option then press OK button to enter the sub-menu.

## INPUTS

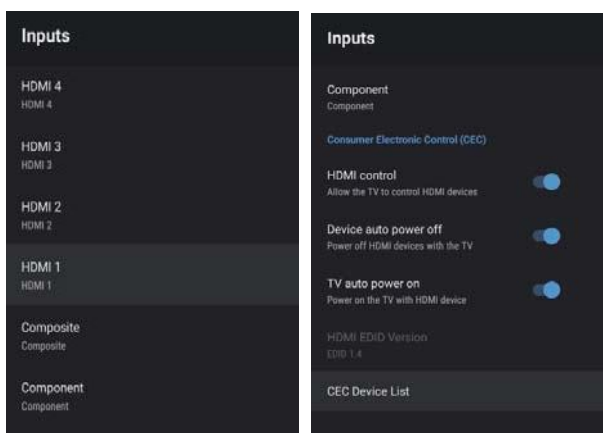 

**Inputs** – Press ▲/▼ button to select the option then press OK button to enter the sub-menu.

**HDMI control** – Press ▲/▼ button to select the option then press OK button to choose ON/OFF.


**Device auto power off** – Press ▲/▼ button to select the option then press OK button to choose ON/OFF.

**TV auto power on** – Press ▲/▼ button to select the option then press OK button to choose ON/OFF.

**HDMI EDID Version** – show EDID version.

**CEC Device List** – Press ▲/▼ button to select the option then press OK button to enter the sub-menu.

## POWER

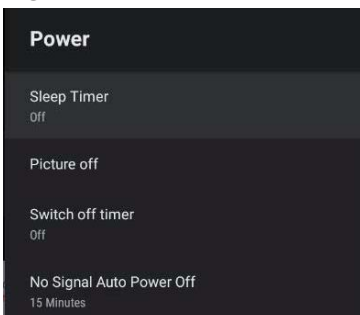 


**Sleep Timer** – Press ▲/▼ button to select the option then press OK button to enter the sub-menu. (Optional: off, 10 minutes, 20 minutes, 30 minutes, 40 minutes, 50 minutes, 60 minutes, 90 minutes, 120 minutes ).

**Picture off** – Press ▲/▼ button to select the option then press OK button to choose ON/OFF.

**Switch off timer** – Press ▲/▼ button to select the option then press OK button to enter the sub-menu. (Optional: off, 30 minutes, 60 minutes, 90 minutes, 120 minutes, 150 minutes, 180 minutes, 210 minutes, 240 minutes )

**No Signal Auto Power Off** – Press ▲/▼ button to select the option then press OK button to enter the sub-menu. (Optional: off, 5 minutes, 10 minutes, 15 minutes, 30 minutes, 60 minutes ).

## PICTURE

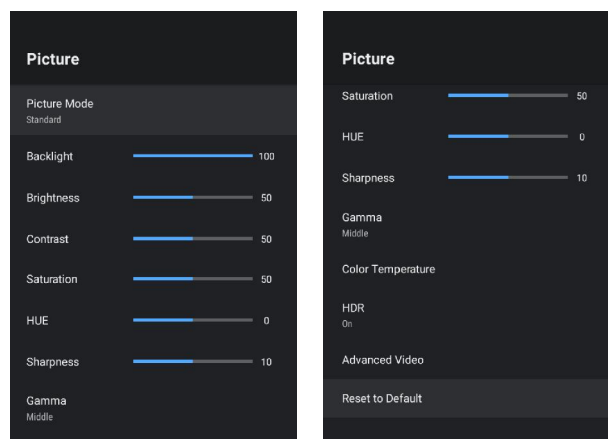 

**Picture Mode** – Press ▲/▼ button to select the option button to enter the sub-menu. (Optional: user, Standard, Vivid, Sport, Movie, Game, Energy saving).

**Backlight/Brightness/Contrast/Saturation/HUE/Sharpness** – Press ▲/▼ button to select the option. Press ◀ to decrease the parameter. Press ▶ to increase the parameter.

**Gamma** – Press ▲/▼ button to select the option then press OK button to enter the sub-menu. (Optional: Dark, middle, Bright).


**Color Temperature** – Press ▲/▼ button to select the option then press OK button to enter the sub-menu.

**HDR** – Press ▲/▼ button to select the option then press OK button to enter the sub-menu. (Optional: on, off).

**Advanced Video** – Press ▲/▼ button to select the option then press OK button to enter the sub-menu.

**Reset to Default** – Reset all settings to the factory defaults.

## SOUND

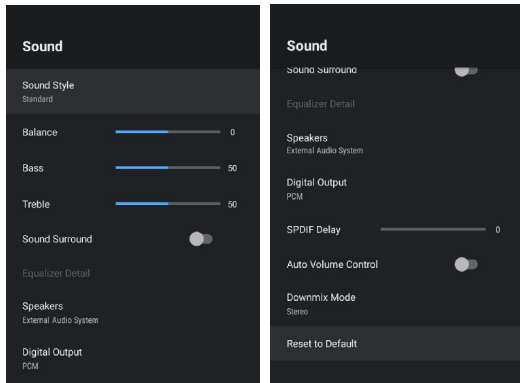 

**Sound style** – Press ▲/▼ button to select the option then press **OK** button to enter the sub-menu. (Optional: user, Standard, Vivid, Sports, Movie, Music, News).

**Balance/Bass/Treble** – Press ▲/▼ button to select the option. Press ◀ to decrease the parameter. Press ▶ to increase the parameter.

**Sound Surround** – Press ▲/▼ button to select the option then press **OK** button to choose ON/OFF.

**Equalizer Detail** – Press ▲/▼ button to select the option then press **OK** button to enter the sub-menu.

**Speakers** – Press ▲/▼ button to select the option then press **OK** button to enter the sub-menu. (Optional: TV Speaker, External Audio System).

**Digital Output** – Press ▲/▼ button to select the option then press **OK** button to enter the sub-menu. (Optional: Auto, Bypass, PCM, Dolby Digital Plus, Dolby Digital).


**SPDIF Delay** – Press ▲/▼ button to select the option. Press ◀ to decrease the parameter. Press ▶ to increase the parameter.

**Auto Volume Control** – Press ▲/▼ button to select the option then press **OK** button to choose ON/OFF.

**Downmix Mode** – Press ▲/▼ button to select the option then press **OK** button to enter the sub-menu. (Optional: Stereo, Surround).

**Reset to Default** – Reset all settings to the factory defaults.


## STORAGE

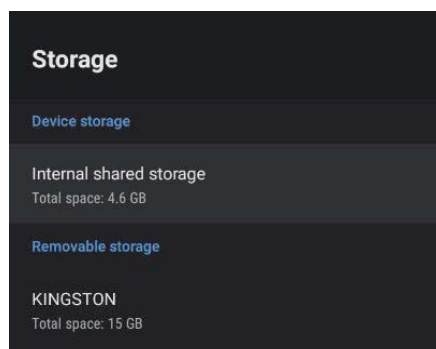 

**Internal shared storage** – Press ▲/▼ button to select the option then press **OK** button to enter the sub-menu.

**Removable Storage** – Press ▲/▼ button to select the option then press **OK** button to enter the sub-menu. (Note: Show external devices if available)


## HOME SCREEN

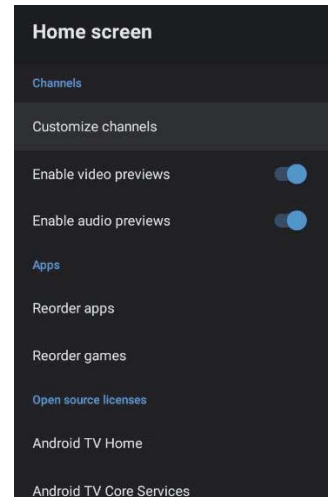 

In this menu, you can set channels, apps, open source licenses.

1. Press ▲/▼ button to select what you want set.
2. Press **OK** button to adjust.
3. After finishing your adjustment, Press **BACK** button return to the previous menu.

## RETAIL MODE

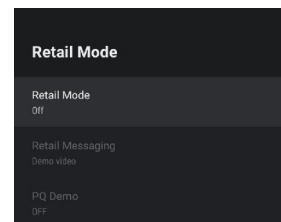 


**Retail mode** – Press ▲/▼ button to select the option then press **OK** button to choose ON/OFF.

**Retail messaging** – Press ▲/▼ button to select the option then press **OK** button to enter the sub-menu. (Note: Demo video, e-POP left, e-POP bottom)

**PQ Demo** – Press ▲/▼ button to select the option then press **OK** button to enter the sub-menu. (Note: OFF, LEFT, RIGHT)


## GOOGLE

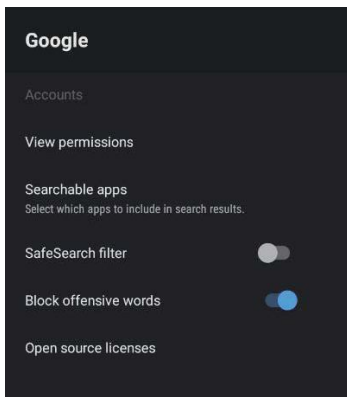 

In this menu, you can set searchable apps, safe search filter, block offensive words, open source licenses.

1. Press ▲/▼ button to select what you want set.
2. Press **OK** button to adjust.
3. After finishing your adjustment, Press **BACK** button return to the previous menu.


## CHROMECASTBUILT-IN

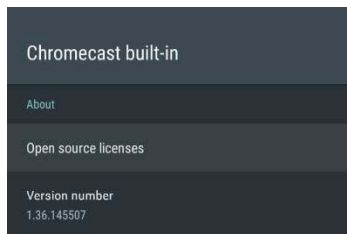 

In this menu, you can read the information and settings of Chromecast

1. Press ▲/▼ button to select what you want set.
2. Press **OK** button to adjust.
3. After finishing your adjustment, Press **BACK** button return to the previous menu.

## SCREEN SAVER

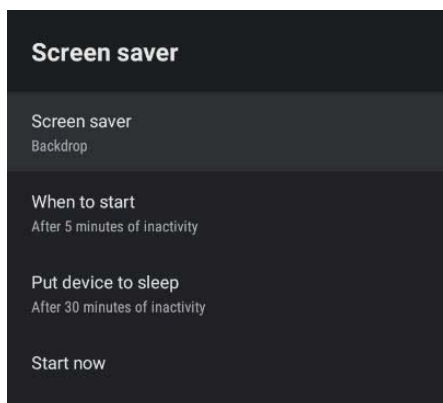 


**Screen saver** – Press ▲/▼ button to select the option then press **OK** button to enter the sub-menu. (Optional: Turn screen off, Backdrop, Colors)

**When to Start** – Press ▲/▼ button to select the option then press **OK** button to enter the sub-menu. (Optional: 5 minutes, 15 minutes, 30 minutes, 1 hour, 2 hours,).

**Put device to sleep** – Press ▲/▼ button to select the option then press **OK** button to enter the sub-menu. (Optional: 30 minutes, 1 hour, 3 hours, 6 hours, 12 hours, Never).


**Start now** – Press ▲/▼ button to select the option then press **OK** button to enter screen saver.

## LOCATION

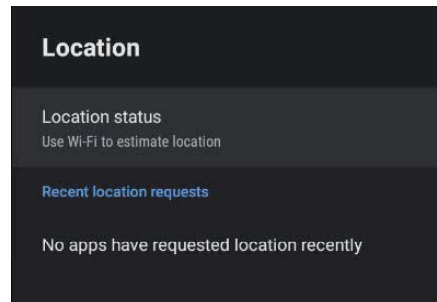 


**Location status** – Press ▲/▼ button to select the option then press **OK** button to enter the sub-menu. (Optional: Use Wi-Fi to estimate location, Off)

## USAGE & DIAGNOSTICS

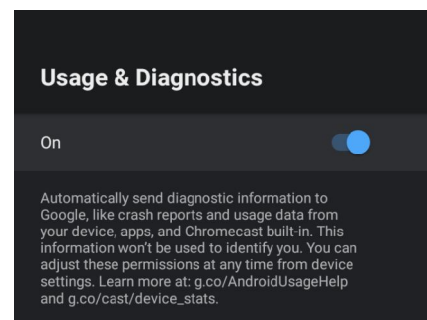 

**Usage & diagnostics** – Press ▲/▼ button to select the option then press **OK** button to choose ON/OFF.

## ACCESSIBILITY

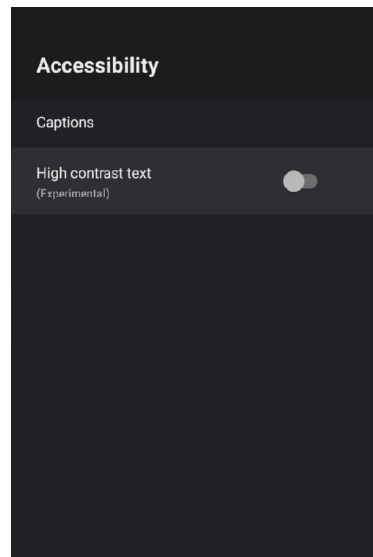 




**Captions** – Press ▲/▼ button to select the option then press **OK** button to enter the sub-menu.

**High contrast text** – Press ▲/▼ button to select the option then press **OK** button to choose ON/OFF.

## RESET

   Press **OK** button to enter the sub-menu. Reset-Erase everything.



## REMOTE&ACCESSORIES

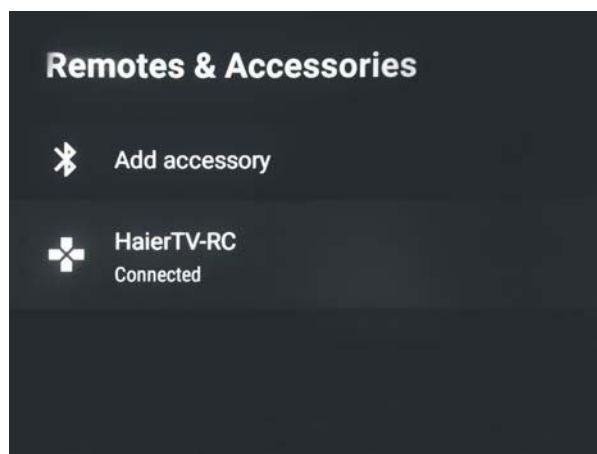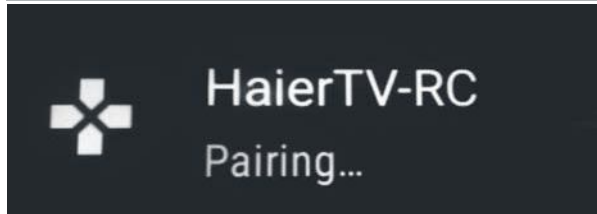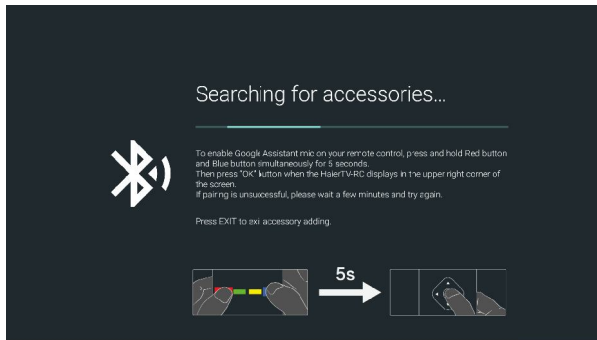


In this menu, you can pair Bluetooth devices.

1. Press the **"RED"** and **"BLUE"** buttons at the bottom of the remote control for 5 seconds.
2. When the LED starts to flash, release it. The remote controller will send the pairing signal to the TV and display the information of the remote control on the right side of the screen.
3. Press the **OK** button to display the pairing. If the paired is displayed, the connection is successful.
4. If the couldn't pair appears, the connection fails. Wait 30 seconds and then press the **"RED"** and **"BLUE"** buttons at the bottom of the remote control for 5 seconds to repeat the previous steps.
5. Press **EXIT** or **BACK** button return to the previous menu.

## ADD AND USE OF MULTI MEDIA PLAYER

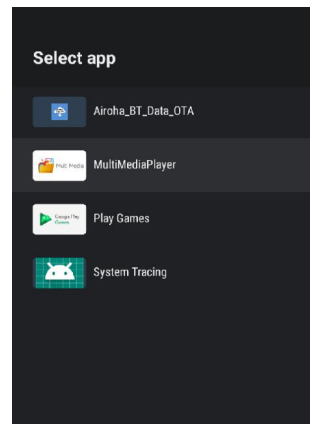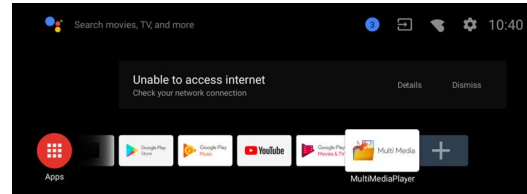  

 1. In the HOME interface, select the + icon in the APP column to add the application, and click OK. Press up and down to select the MultiMediaPlayer application, and click OK to add it to the HOME interface.

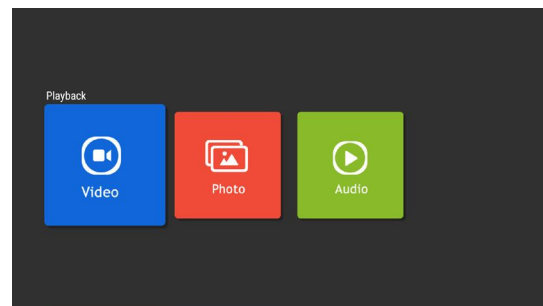

2. Select OK key to enter Multi Media Player and display Video, Photo, Audio. After inserting the usb flash drive, you can view the corresponding files in the usb flash drive.

### NOTE

The menu may be different depending on when you purchased the TV.

## TROUBLESHOOTING

Please make these simple checks before calling service. These tips may save you time and money since charges for receiver installation and adjustments of customer controls are not covered under your warranty.

Symptoms	Items to Check and Actions to Follow
"Ghost" or double image	<ul style="list-style-type: none"> <li>This may be caused by obstruction to the antenna due to high rise buildings or hills. Using a highly directional antenna may improve the picture.</li> </ul>
No power	<ul style="list-style-type: none"> <li>Check if the TV's AC power cord is plugged into the outlet.</li> <li>Unplug the TV, wait for 60 seconds. Then reinsert plug into the outlet and turn on the TV again.</li> </ul>
No picture	<ul style="list-style-type: none"> <li>Check antenna connections at the rear of the TV to see if it is properly connected to the TV.</li> <li>Possible broadcast station trouble. Try another channel.</li> <li>Adjust the contrast and brightness settings.</li> <li>Check the Closed Captions control. Some TEXT modes could block the screen.</li> </ul>
Good picture but no sound	<ul style="list-style-type: none"> <li>Increase the volume level by pressing the <b>VOL+</b> button on the remote control or on the TV side control panel.</li> <li>Press the <b>MUTE</b> button on the remote control to ensure mute is off.</li> </ul>
Good sound but poor color	<ul style="list-style-type: none"> <li>Adjust the contrast, color and brightness settings.</li> </ul>
Poor picture	<ul style="list-style-type: none"> <li>Poor picture quality may occur when an activated S-VHS camera or camcorder is connected to your TV and other peripherals at the same time. Switch off one of the peripherals.</li> </ul>
Snowy picture and noise	<ul style="list-style-type: none"> <li>Check the antenna connection.</li> </ul>
Horizontal dotted line	<ul style="list-style-type: none"> <li>This may be caused by electrical interference (e.g. hair dryer, nearby neon lights, etc.) Turn off the equipment.</li> </ul>
Television not responding to remote control	<ul style="list-style-type: none"> <li>Check whether the batteries are working. Replace if necessary.</li> <li>Clean the remote control sensor lens on the TV.</li> <li>You can still use the buttons on the side of your TV.</li> </ul>
Pixels (dots) that are always dark or always lit	<ul style="list-style-type: none"> <li>Your TV is precision-manufactured using an extremely high level of technology. However, sometimes pixels may not display correctly. These types of occurrences are inherent to this type of product and do not constitute a defective product.</li> </ul>

# PRODUCT SPECIFICATION

## 50" UHD Digital LED LCD TV

<b>Television picture quality:</b>	UHD Integrated digital. Screen Size: 126cm Resolution 3840x2160 pixels 50Hz.
<b>DTV Tuner Decoder</b>	DVB-T, DVB-C, DVB-T2, DVB-S2 16/32/64/128/256 QAM modulation MPEG2,MPEG4,H.265
<b>Connectivity:</b>	1 Optical port 2 USB port 1 RJ45 4 HDMI sockets 1 VIDEO socket 1 L socket 1 R socket 2 RF socket 1 YPbPr socket 1 EARPHONE port 1 TF socket 1 CI slot Supported Systems:PAL+SECAM Storage channel number: 1000(DTV),100(ATV) TV (RF) :75 Ω Imbalance AV Video-Input:75 Ω ,1V-P,RCA AV Audio-Input:20K Ω ,500mV RMS YPbPr/HDMI Video Input:480i, 480p, 576i, 576p, 720p, 1080i, 1080p
<b>Sound quality:</b>	Stereo sound system. 2 x 15 watts RMS power output.
<b>Standby Power consumption</b>	≤ 0.5W
<b>Digital features:</b>	Digitally interactive. Digital text. Digital video broadcasting (DVB) subtitles available. Auto setup. Auto scan for new channels. Now and next programme guide. 7 day electronic programme guide (EPG). Top up TV compatible. CI slot. Audio description compatible.
<b>Additional features:</b>	UHF/VHF tuner;Sleep timer;Parental Guidance;Picture and text Remote control batteries required 2 x AAA (included). ESA Mount Size: 200 mm Package Size (WxHxD): 1230x753x137 mm Set Size (WxHxD) with Stand: 1122x702x278 mm Set Size (WxHxD) without Stand: 1122x646x65 mm Package weight : 14.4kg Set weight with stand: 11.4kg Set weight without stand: 11.2kg

\* The part specifications of this TV set provided here are for reference only.  
Differences may occur as product technology is updated.  
Design and specifications are subject to change without notice.

# PRODUCT SPECIFICATION

## 55" UHD Digital LED LCD TV

<b>Television picture quality:</b>	UHD Integrated digital. Screen Size: 139cm Resolution 3840x2160 pixels 50Hz.
<b>DTV Tuner Decoder</b>	DVB-T, DVB-C, DVB-T2, DVB-S2 16/32/64/128/256 QAM modulation MPEG2,MPEG4,H.265
<b>Connectivity:</b>	1 Optical port 2 USB port 1 RJ45 4 HDMI sockets 1 VIDEO socket 1 L socket 1 R socket 2 RF socket 1 YPbPr socket 1 EARPHONE port 1 TF socket 1 CI slot Supported Systems:PAL+SECAM Storage channel number: 1000(DTV),100(ATV) TV (RF) :75 Ω Imbalance AV Video-Input:75 Ω ,1V-P,RCA AV Audio-Input:20K Ω ,500mV RMS YPbPr/HDMI Video Input:480i, 480p, 576i, 576p, 720p, 1080i, 1080p
<b>Sound quality:</b>	Stereo sound system. 2 x 15 watts RMS power output.
<b>Standby Power consumption</b>	≤ 0.5W
<b>Digital features:</b>	Digitally interactive. Digital text. Digital video broadcasting (DVB) subtitles available. Auto setup. Auto scan for new channels. Now and next programme guide. 7 day electronic programme guide (EPG). Top up TV compatible. CI slot. Audio description compatible.
<b>Additional features:</b>	UHF/VHF tuner;Sleep timer;Parental Guidance;Picture and text Remote control batteries required 2 x AAA (included). ESA Mount Size: 400x200 mm Package Size (WxHxD): 1350x810x150 mm Set Size (WxHxD) with Stand: 1234x768.4x 277.6 mm Set Size (WxHxD) without Stand: 1234x719x73 mm Package weight : 16.5kg Set weight with stand: 12.36kg Set weight without stand: 12.18kg

\* The part specifications of this TV set provided here are for reference only.  
Differences may occur as product technology is updated.  
Design and specifications are subject to change without notice.

# PRODUCT SPECIFICATION

## 58" UHD Digital LED LCD TV

<b>Television picture quality:</b>	UHD Integrated digital. Screen Size: 147cm Resolution 3840x2160 pixels 50Hz.
<b>DTV Tuner Decoder</b>	DVB-T, DVB-C, DVB-T2, DVB-S2 16/32/64/128/256 QAM modulation MPEG2,MPEG4,H.265
<b>Connectivity:</b>	1 Optical port 2 USB port 1 RJ45 4 HDMI sockets 1 VIDEO socket 1 L socket 1 R socket 2 RF socket 1 YPbPr socket 1 EARPHONE port 1 TF socket 1 CI slot Supported Systems:PAL+SECAM Storage channel number: 1000(DTV),100(ATV) TV (RF) :75 Ω Imbalance AV Video-Input:75 Ω ,1V-P,RCA AV Audio-Input:20K Ω ,500mV RMS YPbPr/HDMI Video Input:480i, 480p, 576i, 576p, 720p, 1080i, 1080p
<b>Sound quality:</b>	Stereo sound system. 2 x 15 watts RMS power output.
<b>Standby Power consumption</b>	≤ 0.5W
<b>Digital features:</b>	Digitally interactive. Digital text. Digital video broadcasting (DVB) subtitles available. Auto setup. Auto scan for new channels. Now and next programme guide. 7 day electronic programme guide (EPG). Top up TV compatible. CI slot. Audio description compatible.
<b>Additional features:</b>	UHF/VHF tuner;Sleep timer;Parental Guidance;Picture and text Remote control batteries required 2 x AAA (included). ESA Mount Size: 400x200 mm Package Size (WxHxD): 1430X865X170 mm Set Size (WxHxD) with Stand: 1297.98x808.21x277.57 mm Set Size (WxHxD) without Stand: 1297.98x753.04x64.9 mm Package weight : 19.2kg Set weight with stand: 14.5kg Set weight without stand: 14.3kg

\* The part specifications of this TV set provided here are for reference only.  
Differences may occur as product technology is updated.  
Design and specifications are subject to change without notice.

# PRODUCT SPECIFICATION

## 65" UHD Digital LED LCD TV

<b>Television picture quality:</b>	UHD Integrated digital. Screen Size: 165cm Resolution 3840x2160 pixels 50Hz.
<b>DTV Tuner Decoder</b>	DVB-T, DVB-C, DVB-T2, DVB-S2 16/32/64/128/256 QAM modulation MPEG2,MPEG4,H.265
<b>Connectivity:</b>	1 Optical port 2 USB port 1 RJ45 4 HDMI sockets 1 VIDEO socket 1 L socket 1 R socket 2 RF socket 1 YPbPr socket 1 EARPHONE port 1 TF socket 1 CI slot Supported Systems:PAL+SECAM Storage channel number: 1000(DTV),100(ATV) TV (RF) :75 Ω Imbalance AV Video-Input:75 Ω ,1V-P,RCA AV Audio-Input:20K Ω ,500mV RMS YPbPr/HDMI Video Input:480i, 480p, 576i, 576p, 720p, 1080i, 1080p
<b>Sound quality:</b>	Stereo sound system. 2 x 15 watts RMS power output.
<b>Standby Power consumption</b>	≤ 0.5W
<b>Digital features:</b>	Digitally interactive. Digital text. Digital video broadcasting (DVB) subtitles available. Auto setup. Auto scan for new channels. Now and next programme guide. 7 day electronic programme guide (EPG). Top up TV compatible. CI slot. Audio description compatible.
<b>Additional features:</b>	UHF/VHF tuner;Sleep timer;Parental Guidance;Picture and text Remote control batteries required 2 x AAA (included). ESA Mount Size: 400x200 mm Package Size (WxHxD): 1650x992x265 mm Set Size (WxHxD) with Stand: 1453.28x890.3x308 mm Set Size (WxHxD) without Stand: 1453.28x836.5x71.15 mm Package weight : 23.9 kg Set weight with stand: 17.2 kg Set weight without stand: 16.9 kg

\* The part specifications of this TV set provided here are for reference only.  
Differences may occur as product technology is updated.  
Design and specifications are subject to change without notice.

# Haier