




(1801-REV00)

UK65* UK71* UK70*

Quick Start Guide

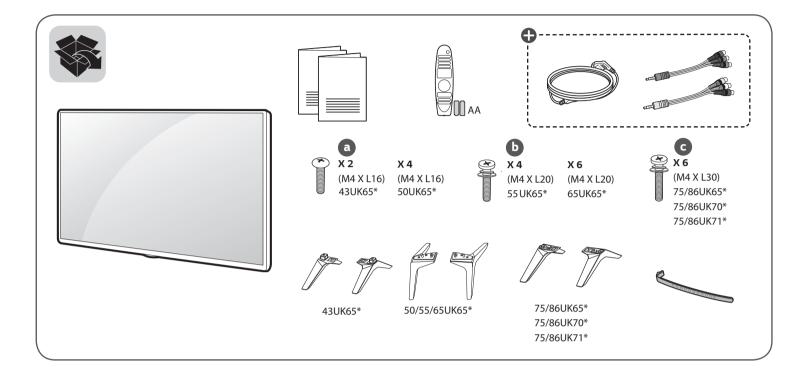




Unpacking
Check your product box for the following items. If there are any missing accessories, contact the local dealer where you purchased your product. The illustrations in this manual may differ from the actual product and item.

: Depending on model *Image may vary depending on models.



English

- Read **Safety and Reference**.
- For the power supply and power consumption, refer to the label attached to the product.

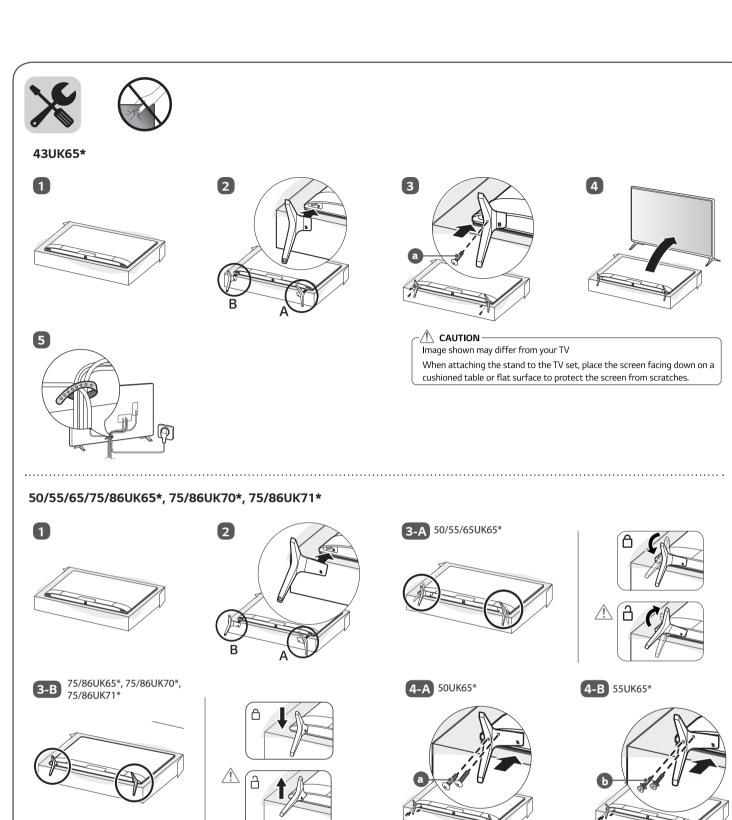

6

Image shown may differ from your TV

When attaching the stand to the TV set, place the screen facing down on a

Image shown may vary depending on model.

∠ ∴ CAUTION



• Depending on model


4-C 65/75/86UK65*, 75/86UK70*, 75/86UK71*

5










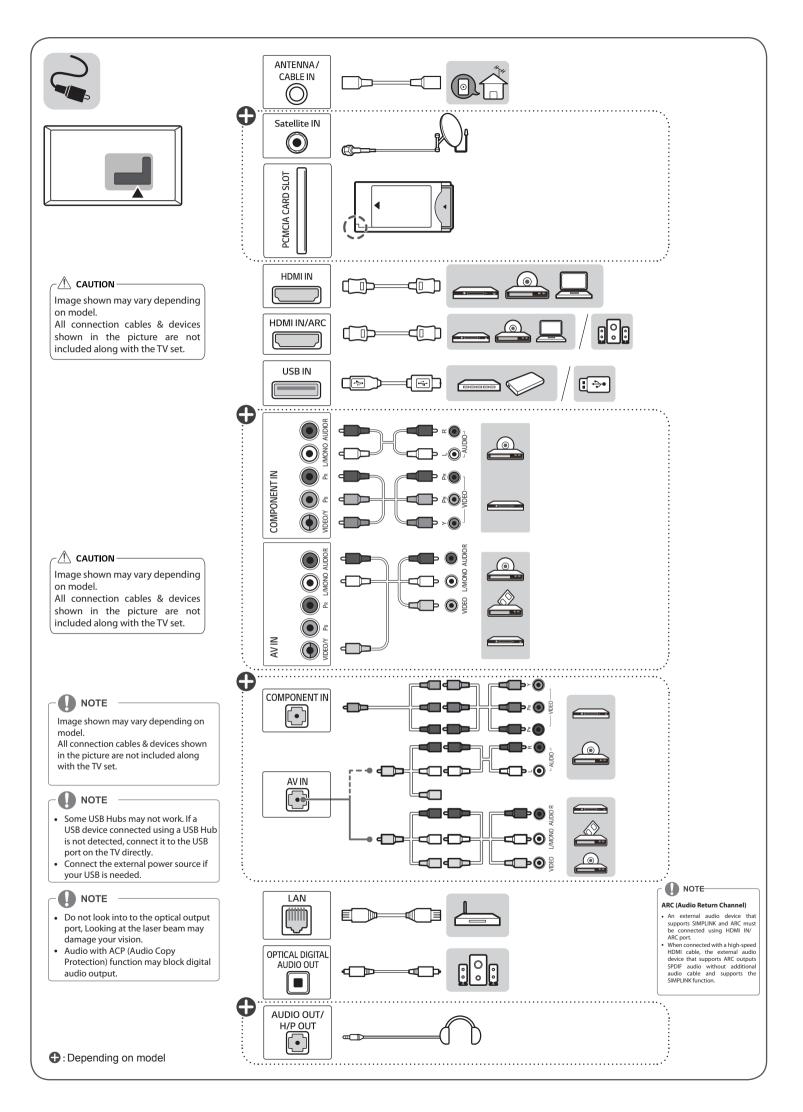


(

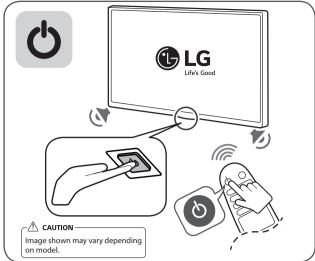

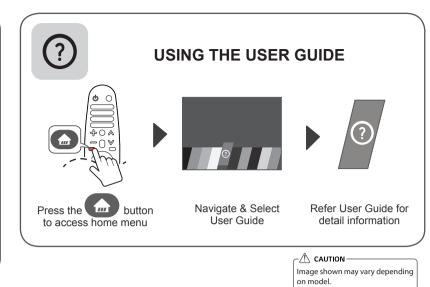

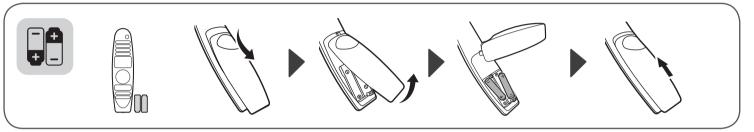

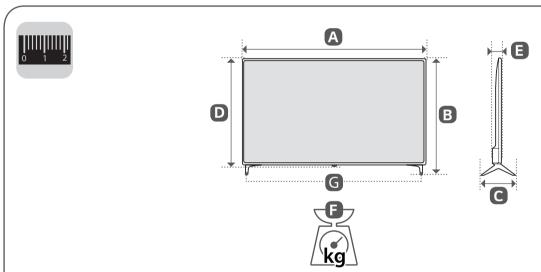

	A	В	C	D	3	G	F-G
			(mm)			(kg)	
43UK6500PTC 43UK6560PTC	975	625	216.4	571	86.4	9.1	9.0
50UK6500PTC 50UK6560PTC	1128	716	230.8	658	86.4	11.7	11.5
55UK6500PVA 55UK6500PTC 55UK6500YVA	1237	777	230.8	718	63.8	16.2	16.0
65UK6500PVA 65UK6500PTC 65UK6500YVA	1456	906	268.8	841	64.8	26.3	26.0
75UK6500PTB 75UK7050PVA 75UK7050YVA 75UK7150PTA	1693	1048	345.0	978	88.8	35.4	34.6
86UK6500PTB 86UK7050PVA 86UK7050YVA 86UK7150PTA	1943	1188	345.0	1118	93.3	45.0	44.2
Power requirement				AC 100-240 V ~ 50 / 60 Hz			

CAUTION Image shown may vary depending on model.