



NAN080*

Quick Start Guide

 












Unpacking
Check your product box for the following items. If there are any missing accessories, contact the local dealer where you purchased your product. The illustrations in this manual may differ from the actual product and item.


















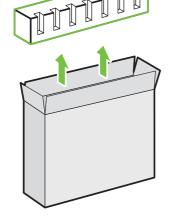



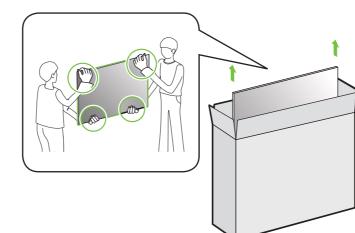




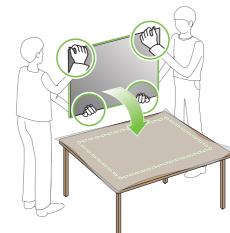





- A CAUTION - Image shown may differ from your TV


When attaching the stand to the TV set, place the screen facing down on a cushioned table or flat surface to protect the screen from scratches.

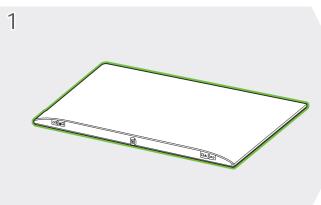


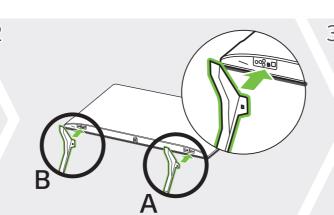


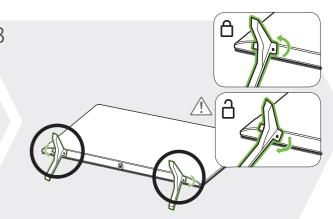



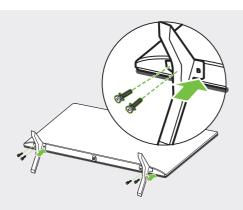


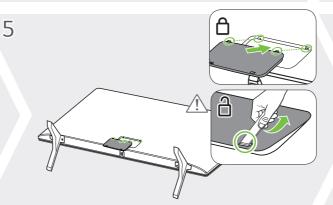

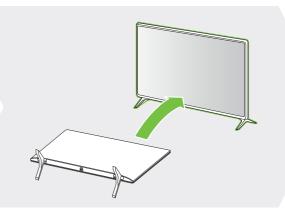



6



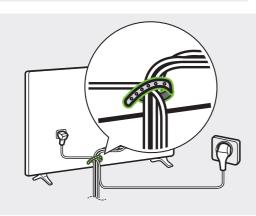



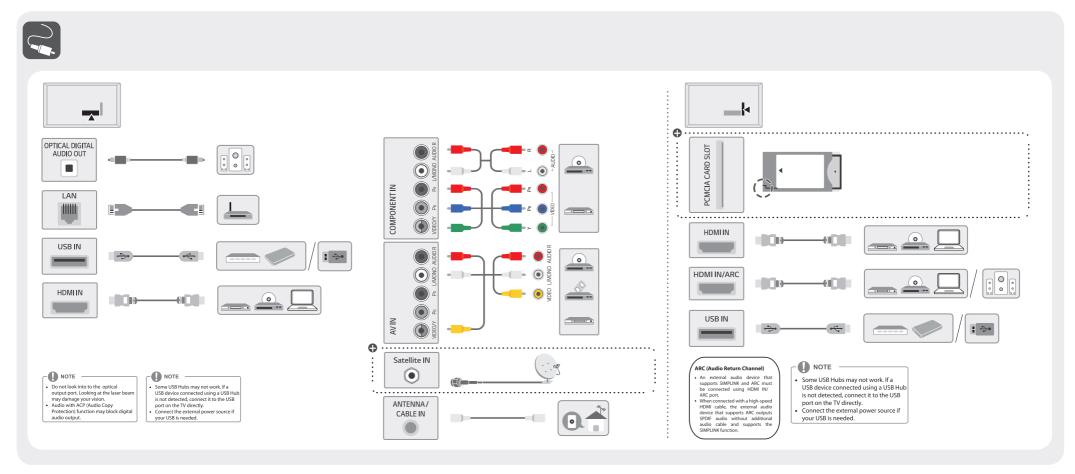

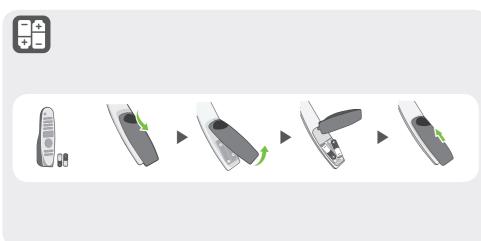










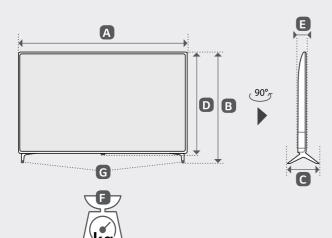

	A	В	C	D	a	(3)	F-G
	(mm)					(kg)	
49NANO80TNA 49NANO80VNA	1096	695	232	640	63.6	14.4	14.2
55NANO80TNA 55NANO80VNA	1232	771	232	716	63.6	17.6	17.4
Power requirement				AC 100-240 V ~ 50 / 60 Hz			



ENGLISH Read Safety and Reference.

Due to environmental government regulations about imports and battery destruction in Colombia, TVs will not include the batteries for the remote control.

Easy Setup Guid

Please read this manual carefully before operating your set and retain it for future reference.

: Depending upon model