


UN72*
UN73*


Quick Start Guide

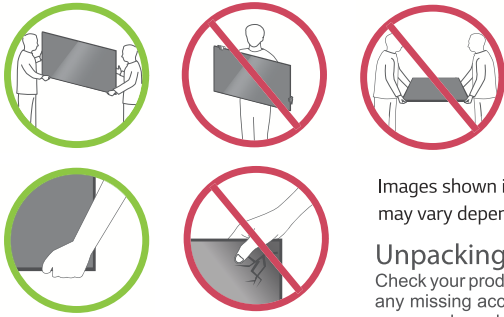

Images shown in manual
may vary depending on model


Unpacking

Check your product box for the following items. If there are any missing accessories, contact the local dealer where you purchased your product. The illustrations in this manual may differ from the actual product and item.

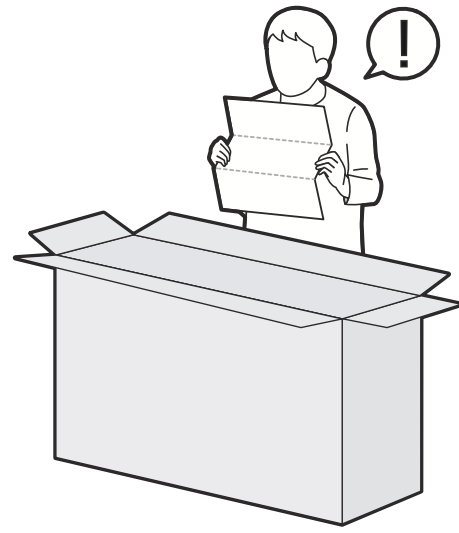


1


49/55UN72*
49/50/55UN73*

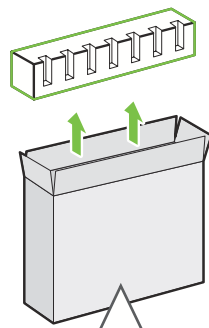


2

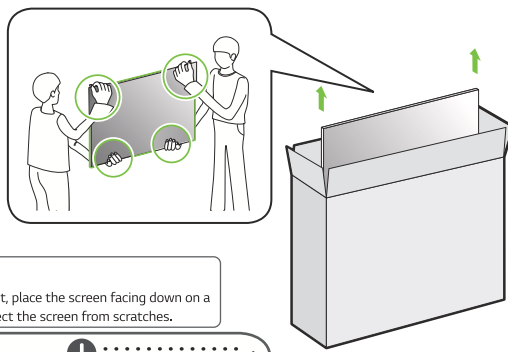

3

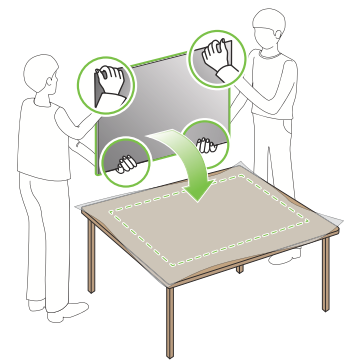


CAUTION
Image shown may differ from your TV
When attaching the stand to the TV set, place the screen facing down on a cushioned table or flat surface to protect the screen from scratches.

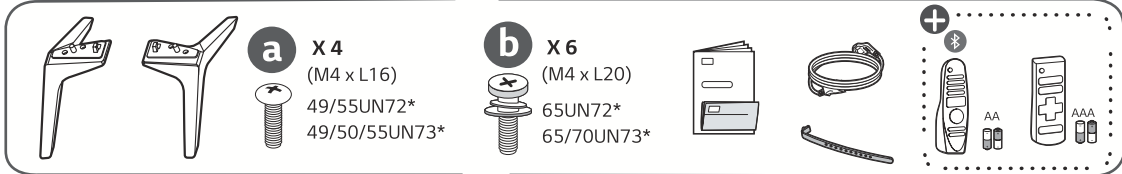


1


65UN72*
65/70UN73*

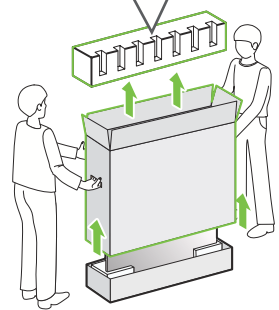


2

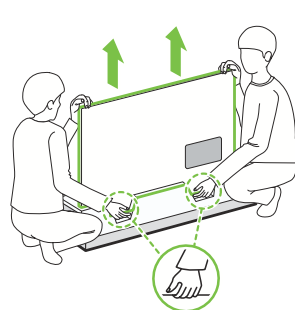


3

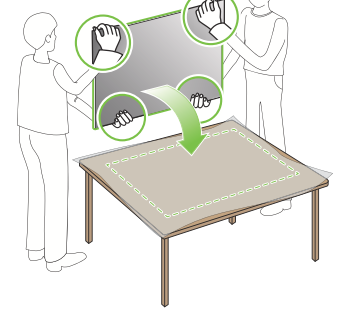

1

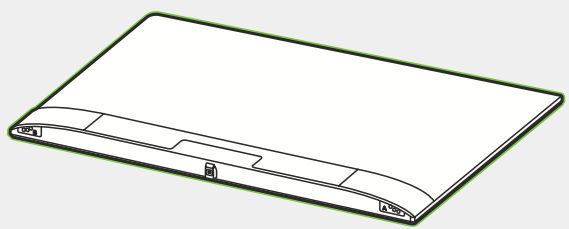


2

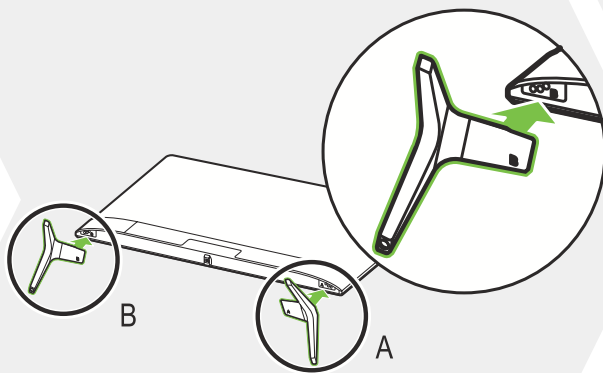


3-A

49/55/65UN72*
49/50/55/65UN73*

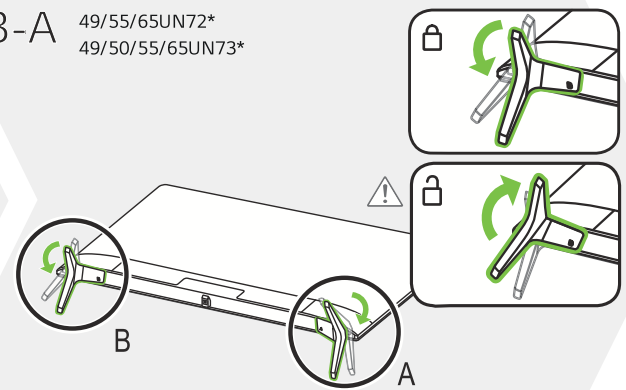


3-B

70UN73*

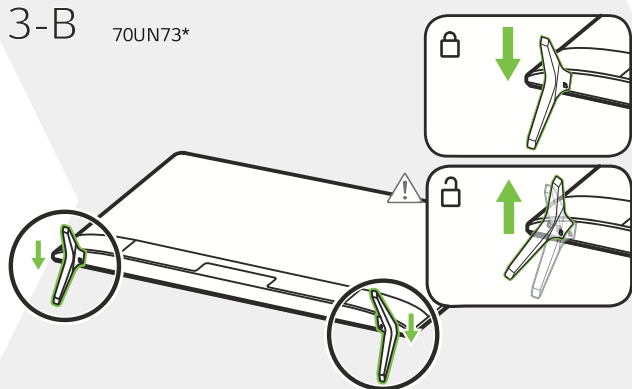


4-A

49/55UN72*
49/50/55UN73*

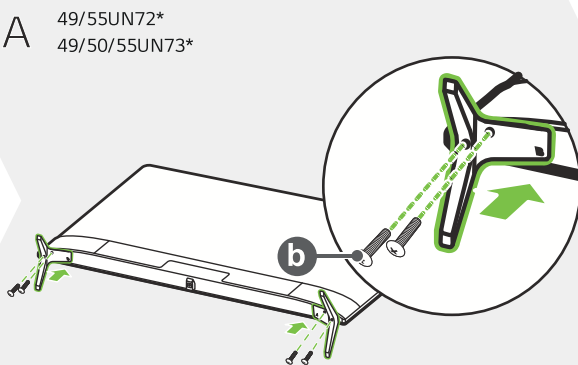


4-B



65UN72*
65/70UN73*

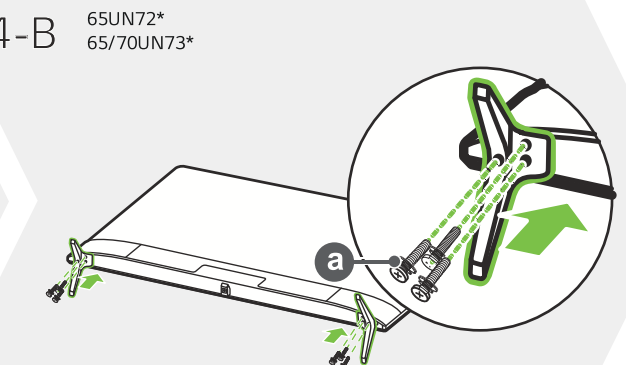


5

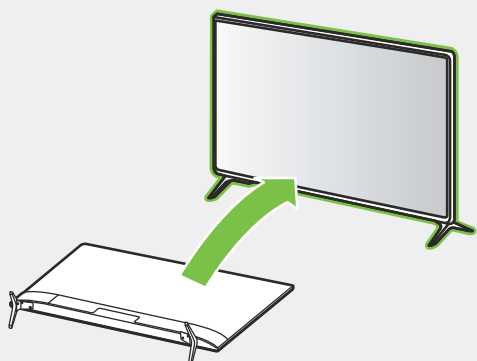

6

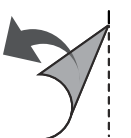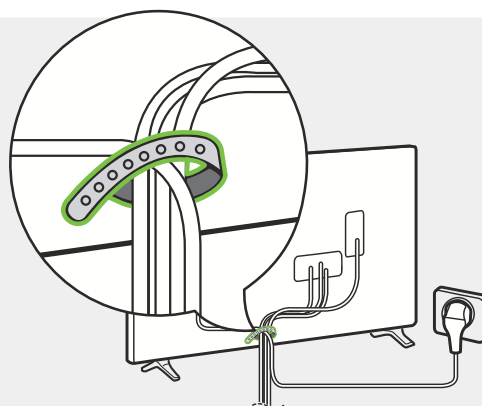

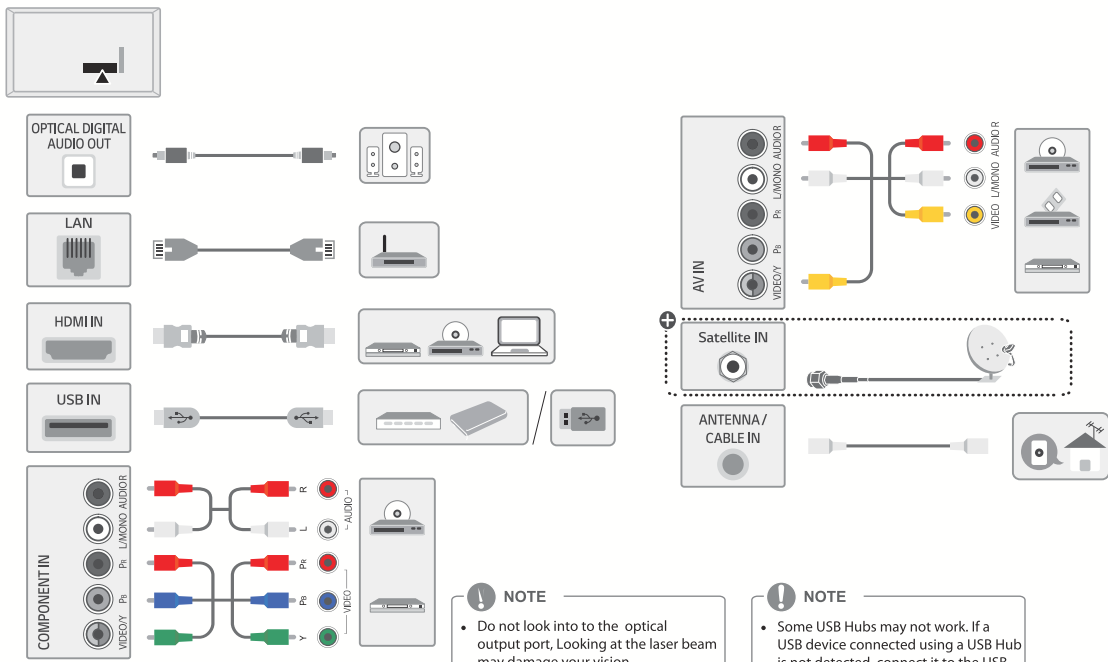


NOTE

- Do not look into the optical output port. Looking at the laser beam may damage your vision.
- Audio with ACP (Audio Copy Protection) function may block digital audio output.

NOTE

- Some USB Hubs may not work. If a USB device connected using a USB Hub is not detected, connect it to the USB port on the TV directly.
- Connect the external power source if your USB is needed.




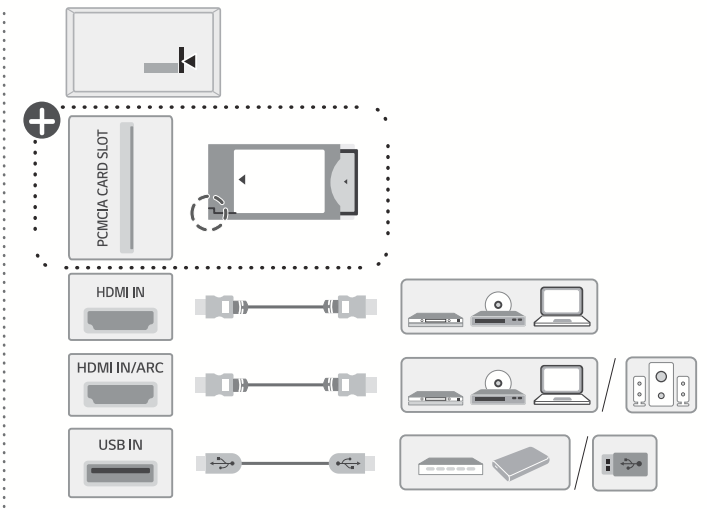


ARC (Audio Return Channel)

- An external audio device that supports SIMPLINK and ARC must be connected using HDMI IN/ARC port.
- When connected with a high-speed HDMI cable, the external audio device that supports ARC outputs SPDIF audio without additional audio cable and supports the SIMPLINK function.

NOTE

- Some USB Hubs may not work. If a USB device connected using a USB Hub is not detected, connect it to the USB port on the TV directly.
- Connect the external power source if your USB is needed.

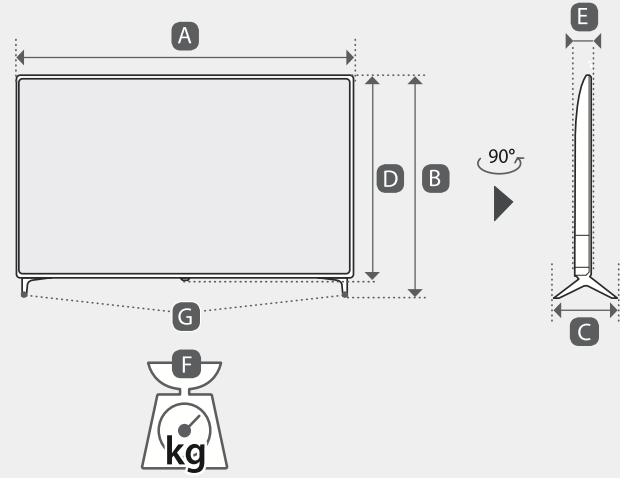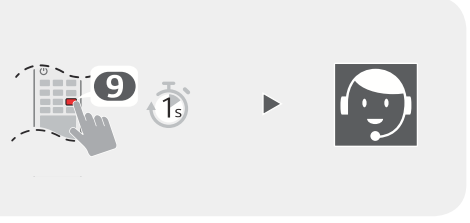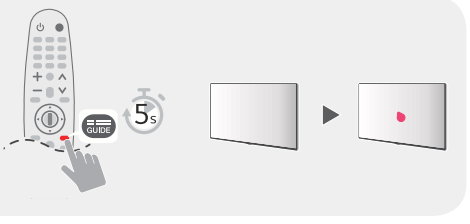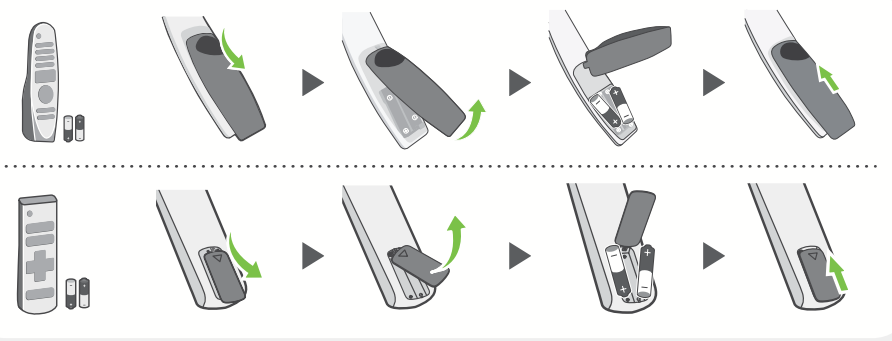

	A	B	C	D	E	F	F-G
	(mm)				(kg)		
49UN7200PTF 49UN7290PTF	1110	705	235	650	81.1	11.3	11.1
55UN7200PTF 55UN7290PTF	1244	783	235	726	87.1	14.4	14.3
65UN7200PTF 65UN7290PTF	1463	910	255	850	87.8	21.5	21.3
49UN7340PVC 49UN7300PTC 49UN7350PTD	1110	709	231	650	81.1	11.3	11.1
50UN7340PVC 50UN7300PTC	1130	722	231	663	86.3	11.5	11.3
55UN7340PVC 55UN7300PTC 55UN7350PTD	1244	786	231	726	87.1	14.5	14.3
65UN7340PVC 65UN7300PTC 65UN7350PTD	1463	914	269	850	87.8	21.6	21.3
70UN7380PVC 70UN7300PTC 70UN7350PTD	1578	984	299	913	91.1	31.4	30.7
Power requirement				AC 100-240 V - 50 / 60 Hz			



ENGLISH Read **Safety and Reference**.
Due to environmental government regulations about imports and battery destruction in Colombia, TVs will not include the batteries for the remote control.

Easy Setup Guide
Please read this manual carefully before operating your set and retain it for future reference.

⊕ : Depending upon model