


UN71*

Quick Start Guide

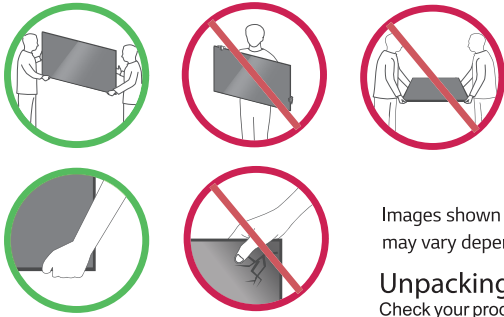


Images shown in manual may vary depending on model

Unpacking


Check your product box for the following items. If there are any missing accessories, contact the local dealer where you purchased your product. The illustrations in this manual may differ from the actual product and item.





1
49/55UN71*

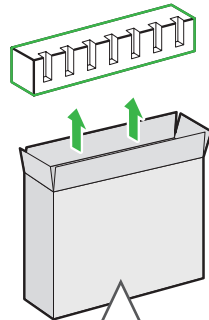


2

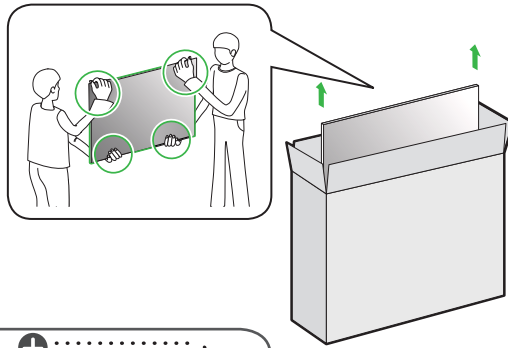


3

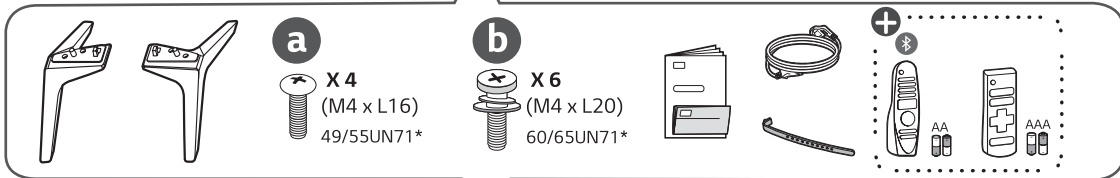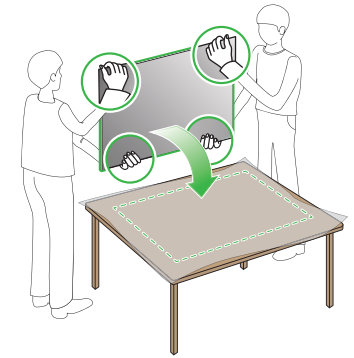


1
60/65UN71*

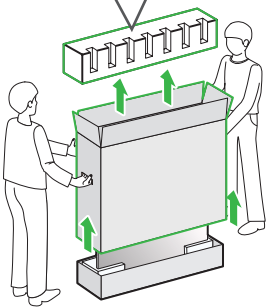









2

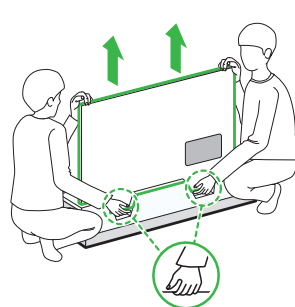


3

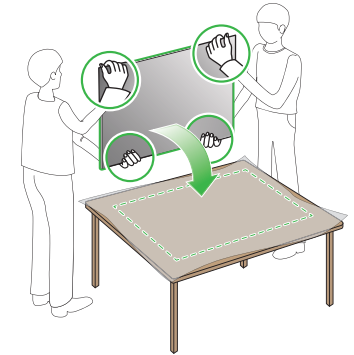

CAUTION
Image shown may differ from your TV
When attaching the stand to the TV set, place the screen facing down on a cushioned table or flat surface to protect the screen from scratches.

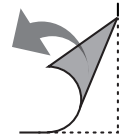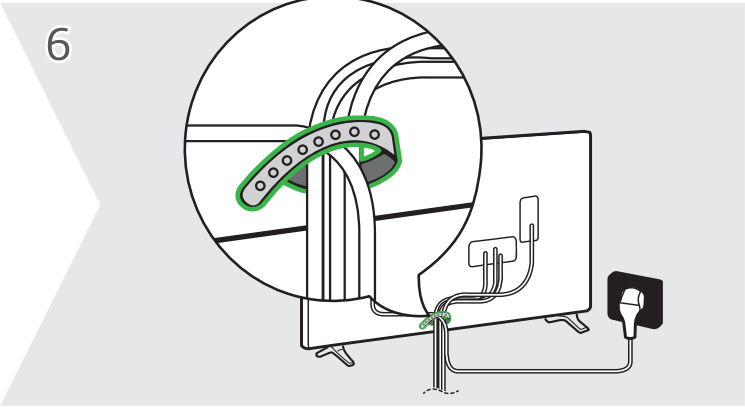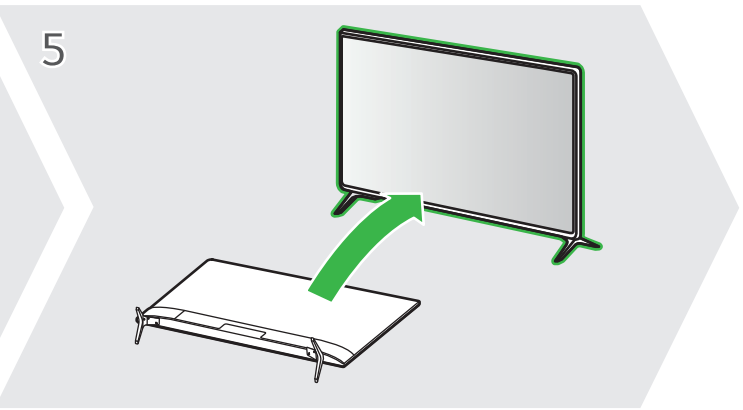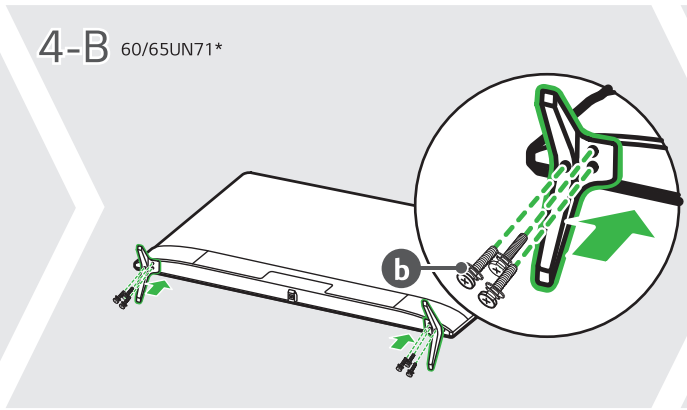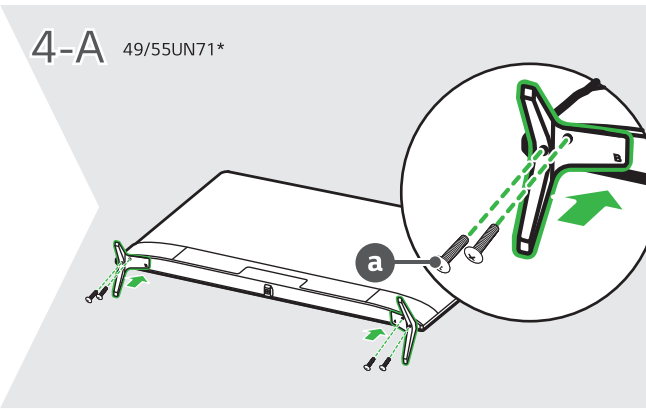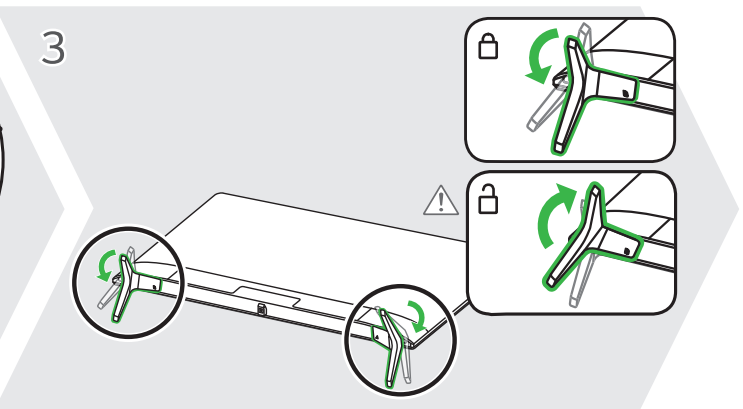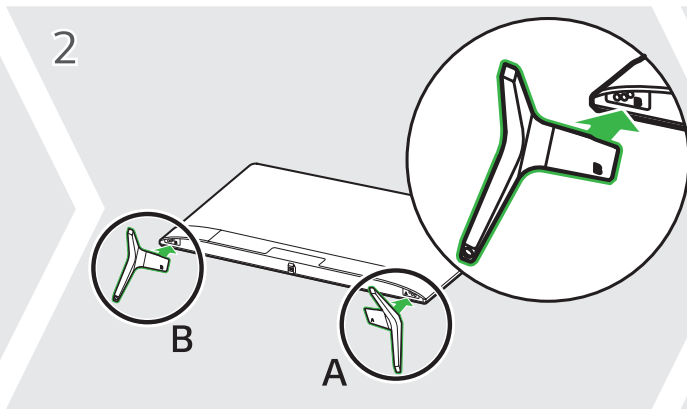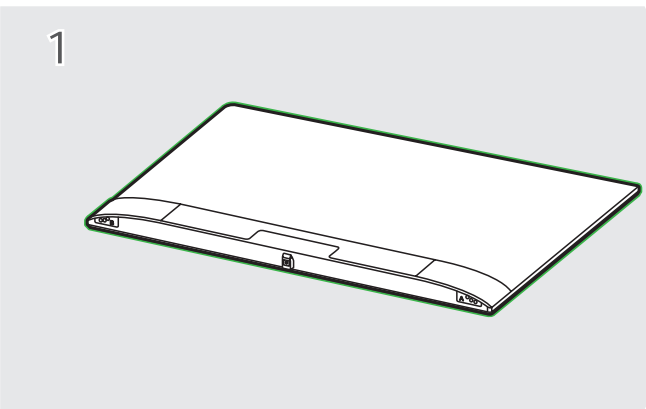


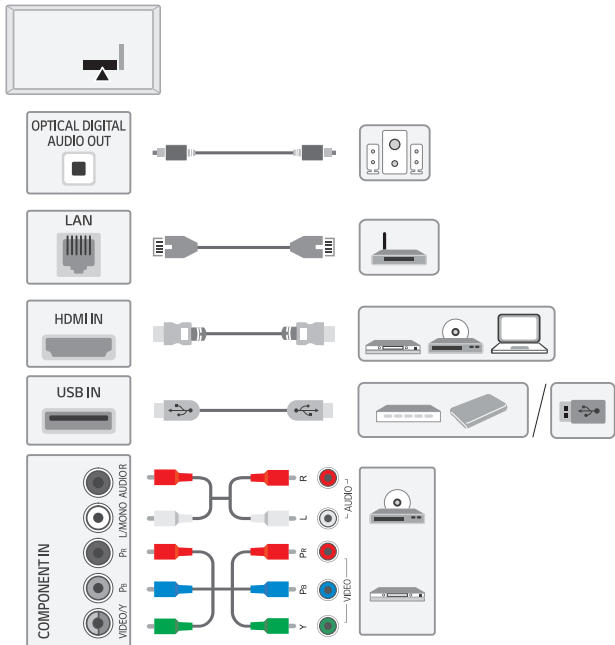


NOTE

- Do not look into the optical output port. Looking at the laser beam may damage your vision.
- Audio with ACP (Audio Copy Protection) function may block digital audio output.

NOTE

- Some USB Hubs may not work. If a USB device connected using a USB Hub is not detected, connect it to the USB port on the TV directly.
- Connect the external power source if your USB is needed.

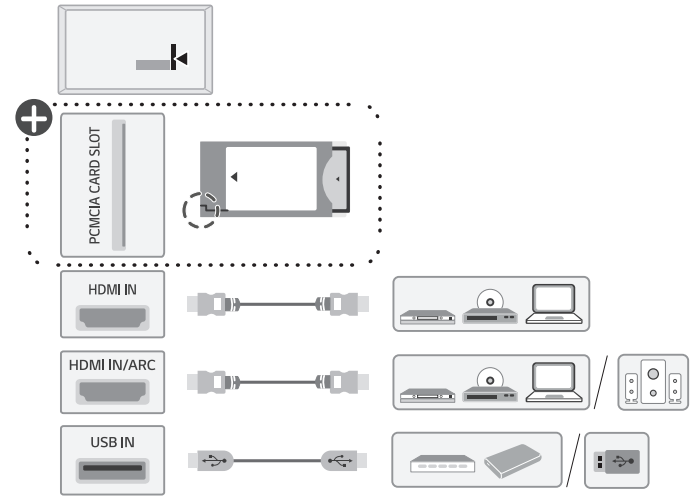
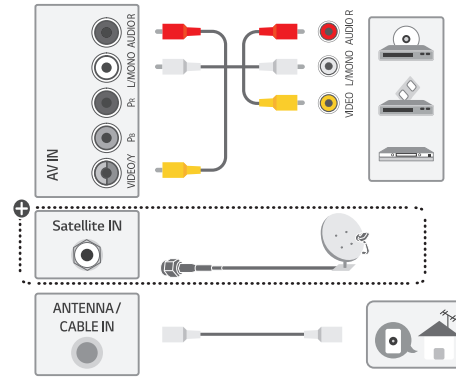


ARC (Audio Return Channel)

- An external audio device that supports SIMPLINK and ARC must be connected using HDMI IN/ARC port.
- When connected with a high-speed HDMI cable, the external audio device that supports ARC outputs SPDIF audio without additional audio cable and supports the SIMPLINK function.

NOTE

- Some USB Hubs may not work. If a USB device connected using a USB Hub is not detected, connect it to the USB port on the TV directly.
- Connect the external power source if your USB is needed.

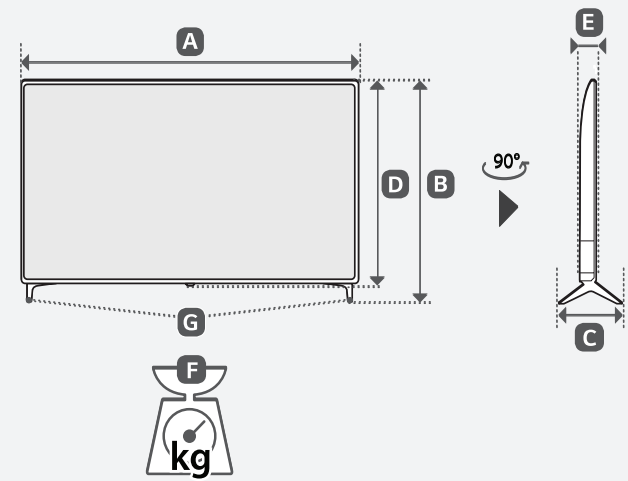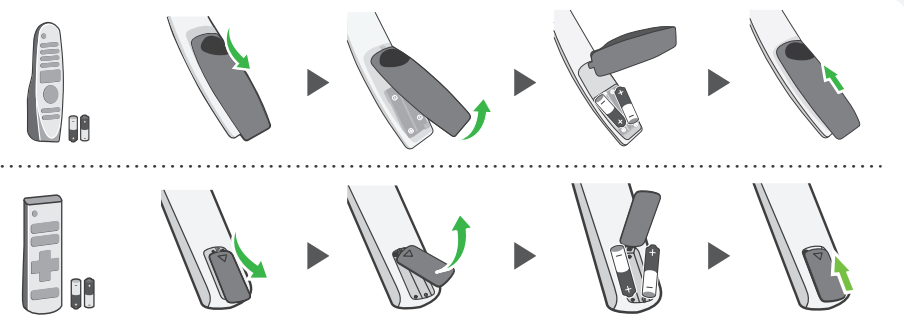

	A	B	C	D	E	F	F-G
	(mm)				(kg)		
49UN7100PTA 49UN7190PTA 49UN7100PVA	1108	705	235	649	79.5	11.0	10.9
55UN7100PVA 55UN7100PTA 55UN7190PTA	1247	783	235	728	88.3	13.8	13.7
60UN7100PVA 60UN7150PTA 60UN7100PTA	1368	857	255	796	89.1	19.6	19.4
65UN7100PVA	1468	913	255	854	89.9	21.2	21.0
Power requirement					AC 100-240 V ~ 50 / 60 Hz		



ENGLISH

Read Safety and Reference.

Due to environmental government regulations about imports and battery destruction in Colombia, TVs will not include the batteries for the remote control.

Easy Setup Guide

Please read this manual carefully before operating your set and retain it for future reference.

⊕ : Depending upon model