

Thank you for purchasing this product. Before using the product, read through the user manual to ensure that you will use the product correctly. Please keep this manual for future reference.

■ Caution

- Follow applicable laws regarding mobile phone and headphone use if using headphones while driving.
- Do not use the product in places where the inability to hear ambient sound presents a serious risk (such as at railroad crossings, train stations, and construction sites).
- To prevent damage to your hearing, do not raise the volume too high. Listening to loud sound for an extended period may cause temporary or permanent hearing loss.
- Discontinue use if skin irritation results from direct contact with the product.
- Do not disassemble, modify or attempt to repair the product to avoid electric shock, malfunction or fire.
- Be careful to avoid pinching yourself between the housing and the arm of product.

■ Notes on use

- To ensure compatibility and correct usage, always consult the user manual of any device before connecting the product to it.
- Audio-Technica will not be liable in any way for any loss of data in the unlikely event that such losses should occur while using the product.
- On public transport systems or in other public places, keep the volume low so as not to disturb other people.
- Minimize the volume on your audio device before connecting the product in order to avoid hearing damage from sudden exposure to excessive volume.
- When using the product in a dry environment, you may feel a tingling sensation in your ears. This is caused by static electricity accumulated on your body, not by product malfunction.
- Do not subject the product to strong impact.
- Do not store the product under direct sunlight, near heating devices or in a hot, humid or dusty place. Do not allow the product to get wet.
- When the product is used for a long time, the product may become discolored due to ultraviolet light (especially direct sunlight) or wear.
- The included cable may become caught or severed if the product is placed in a bag or pocket without adequate protection.
- Connect/disconnect the cable by holding the plug. Pulling directly on the cable can result in a broken wire and the risk of electric shock.
- The earpads and the headband are made using natural leather. Since the leather part is made with a soft material, there may be indentations left if the product is stored with the cable or cord wrapped around it.


■ Care

Get into the habit of regularly cleaning the product to ensure that it will last for a long time. Do not use alcohol, paint thinners or other solvents for cleaning purposes.

- Use a dry cloth to clean the headphones.
- After using the included cable, clean it with a dry cloth if sweat or dirt is present. Failure to clean the cable may cause it to deteriorate and harden over time, resulting in malfunction.
- Wipe the plugs on included cable with a dry cloth if dirty. Using the plug without cleaning it can cause sound skipping or distortion.
- To clean the earpads and headband, wipe with a dry cloth. Earpads and headband may fade if sweat or water dries on them. If the earpads and headband get wet, we recommend wiping them with a dry cloth and allowing them to dry in the shade.
- Wipe off dirt from the leather earpads and the headband with a dry cloth. Do not use a commercial cleaner for leather.
- If sweat or water adheres to the leather earpads and the headband, their color may fade. If this occurs, we recommend wiping them with a dry cloth and allowing them to dry in the shade.

- For long-time storage, keep the product in a well-ventilated place without high temperatures and humidity.
- The earpads deteriorate over time due to use or storage. For information about replacing earpads or other parts, or for information about other serviceable parts, contact your local Audio-Technica dealer.

■ Using the headphones

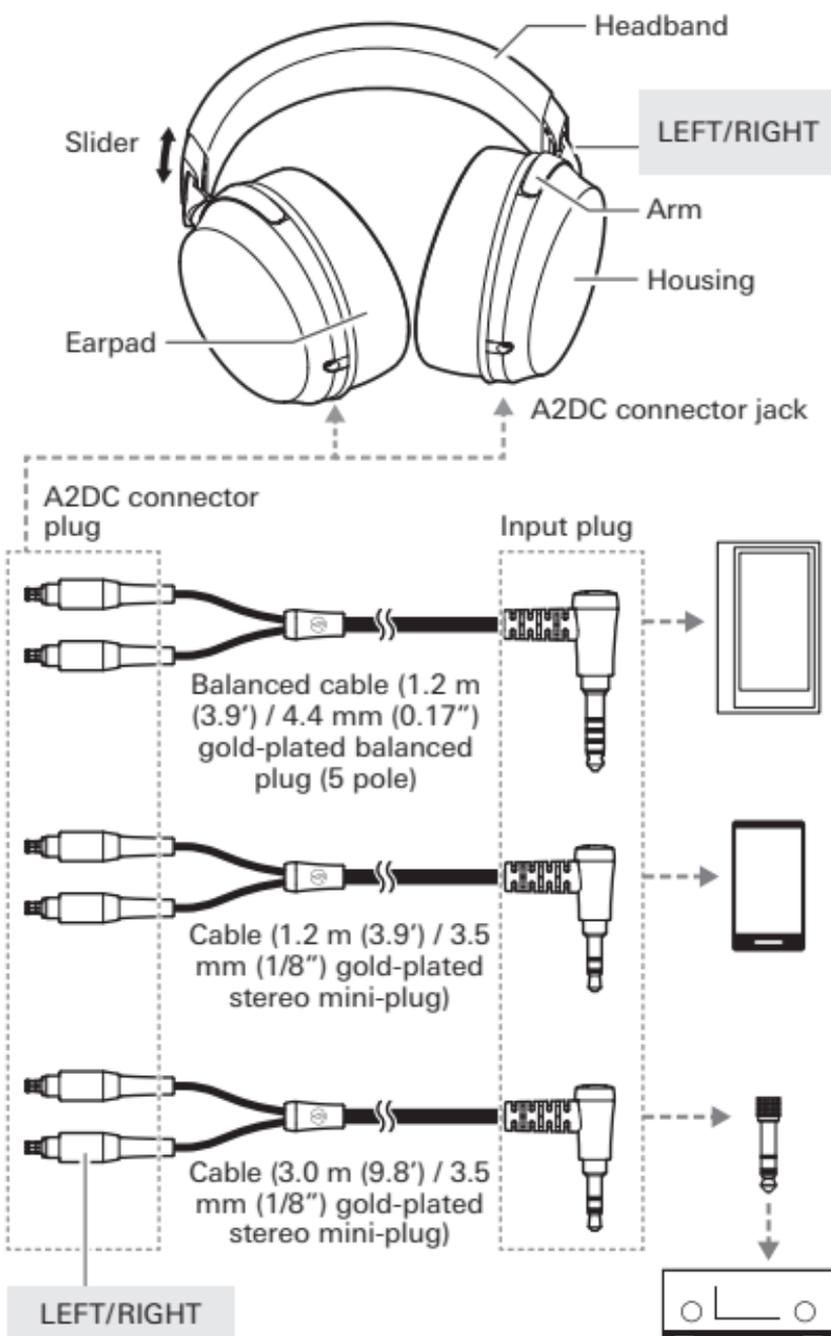

1. Connect the connector plug of the included cable to the connector jack of the headphones.
 - Do not use a cable other than the supplied detachable cable.
2. Lower the volume on the device you intend to use, then connect the "Input plug" to the device's headphone jack.
3. Fit the earpads over your ears with the side marked "L" over your left ear and the side marked "R" over your right ear.

■ How to replace the detachable cable


The detachable connector is very delicate. Only pull or attach in a straight motion to prevent malfunction.

• How to detach the cable

Hold the connector and pull straight out in the direction shown by the arrow.

• How to attach the cable

Plug the left connector or right connector in as shown in the illustration. Please plug the connector in until it clicks.

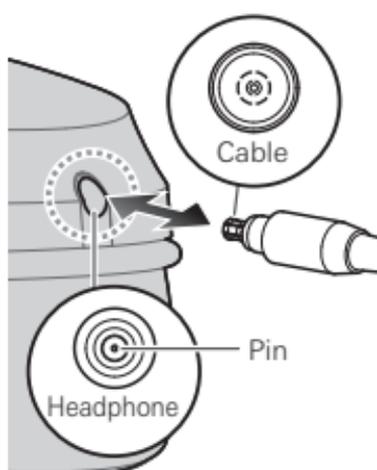

■ Specifications

- Type: Closed-back dynamic •Driver: 53 mm •Sensitivity: 100 dB/mW •Frequency response: 5 to 50,000 Hz •Maximum input power: 2,000 mW •Impedance: 44 ohms •Input jack: A2DC connector jack •Weight (without cable): Approx. 300 g (10.5 oz)
- Included accessories: Cable (1.2 m (3.9') / 3.5 mm (1/8") gold-plated stereomini-plug (L-shaped)), Cable (3.0 m (9.8') / 3.5 mm (1/8") gold-plated stereomini-plug (L-shaped)), Balanced cable (1.2 m (3.9') / 4.4mm (0.17") gold-plated balanced plug (5 pole / L-shaped)), 6.3 mm (1/4") stereo adapter, Case, Cleaning cloth
- Sold separately: Balanced cable, Cable, Earpads

For product improvement, the product is subject to modification without notice.

Nous vous remercions d'avoir choisi ce produit. Avant utilisation, merci de lire attentivement ce manuel pour vous assurer du bon usage du produit. Veuillez conserver ce manuel pour consultation ultérieure.

■ Avertissement

- Respectez les lois en vigueur concernant l'utilisation de téléphones mobiles et casques si vous utilisez le produit en conduisant.
- N'utilisez pas le produit dans des endroits où l'incapacité à entendre les sons ambiants présente un risque grave (tels qu'un passage à niveau, une gare ferroviaire et des chantiers).
- Pour éviter d'endommager votre ouïe, n'augmentez pas trop le volume. L'écoute prolongée de sons forts peut provoquer une perte auditive temporaire ou permanente.
- Cessez d'utiliser le produit en cas d'irritation cutanée découlant d'un contact direct avec celui-ci.
- Ne démontez, ni modifiez ou essayez de réparer le produit pour éviter tout risque d'électrocution, de dysfonctionnement ou d'incendie.
- Prenez garde de ne pas vous pincer entre la coque et le bras du produit.

■ Remarques concernant l'utilisation

- Pour garantir la compatibilité et une utilisation correcte, consultez toujours le mode d'emploi de l'appareil auquel vous connecterez le produit.
- Audio-Technica ne sera en aucun cas tenu responsable des pertes de données dans le cas peu probable de leur survenue pendant l'utilisation du produit.
- Dans les transports publics ou dans d'autres lieux publics, veillez au volume afin de ne pas déranger les autres.
- Baissez le volume sur votre appareil audio avant d'y connecter le produit afin d'éviter d'endommager votre ouïe en raison d'une exposition soudaine à un volume sonore excessif.
- Si vous utilisez le produit dans une atmosphère sèche, vous pouvez ressentir des picotements dans les oreilles. Ceci est dû à l'électricité statique accumulée sur votre corps et non pas à un dysfonctionnement du produit.
- Ne soumettez pas le produit à un choc violent.
- Ne placez pas le produit sous un ensoleillement direct, près d'appareils générant de la chaleur ou dans un endroit chaud, humide ou poussiéreux. Ne mouillez pas le produit.
- Si vous utilisez longtemps le produit, il peut se décolorer en raison de la lumière ultraviolette (particulièrement sous un ensoleillement direct) ou de l'usure.
- Le câble fourni peut se retrouver coincé ou coupé si le produit est placé dans un sac ou une poche sans protection adéquate.
- Branchez ou débranchez le câble en le tenant par sa fiche. Si vous tirez directement sur le câble, vous risquez de rompre un fil électrique et de vous électrocuter.
- Les coussinets des oreillettes et l'arceau sont fabriqués en utilisant du cuir naturel. La partie en cuir étant réalisée dans une matière souple, des marques peuvent être laissées par le câble ou le cordon s'ils sont enroulés autour du produit quand il est rangé.

■ Entretien

Prenez l'habitude de nettoyer régulièrement le produit pour garantir qu'il durera longtemps. N'utilisez pas d'alcool, de diluant à peinture ou d'autres solvants pour le nettoyage.

- Utilisez un chiffon sec pour nettoyer le casque.
- Après avoir utilisé le câble fourni, nettoyez-le avec un chiffon sec en cas de présence de sueur ou de saleté. Si vous ne nettoyez pas le câble, il peut se détériorer et se durcir avec le temps, provoquant un dysfonctionnement.
- Essuyez les fiches du câble fourni avec un chiffon sec si elles sont sales. Si vous utilisez une fiche sans la nettoyer, le son peut être saccadé ou déformé.
- Pour nettoyer les coussinets d'oreille et le serre-tête, essuyez-les avec un chiffon sec. Les coussinets d'oreille et le serre-tête peuvent se décolorer si de la sueur ou de l'eau sèche dessus. Si les coussinets d'oreille et le serre-tête sont mouillés, nous vous recommandons de les essuyer avec un chiffon sec et de les laisser sécher à l'ombre.
- Essuyez la saleté des coussinets des oreillettes en cuir et de l'arceau avec un chiffon sec. N'utilisez pas de produit de nettoyage commercial pour le cuir.
- Si de la sueur ou de l'eau se retrouve au contact des coussinets des oreillettes en cuir, ceux-ci peuvent se décolorer. Si cela se produit, nous conseillons de les essuyer avec un chiffon sec et de les laisser sécher à l'ombre.

- Si vous prévoyez de ranger le produit pendant une période prolongée, conservez-le dans un endroit bien aéré à l'abri de températures ou humidité élevée(s).
- Les coussinets d'oreille se détériorent avec le temps suite à l'utilisation ou au rangement. Pour des informations sur le remplacement des coussinets d'oreille ou d'autres pièces, ou pour en savoir plus sur les pièces réparables, contactez votre revendeur local Audio-Technica.