PHILIPS

Multimedia Speakers
2.1

8000 Series

Bluetooth

MMS8085B



Music, movies & entertainment

With 80W sound output and bluetooth connectivity , these speakers are perfect for playing music, games, movies and online videos on mobiles,MAC and PC. You can also convert it in to a sound bar , on demand!

Enhanced listening experience for different uses

- Total 80W sound output power

Listen with pleasure

- Rich bass
- Lifelike stereo sound to enhance your listening experience

Simplicity

- Compatible with any media
- AUX-in for easy connection to almost any electronic device
- USB Direct for easy MP3 music playback
- I work with MAC and PC
- Works with any compatible stereo Bluetooth device
- Convenient speaker-front volume and power control

8000 Series

Multimedia Speakers 2.1

MMS8085B/94

Highlights

Stereo Bluetooth device

Works with any compatible stereo Bluetooth device

USB Direct for easy MP3 music



Thanks to the complete file transferability, you can easily enjoy the convenience and fun of accessing more digital music via the built-in USB Direct.

AUX-in for easy connection

AUX-in for easy connection to almost any electronic device

Compatible with any media

Compatible with any media

I work with MAC and PC

I work with MAC and PC

Rich bass

This Philips PC speaker provides good sound quality with a rich bass experience from a loudspeaker box system.

Stereo sound

Lifelike stereo sound to enhance your listening experience

Speaker-front control

Convenient speaker-front volume and power control

Specifications

Loudspeakers

Subwoofer driver: 6.5"
Speaker driver: 3"

Connectivity

Bluetooth range: Line of sight, 10M or 30FT
USB

Tuner/Reception/Transmission

Tuner bands: FM

Compatibility

Works with: most Bluetooth smartphones

Accessories

Included accessories: Remote Control with QWERTY, User Manual, Warranty Card, 2 RCA to stereo-1 no. cable
Included accessories: 2N Stand

Dimensions

Satellite: W90*H165*D78
Subwoofer: W170*H312*D335
Packaging dimensions (WxDxH): 415 * 280 *558

Audio system

Output power in total: 80W
Speaker output power: 2 x 18 W
Subwoofer output power: 45 W

© 2025 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice. Trademarks are the property of Koninklijke Philips N.V. or their respective owners.

Issue date 2025-09-01
Version: 6.6.1

EAN: 48 95185 65220 7

www.philips.com

PHILIPS

2.1 Speakers

MMS8085B



User manual

Register your product and get support at
www.philips.com/welcome

General information

Safety instructions
Please read carefully the safety mark on the back side



This mark is intended to alert the user from the non isolated dangerous voltage within the product that may be of sufficient magnitude to constitute a risk of electric shock to persons.



This mark is intented to alert the user for important operating and servicing instruction.

Warnings

- Avoid sustained periods on high-volume use, and do not turn the volume to maximum level while using high output signal, such as Mobile Phone or DVD, etc., as this will cause distortion and may damage the loudspeaker cones.
- Please switch off the system from the wall socket, when not in use.
- Do not open the cover or back panel to avoid electrical shock or any other accidents. No user-serviceable parts are inside.
- Only for indoor use.
- Plug the system to the AC outlet with the right voltage marked on the back panel of the Subwoofer.
- The MAINS plug is used as the disconnect device, the disconnect device shall remain readily operable.
- The product shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the product.
- Batteries shall not be exposed to excessive heat such as sunshine, fire or the like.
- Attention should be drawn to the environmental aspects of battery disposal.

Care and safety information
Avoid high temperatures, moisture, water and dust

- Apparatus should not be exposed to dripping or splashing of liquid.
- Do not place any source of danger on the Subwoofer, and satellite (e.g. liquid filled objects lighted candles).
- Do not install near heat sources.

Do not block any ventilation opening

- Place the apparatus in a location with adequate ventilation to prevent internal heat build up. Allow at least 100cm (4 inches) of free space all around the apparatus for adequate ventilation.
- At high volume the back cover of Subwoofer becomes hot. Do not touch it.

Care of the cabinet


- Use a soft cloth slightly moistened to clean the cabinet. Do not use a solution containing alcohol, spirits, ammonia or abrasives.

Accessories


Item	3.5mm stereo cable to 2RCA	Remote control	User manual	FM Antenna cable	Speaker Stand
Quantity	1	1	1	1	2

Connections

Subwoofer back panel

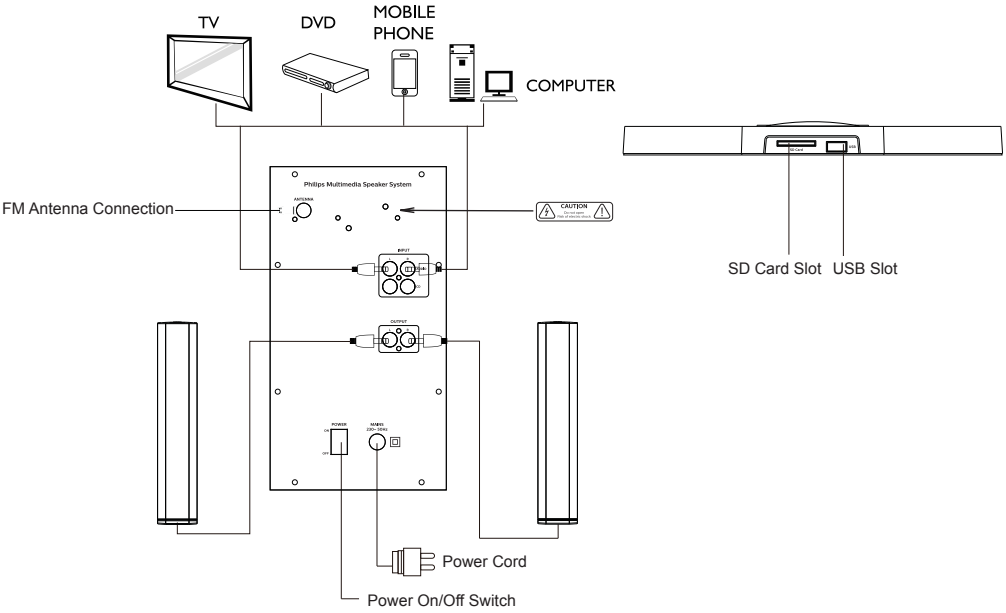

Top & Back panel operation

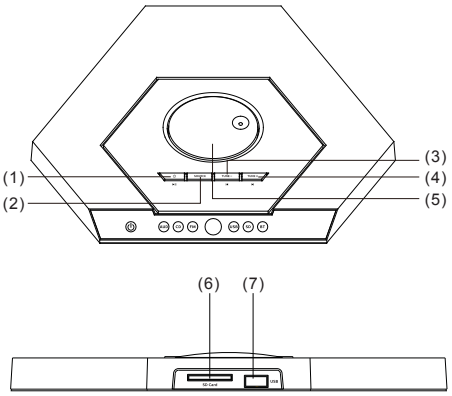

1. ⏻ ⏯
2. SOURCE
3. TUNE- ⏮
4. TUNE+ ⏭
5. VOLUME+/-
6. SD Slot
7. USB Slot

* AVAILABLE IF CONNECTED

1. ⏻ ⏯ :

   Press to turn on speaker,long press into stand-by.

   PLAY/PAUSE on the USB*/SD*/ BT mode.

2. SOURCE :

   Change the input mode-Audio, CD, FM, USB*, SD* and Bluetooth.

3. TUNE- ⏮ :

   Press once to reduce the FM frequency 0.1M,

   long press to the semi-automatic search for radio.

   In USB*/SD*/ BT mode, press " ⏮ " play previous song.

4. TUNE+ ⏭ :


   Press once to increase the FM frequency 0.1M,

   long press to the semi-automatic search for radio.

   In USB*/SD*/ BT mode, press " ⏭ " play next song.

5. Rotate the knob clockwise to increase volume anti-clockwise to decrease volume.
6. SD* Slot:
   Press the SOURCE key to go to SD* MODE.
7. USB* Slot:
   Press the SOURCE key to go to USB* MODE.

Remote controls

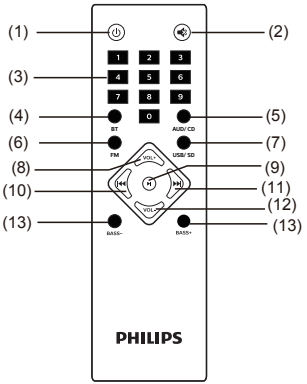


1. ⏻
2.MUTE
3.0~9
4.BT
5.AUD/ CD
6.FM
7.USB/ SD
8. VOL+
9. ⏯
10. ⏮
11. ⏭
12.VOL-
13.BASS+/-

* AVAILABLE IF CONNECTED

1. ⏻ ----- Turn on/Stand-by the speaker.
2. MUTE ------ Press “MUTE ” to activate or deactivate mute.
3. 0~9 ----- Numeric keys, with the help of these keys you select song or track in USB, and in FM, you can key in station frequency, i.e. for 927 key in 92.7.
4. BT------ Press “BT” to enter Bluetooth mode.
5. AUD/ CD ----- Press “AUD/ CD” to enter Audio in mode, press again to enter CD mode.
6. FM ----- Press “FM” to enter FM mode.
7. USB/SD ----- Press “USB/SD” to enter USB*/SD* mode, insert USB* to go for USB mode, while insert SD* card to go for SD* mode.
8. VOL+ ----- Volume up.
9. ⏯ ----- Plays/pauses songs alternately in FM mode, long press“⏯”, it will enter into automatic search channel and automatic save channel.
10. ⏮ ----- Play the previous song by pressing “⏮” in USB* mode. Choose previous channel by pressing “⏮” in FM mode.
11. ⏭ ----- Play the next song by pressing “⏭” in USB* mode. Choose next channel by pressing “⏭” in FM mode.
12. VOL- ----- Volume down.
13. BASS-/+ ----- To decrease/ increase the bass.

Manual storage: press frequency like 91.1, the system will check if station is available, suppose it is, then the system will judge whether it had been stored or not,
if yes, it will start to play automatically,
if no, the system will store the station first, with station number after last station number from auto search, and start to play.

Playing the speakers and subwoofer

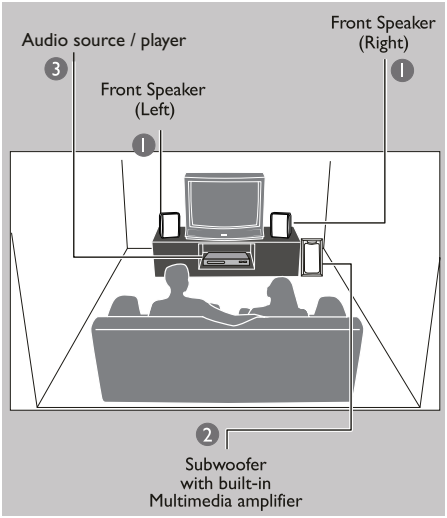

System positioning :

The subwoofer is recommended to be put on the floor to get a better acoustic effect.

For best possible surround sound, all the speakers (except subwoofer) should be placed at the same distance from the listening position.

Place the front left and right speakers at equal distances from the TV and at an angle of approximately 45 degrees (horizontal) from the listening position.

Helpful Hint:
- To avoid magnetic interference, do not position the speakers, too close to your TV.

Bluetooth Operating Instruction

1. Press SOURCE key from front panel or remote to go to Bluetooth.
2. When selected the Bluetooth mode, the blue LED will start blinking quickly and hear an audio tone which indicate in Bluetooth pairing mode.
3. For pairing with mobile phone or other Bluetooth devices, search the device named “MMS8085B” and pair it. Once paired, Blue LED will become solid blue and an audio tone will come up.
4. While playing song in BT mode, the blue LED starts blinking slowly.
5. Press and hold “ ⏯ ” for continuous 3 seconds from remote in order to force disconnect the Bluetooth.

Note: While using Bluetooth, if external call comes, then speaker system goes in mute mode in order to protect privacy of mobile phone user. Operation resumes once the call is disconnected.

Troubleshooting

Warning -

Under no circumstances should you try to repair the system yourself, as this will invalidate the warranty. Do not open the system as there is a risk of electric shock. If a fault occurs, first check the points listed below before taking the system for repair. If you are unable to remedy the problem by following hints mentioned in below table, Consult your dealer or PHILIPS APSC for help.

Problem	Solution
1. No power.	Check if the AC power cord is properly inserted into the AC mains socket.
2. No sound or distorted sound.	Adjust the volume / select the correct source to choose the equipment that you want to hear through the system.
3. The remote control does not function properly.	Reduce the distance between the remote control and the system. Replace the batteries with new ones / Point the remote control directly towards the IR sensor (located on front panel of the subwoofer) / Check that the batteries are loaded correctly / Switch off the system for 30 seconds and then restart.
4. Low hum or buzz sound.	Place the product as far away as possible from electrical devices that may be causing interference / Check power supply voltage and consult electrician.
5. The content of the USB / SD flash drive cannot be read.	The USB / SD flash drive format is not compatible with the system. Drive is formatted with a different file system which is not supported by this unit (e.g. NTFS).
6. Slow operation of the USB / SD flash drive / cannot detect USB / SD flash drive.	Big memory size USB / SD flash drive will take longer time to read and play. / Take out USB / SD drive and insert it again properly.
7. FM not properly tuned.	Match with local frequency.
8. FM reception not good.	While listening radio turn off TV / DVD or other radiation source.
9. BT not working.	Reduce the distance or device is not paired.

In case these measures do not work contact the nearest PHILIPS service center or call at customer care numbers.

Warranty

This Philips 2.1 multimedia speakers system is warranted against any defect due to defective materials or workmanship for 12 months from the date of purchase, should a defect develop during the period of warranty, **Gibson Innovations India Private Limited** undertake to repair the apparatus FREE OF CHARGE through the dealer from whom it has been purchased or at any of the Philips Authorised Service Centres.

The warranty is not valid in case :

1. Proof of purchase is not accompanied with this warranty card.
2. The warranty card is not completed immediately after purchase.
3. The apparatus is not used according to this manual.
4. Defects are caused by improper or reckless use.
5. Any repairs are done by persons other than Philips Authorised service centre.
6. Any modifications or alteration of any nature are made in the apparatus.
7. The serial number is tampered with.
8. Defects due to causes beyond control like lightning, abnormal voltage, acts of God or while in transit to the purchaser's residence.

All consumables and parts susceptible to normal wear and tear are not covered under warranty.

Week/S.No.: _____ Bill No. _____

Date of purchase _____

Dealer's name: _____

Dealers stamp: _____

Customer's name and address: _____

Model No.: _____

Dealer's signature: _____

Gibson Innovations India Private Limited 4th Floor, Block-1, Vatika Business Park, Sector 49, Sohna Road, Gurgaon-122018, Haryana, India

Product specifications*

Total system power	80W RMS
Satellite speaker power	17.5Wx2 RMS
Subwoofer power	45W RMS
Separation	>40 dB
SNR	>60 dB
Audio input socket	RCA
Audio output socket	RCA
Power consumption	80W
Subwoofer speaker	1 Way
Driver size	6.5 inches
Impedance	8 Ohm
Frequency range	20Hz - 4KHz
Dimension (mm) W x H x D	266 x 515 x 230
Weight	5.47 kgs

Satellite speaker	1 Way, 2 Speakers
Driver size	3 inches
Impedance	4 Ohm
Frequency range	120Hz - 20KHz
Dimension (mm) W x H x D	100 x 519 x 110
Weight	1.64 kgs
BT version	V3.0
BT range	Up to 10 meter
USB class support	UMS (USB mass storage class)
USB capacity	Up to 16GB
USB playability	MP3 format file

*Specification subject to change without prior notice. Measured under specific conditions.

The Philips trademark and Philips shield emblem are registered trademarks of koninklijke Philips N.V. used under license.
This product has been manufactured by and sold under the responsibility of Gibson Innovation India Private Ltd. and Gibson Innovations India private Ltd. is the warrantor in relation to this product.

Question? Contact Philips

Always there to help you
Visit us at **www.india.philips.com**
Contact at: 1860 180 1111, 1800 102 2929
Or customercare.india@philips.com

PHILIPS

2.1 Speakers

MMS8085B



User manual

General information

Safety instructions
Please read carefully the safety mark on the back side

This mark is intended to alert the user from the non isolated dangerous voltage within the product that may be of sufficient magnitude to constitute a risk of electric shock to persons.

This mark is intended to alert the user for important operating and servicing instruction.

Warnings
- Avoid sustained periods on high-volume use, and do not turn the volume to maximum level while using high output signal, such as Mobile Phone or DVD, etc., as this will cause distortion and may damage the loudspeaker cones.
- Please switch off the system from the wall socket, when not in use.
- Do not open the cover or back panel to avoid electrical shock or any other accidents. No user-serviceable parts are inside.
- Only for indoor use.
- Plug the system to the AC outlet with the right voltage marked on the back panel of the Subwoofer.
- The MAINS plug is used as the disconnect device, the disconnect device shall remain readily operable.
- The product shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the product.
- Batteries shall not be exposed to excessive heat such as sunshine, fire or the like.
- Attention should be drawn to the environmental aspects of battery disposal.

Care and safety information
Avoid high temperatures, moisture, water and dust
- Apparatus should not be exposed to dripping or splashing of liquid.
- Do not place any source of danger on the Subwoofer, and satellite (e.g. liquid filled objects lighted candles).
- Do not install near heat sources.

Do not block any ventilation opening
- Place the apparatus in a location with adequate ventilation to prevent internal heat build up. Allow at least 10cm (4 inches) of free space all around the apparatus for adequate ventilation.
- At high volume the back cover of Subwoofer becomes hot. Do not touch it.


Care of the cabinet
- Use a soft cloth slightly moistened to clean the cabinet. Do not use a solution containing alcohol, spirits, ammonia or abrasives.

Accessories


Item	3.5mm stereo cable to 2RCA	Remote control	User manual	FM Antenna cable	Speaker Stand
Quantity	1	1	1	1	2

Connections

Subwoofer back panel

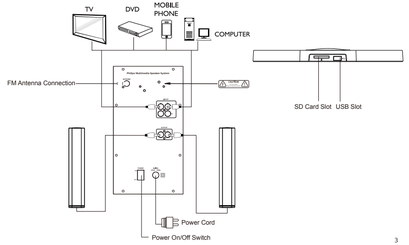

Top & Back panel operation

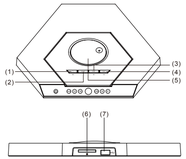


1. ⏻ / ⏯ :
Press to turn on speaker,long press into stand-by.
PLAY/PAUSE on the USB*/SD*/BT mode.
2. SOURCE :
Change the input mode–Audio, CD, FM, USB*, SD* and Bluetooth.
3. TUNE– :
⏮
Press once to reduce the FM frequency 0.1M,
long press to the semi-automatic search for radio.
In USB*/SD*/BT mode, press " ⏮ " play previous song.
4. TUNE+ :
⏯
Press once to increase the FM frequency 0.1M,
long press to the semi-automatic search for radio.
In USB*/SD*/BT mode, press " ⏯ " play next song.
5. Rotate the knob clockwise to increase volume anti-clockwise to decrease volume.
6. SD* Slot:
Press the SOURCE key to go to SD* MODE.
7. USB* Slot:
Press the SOURCE key to go to USB* MODE.

1. ⏻ / ⏯
2. SOURCE
3. TUNE– ⏮
4. TUNE+ ⏯
5. VOLUME+/-
6. SD Slot
7. USB Slot

* AVAILABLE IF CONNECTED

Remote controls

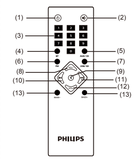

1. ⏻ ------ Turn on/Stand-by the speaker.
2. MUTE ------ Press "MUTE " to activate or deactivate mute.
3. 0–9 ------ Numeric keys, with the help of these keys you select song or track in USB, and in FM, you can key in station frequency, i.e. for 92.7 key in 927.
4. BT------ Press "BT" to enter Bluetooth mode.
5. AUD/ CD ------ Press "AUD/ CD" to enter Audio in mode, press again to enter CD mode.
6. FM ------ Press "FM" to enter FM mode.
7. USB/SD ------ Press "USB/SD" to enter USB*/SD* mode, insert USB* to go for USB mode, while insert SD* card to go for SD* mode.
8. VOL+ ------ Volume up.
9. ⏯ ------ Plays/pauses songs alternately in FM mode, long press"⏯", it will enter into automatic search channel and automatic save channel.
10. ⏮ ------ Play the previous song by pressing "⏮" in USB* mode. Choose previous channel by pressing " ⏮ " in FM mode.
11. ⏭ ------ Play the next song by pressing "⏭" in USB* mode. Choose next channel by pressing " ⏭ " in FM mode.
12. VOL- ------ Volume down.
13. BASS-/+ ------ To decrease/ increase the bass.

Manual storage: press frequency like 91.1, the system will check if station is available, suppose it is, then the system will judge whether it had been stored or not,
if yes, it will start to play automatically,
if no, the system will store the station first, with station number after last station number from auto search, and start to play.


1. ⏻
2. MUTE
3. 0–9
4. BT
5. AUD/ CD
6. FM
7. USB/ SD
8. VOL+
9. ⏯
10. ⏮
11. ⏭
12. VOL-
13. BASS+/-

* AVAILABLE IF CONNECTED

Register you product and get support at
www.philips.com/welcome

Philips and the Philips Shield Emblem are registered trademarks of Koninklijke Philips N.V. and are used under license.
This product has been manufactured by and is sold under the responsibility of MMD Hong Kong Holding Limited
or one of its affiliates, and MMD Hong Kong Holding Limited is the warrantor in relation to this product.

Playing the speakers and subwoofer

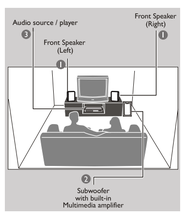

System positioning :

The subwoofer is recommended to be put on the floor to get a better acoustic effect.

For best possible surround sound, all the speakers (except subwoofer) should be placed at the same distance from the listening position.

Place the front left and right speakers at equal distances from the TV and at an angle of approximately 45 degrees (horizontal) from the listening position.

Helpful Hint:
- To avoid magnetic interference, do not position the speakers, too close to your TV.

Bluetooth Operating Instruction

1. Press SOURCE key from front panel or remote to go to Bluetooth.
2. When selected the Bluetooth mode, the blue LED will start blinking quickly and hear an audio tone which indicate in Bluetooth pairing mode.
3. For pairing with mobile phone or other Bluetooth devices, search the device named "MMS8085B" and pair it. Once paired, Blue LED will become solid blue and an audio tone will come up.
4. While playing song in BT mode, the blue LED starts blinking slowly.
5. Press and hold " ⏯ " for continuous 3 seconds from remote in order to force disconnect the Bluetooth.

Note: While using Bluetooth, if external call comes, then speaker system goes in mute mode in order to protect privacy of mobile phone user. Operation resumes once the call is disconnected.

Troubleshooting

Warning -

Under no circumstances should you try to repair the system yourself, as this will invalidate the warranty. Do not open the system as there is a risk of electric shock. If a fault occurs, first check the points listed below before taking the system for repair. If you are unable to remedy the problem by following hints mentioned in below table.

Problem	Solution
1. No power.	Check if the AC power cord is properly inserted into the AC mains socket.
2. No sound or distorted sound.	Adjust the volume / select the correct source to choose the equipment that you want to hear through the system.
3. The remote control does not function properly.	Reduce the distance between the remote control and the system. Replace the batteries with new ones / Point the remote control directly towards the IR sensor (located on front panel of the subwoofer) / Check that the batteries are loaded correctly / Switch off the system for 30 seconds and then restart.
4. Low hum or buzz sound.	Place the product as far away as possible from electrical devices that may be causing interference / Check power supply voltage and consult electrician.
5. The content of the USB / SD flash drive cannot be read.	The USB / SD flash drive format is not compatible with the system. Drive is formatted with a different file system which is not supported by this unit (e.g. NTFS).
6. Slow operation of the USB / SD flash drive / cannot detect USB / SD flash drive.	Big memory size USB / SD flash drive will take longer time to read and play. / Take out USB / SD drive and insert it again properly.
7. FM not properly tuned.	Match with local frequency.
8. FM reception not good.	While listening radio turn off TV / DVD or other radiation source.
9. BT not working.	Reduce the distance or device is not paired.

Warranty

This Philips 2.1 Multimedia Speaker System is warranted against any defect due to defective materials or workmanship for 12 months from the date of purchase, should a defect develop during the warranty, **TPV Technology India Pvt. Ltd.**, affiliate of MMD Hong Kong Holding Limited. undertake to repair the apparatus FREE OF CHARGE at any of its Authorized Service Center in India.

The warranty is not valid in case :

1. Proof of purchase is not accompanied with this warranty card.
2. The warranty card is not completed immediately after purchase.
3. The apparatus is not used according to this user manual.
4. Defects are caused due to improper or reckless use.
5. Any repairs are done by unauthorized personnel.
6. The serial number is tampered with.
7. Defects due to causes beyond control like lightning, abnormal voltage, acts of God or while in transit to the purchaser's residence.

All Consumables and parts susceptible to normal wear and tear are not covered under this warranty.

Model No. _____ Product Sl. No _____

Invoice Number _____ Date of Purchase: ___/___/___

Customer's Name and address: _____

_____ PIN: [ ][ ][ ][ ][ ][ ]

Always there to help you!
Visit us at www.support.philips.com
Helpline: 1800 425 6396
Email: india.callcentre@tpv-tech.com
(10 a.m. to 9 p.m. Mondays to Saturdays & 10 a.m. to 6 p.m. on Sundays)

Dealer Name & Stamp:

Product specifications*

Total system power	80W RMS
Satellite speaker power	17.5Wx2 RMS
Subwoofer power	45W RMS
Separation	>40 dB
SNR	>60 dB
Audio input socket	RCA
Audio output socket	RCA
Power consumption	80W
Subwoofer speaker	1 Way
Driver size	6.5 inches
Impedance	8 Ohm
Frequency range	20Hz - 4KHz
Dimension (mm) W x H x D	266 x 515 x 230
Weight	5.47 kgs

Satellite speaker	1 Way, 2 Speakers
Driver size	3 inches
Impedance	4 Ohm
Frequency range	120Hz - 20KHz
Dimension (mm) W x H x D	100 x 519 x 110
Weight	1.64 kgs
BT version	V3.0
BT range	Up to 10 meter
USB class support	UMS (USB mass storage class)
USB capacity	Up to 16GB
USB playability	MP3 format file

*Specification subject to change without prior notice.
Measured under specific conditions.

总尺寸：660x173mm
工艺：风琴折
成品尺寸：110x86.5mm

成品正面：



成品背面：

